

# Basic Manual



W32H  
by HITACHI

CDMA 1X  
**WIN**

**au** by KDDI

Contents/Ready

Phone

Address Book /  
Pair Function

Mail

Camera

EZweb

EZ Navi

EZ · FM

EZ FeliCa

PC site viewer

Teens Mode

Smart Mode

Inputting  
Characters

Other Functions

Troubleshooting/  
Remote Auto Lock

Index

## Introduction

Thank you for purchasing the W32H.

Before using it for the first time, be sure to read the W32H Basic Manual (this PDF manual) so you know how to use it correctly. After you finish reading this manual, store it and the printed materials that come with the phone in a safe place for future reference.

### Printed Manuals for the W32H (Japanese)

The W32H comes with a Basic Manual and an Instruction Manual.

#### For information about basic operation



#### W32H Basic Manual

Equivalent to this English PDF manual.

#### For detailed information about each function



#### W32H Instruction Manual

English version not available.

The following information is also available on the au website.

- To download the Basic Manual or Instruction Manual (<http://au-pro.kddi.com/phone/torisetu/index.html>)
- To access a keyword searchable au online manual (<http://www.au.kddi.com/manual/index.html>)

You can also access the au online manual using EZweb.

#### EZweb Access

EZトップメニュー(EZ Top Menu)

→料金・申込・インフォ (Charges, Applications, and Info)

→auオンラインマニュアル(au Online Manual)

You can also read the barcode (QR code) shown here and use it to access the au Online Manual. ▶



### Info

The typeface, fonts, and colors of the text on the example screens in this manual may differ from the screens that actually appear on the display of the phone. Also, certain icons and the scroll bars are not included on sample screens.

# Cellphone Etiquette

## Mind your manners!

A cellphone always emits weak radio waves while it is turned on. Enjoy operation of your cellphone without forgetting to be considerate of those around you.

### Some locations do not allow the use of cellphones.

- Using a cellphone while driving is both dangerous and prohibited by Japanese law.
- Using a cellphone inside of an aircraft is prohibited by law. Be sure to turn off your cellphone before takeoff.



### Watch out where you use your cellphone, and keep your voice down.

- Do not make calls from cinemas, theaters, museums, libraries, or other similar locations. Turn off the cellphone or use Manner Mode to ensure that the ring tone does not disturb others.
- When in public, move to a location where you will not be blocking traffic.
- On the Shinkansen, in a hotel lobby, or in other similar locations, move to a location where you will not disturb others.
- Take care to avoid talking on the phone in a loud voice.
- Before taking the picture of others, be sure to obtain their permission first.



### Cellphone radio waves may interfere with electrical medical equipment.

- On a train or in other crowded locations, there is always the possibility that someone nearby may be wearing a pacemaker. Turn off your cellphone when you are in a crowded area.
- Follow the rules of hospitals and other medical facilities concerning the use or possession of cellphones.



# Cellphone Basics

## Features

### Camera

Shoot photos and record movies, and send them by e-mail.



▶ Page 54

### EZ Navi

EZ Navi Walk, Position Search, and Area Message are all built-in.




▶ Page 74

### EZ FeliCa

Use the cellphone for shopping by using e-money, or use it as member's cards, point cards, and so on.

▶ Page 82

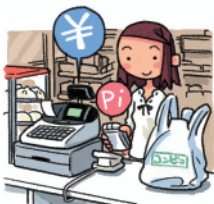

### PC site viewer

View WEB sites created for viewing with PCs.

▶ Page 86

### PC document viewer

Display Word files, Excel files or PDF files, and so on.

### Hot Key

Select either "Hot Dial" or "Hot Buzzer" as the Hot Key function.

▶ Page 110



### Mail

Send mail messages to other cellphones or to PCs.

▶ Page 44



### EZweb

Download "Chaku-Uta®", wallpaper, and other data.

▶ Page 66

 


# Manner Mode and Easy Voice Memo

## Manner Mode

Use Manner Mode to turn off the ring tone so you do not bother others around you.




While the standby screen is displayed, hold down  for about one second.

▶ Page 33

## Easy Voice Memo

If you cannot answer a call, Easy Voice Memo plays an answering message and records the caller's message.



While the standby screen is displayed, hold down  for about one second.

 
▶ Page 34

# Checking Power, Signal Strength, and Battery Level

## Normally leave the phone turned on.



The phone needs to be turned on to make and receive calls.


Hold down  for at least 1.5 seconds to turn on the phone.

▶ Page 14

## You cannot talk on the phone if it is unable to receive a signal.




Signal strength is low in some areas, even if they are within the service area.

 indicates the current signal strength. ▶ Page 14

## Keep an eye on the battery level.




The phone may not function properly if battery power is low.


 indicates the current battery level. ▶ Page 14

# Never use your cellphone while driving!

Holding a cellphone in your hand, talking on a cellphone, or looking at a cellphone display to send mail or to perform any other operation while driving is prohibited by Japanese law. (Revised Traffic Control Law, effective November 1, 2004)

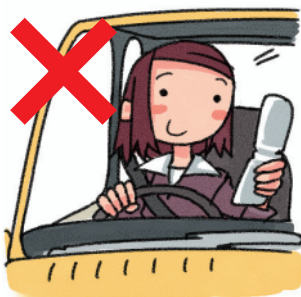

 × Reading mail or looking at the display.

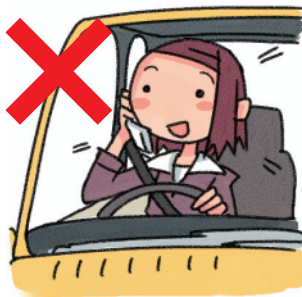




× Holding a cellphone in your hand to talk.

## Turn off your cellphone or enter Drive Mode while driving.
 
### Drive Mode

In Drive Mode, the phone will play the message “ただいま車を運転しています。…” (I am driving right now...), and then ask the caller to leave a message using Easy Voice Memo.

While the standby screen is on the display, press , and then press  (ON). Next, press  (Drive Mode) to enter Drive Mode.



# Beware of spam and one-ring calls!

## How to Combat Spam

You can set up mail filters to block specific mail or mail identified as “未承諾広告※” (unsolicited advertisement), which often includes a lot of spam.

Your cellphone has the following filters for blocking spam.


- ・未承諾広告フィルター  
(unsolicited advertisement filter)
- ・アドレスフィルター (address filters)
  - －指定拒否設定 (blocks specific mail)
  - －指定受信設定 (receives specific mail)

▶ Page 51




## Beware of one-ring calls!

A “one-ring call” (wan-giri in Japanese) rings your phone only once, in an attempt to make you call back to a service that automatically bills you very high charges.

The  icon at the head of an incoming record indicates that the call rang for only four seconds or less.

This indicates a possible “one-ring call.”

▶ Page 29

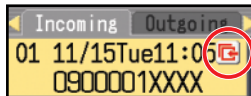

# Disaster Message Board Service

## Disaster Message Board

The Disaster Message Board lets you use EZweb to register information about your well-being in case of a major disaster. The information you register can be accessed from anywhere in Japan over EZweb or the Internet.

### Registering the safety information

- ◆ When a major disaster strikes, you can use your au cellphone to access the “災害用伝言板” (Disaster Message Board) on EZweb and register your current condition, comments, and other information about your well-being.
- ◆ After you register information, it can be sent by mail to family, friends, and other individuals you have registered as a recipient of your Disaster Message Board information.

### Checking the safety information

- ◆ Disaster Message Board information can be accessed by inputting the phone number of an individual over EZweb or the Internet.\*
  - ※ Disaster Message Board information can be accessed from another type of cellphone (excluding TU-KA), PHS, or PC at <http://dengon.ezweb.ne.jp/>.


### Access method

☰ EZ >>> Top Menu >>> 災害用伝言板  
(Disaster Message Board)

<http://dengon.ezweb.ne.jp/>





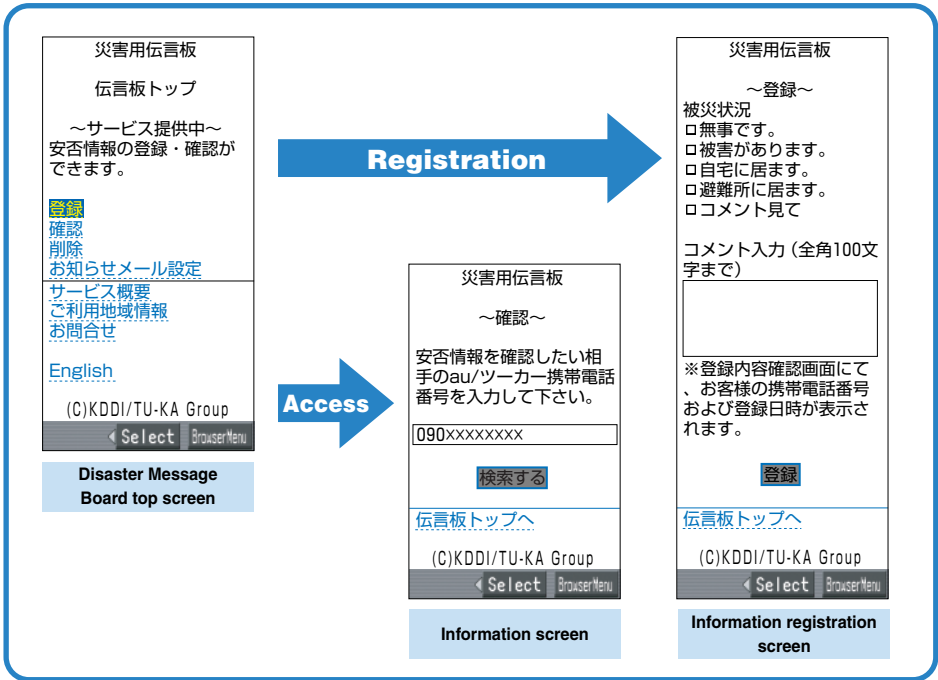

※ Registration contents are retained for up to 72 hours.

※ You can register up to 10 entries per phone number. Registering a new entry while there are already 10 registered overwrites the oldest current entry with the new one.

※ You can view a Disaster Message Board demonstration at:

☰ → Top Menu → 料金・申込・インフォ → 災害用伝言板 (デモ版)

(Charges, Applications, and Info) (Disaster Message Board (Demo))

※ To view the Disaster Message Board in English, select the "English" option on the Disaster Message Board top screen.

# Contents

<b>Cellphone Etiquette .....</b>	<b>1</b>
Mind your manners! .....	1
<b>Cellphone Basics .....</b>	<b>2</b>
Features .....	2
Manner Mode and Easy Voice Memo .....	3
Checking Power, Signal Strength, and Battery Level .....	3
Never use your cellphone while driving! .....	4
Turn off your cellphone or enter Drive Mode while driving. ....	4
Beware of spam and one-ring calls! .....	5
Disaster Message Board Service .....	6
<b>Contents .....</b>	<b>8</b>
<b>Ready .....</b>	<b>10</b>
Checking the contents of the package .....	10
Names of Parts .....	11
Charging the Battery Pack .....	12
Turning On Power .....	14
Turning Off Power .....	14
Initial Settings .....	15
Selecting English as the Display Language .....	15
Operation Basics .....	16
Display Indicators .....	17
Main Menu .....	18
Initializing E-mail and EZweb .....	20
Looking Up Your Current Phone Number and E-mail Address .....	21
Changing Your E-mail Address .....	22
Changing the Display Character Size .....	24
Personal Identification Numbers and Passwords .....	25
<b>Phone .....</b>	<b>26</b>
Making a Call .....	26
Answering a Call .....	27
Redialing (Outgoing Records/Incoming Records) .....	28
One-ring Calls .....	29
Changing the Ring Tone .....	30
Adjusting the Ring Tone Volume .....	32
Adjusting the Earpiece Volume during a Call .....	33
Turning On Manner Mode .....	33
Turning On Easy Voice Memo .....	34
Playing an Easy Voice Memo .....	35
<b>Address Book .....</b>	<b>36</b>
Registering an Address Book .....	36
Editing an Address Book Record .....	38
Adding Outgoing or Incoming Record Data to the Address Book .....	40
Dialing from the Address Book .....	41
<b>Pair Function .....</b>	<b>42</b>
Registering a Pair Partner .....	42
Making a Phone Call or Sending Mail to a Pair Partner .....	43
<b>Mail .....</b>	<b>44</b>
Using E-mail .....	44
Using C-mail .....	45
About C-mail safe block function .....	45
Creating and Sending E-mail Messages .....	46
Reading Received E-mail Messages .....	48
Reading an E-mail Message with an Attached Photo or Movie .....	49
Replying to a Received E-mail Message .....	50
Avoiding Spam .....	51
Creating and Sending C-mail Messages .....	52

Reading Received C-mail Messages .....	53
<b>Camera Features .....</b>	<b>54</b>
<b>Camera .....</b>	<b>56</b>
Shooting a Photo .....	56
Viewing Photos .....	58
Recording a Movie .....	60
Viewing Movies .....	62
Attaching a Photo or Movie to an E-mail Message .....	64
Using Photo Mail .....	65
<b>EZweb .....</b>	<b>66</b>
Using EZweb .....	66
Displaying the EZ Top Menu .....	67
Bookmarking Sites You Frequently Access .....	68
Viewing a Bookmarked Site .....	69
Downloading Chaku-Uta® .....	70
Downloading Chaku-Uta-Full™ .....	71
Checking Charges .....	72
EZ Channel .....	73
<b>EZ Navi Features .....</b>	<b>74</b>
<b>Security Navi Features .....</b>	<b>76</b>
<b>EZ·FM .....</b>	<b>78</b>
Before using EZ·FM .....	78
Listening to the EZ·FM .....	79
Suspending/Stopping the EZ·FM .....	81
<b>EZ FeliCa .....</b>	<b>82</b>
Communicating with reader/writer .....	83
Setting FeliCa lock .....	84
Using FeliCa-supported EZ apps .....	85
<b>PC site viewer Features .....</b>	<b>86</b>
<b>PC site viewer .....</b>	<b>87</b>
Mastering Operation Basics .....	87
Using Standby Assignment .....	88
<b>Teens Mode .....</b>	<b>90</b>
Using Teens Mode .....	90
Turning on Teens Mode .....	91
<b>Smart Mode .....</b>	<b>92</b>
Entering Smart Mode .....	92
Exiting Smart Mode .....	93
Using the Smart Mode Main Menu .....	94
Adding Data to the Address Book in Smart Mode .....	96
Using the Address Book in Smart Mode .....	99
Creating and Sending E-mail Messages in Smart Mode .....	100
Shooting a Photo in Smart Mode .....	103
Viewing Photos in Smart Mode .....	104
<b>Inputting Characters .....</b>	<b>106</b>
Inputting an E-mail Address .....	107
Inputting Pictographs and Useful Sentences .....	108
<b>Other Functions .....</b>	<b>110</b>
Hot Key Features .....	110
Extension Mode .....	111
<b>Troubleshooting .....</b>	<b>113</b>
If you lose your W32H .....	114
<b>Index .....</b>	<b>116</b>

 
# Ready

Before using the W32H for the first check the contents of the package it comes in. You should also familiarize yourself with basic operations, like how to charge the battery, how to turn on power, etc.




## Checking the contents of the package

● W32H

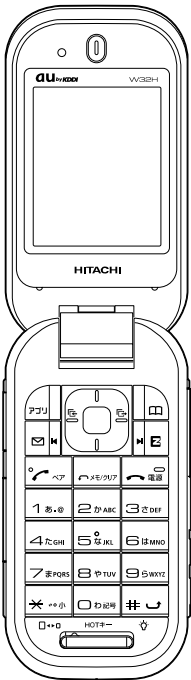

● Battery pack (32HIUAA)

 

● Desktop holder (32HIPUA)




● Hitachi remote controller with microphone 01 (32HIQFA)



● Stereo earphones (sample)



● USB cable (sample)

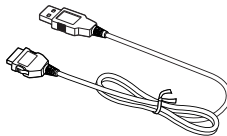

● CD-ROM



● Extracted contract clauses (Japanese)

● EZ FeliCa Introduction Guide (Japanese)

● Warranty (Japanese)

● Global Expert User's Guide (Japanese)

● Operating Precautions (Japanese)

● Basic Manual (Japanese)

● Instruction Manual (Japanese)




### Info


- The miniSD memory card is not included.
- An AC adaptor is not included. It is up to you to purchase a common AC adaptor 01 (option).

# Names of Parts


## Front

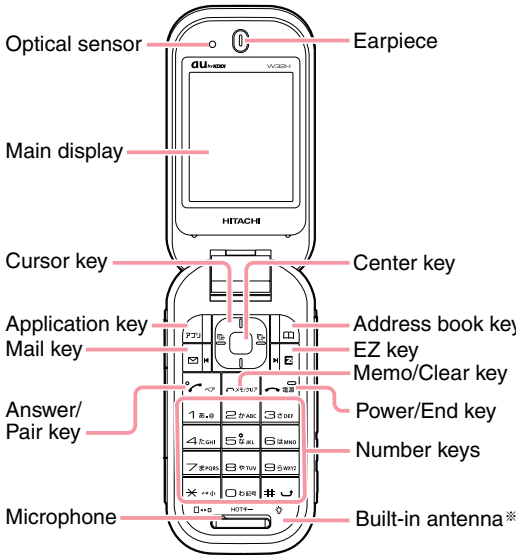


## Back

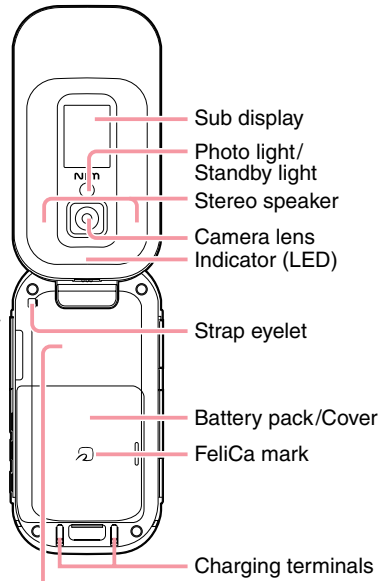

\* Take care to avoid covering the built-in antenna with your hand when using the phone, using EZweb, and when accessing GPS information.

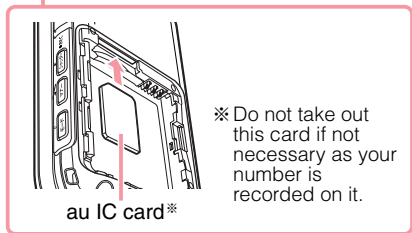

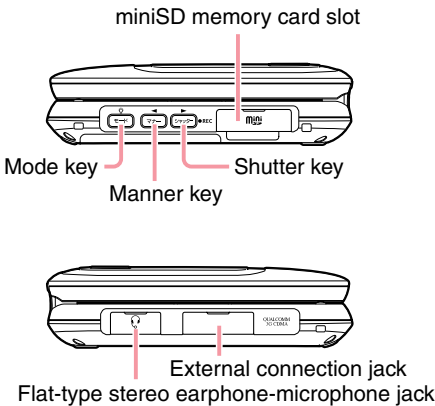


## Side



# Charging the Battery Pack

The battery pack that comes with the phone is not charged when you purchase it. Be sure to charge the battery pack before using the W32H for the first time. Charging takes about 130 minutes.

You should recharge the battery pack whenever the battery level icon shows  or .

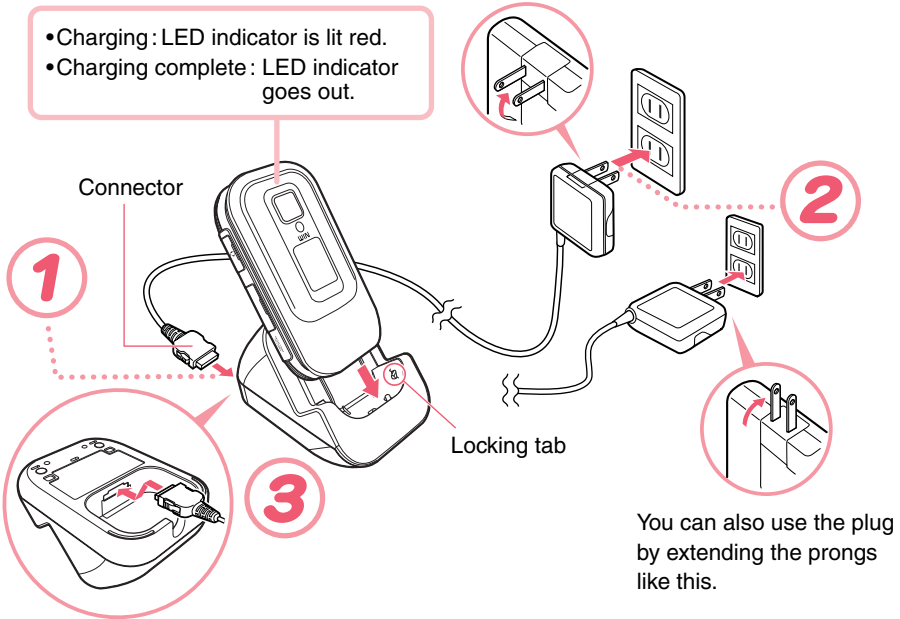

Check the shape of the connectors to ensure they are aligned correctly when you connect them.

## CAUTION

- ◎ You must purchase a common AC adaptor 01 (option) for charging. Note that the configuration of the AC adaptor may be different from that shown in the illustration above.
- ◎ Orient the connector of the common AC adaptor 01 (option) so it is parallel to the W32H or the desktop holder connector terminal when you connect them.





# 1 Connect the common AC adaptor 01 (option) to the desktop holder.


Check the shape of the connectors to ensure they are aligned correctly before you connect.

Trying to force a connection may damage the connectors.

# 2 Fold out the power plug of the common AC adaptor 01 (option), and then plug it into a 100V AC power outlet.


# 3 Insert the W32H into the desktop holder.

This will cause the W32H charge LED indicator to light red, and the battery level icon to cycle through the following pattern:  →  →  → .

When charging is complete, the battery level icon will show  and the LED indicator will go out.


To remove the W32H from the desktop holder, lift it straight up.

※ You can connect the common AC adaptor 01 (option) to the W32H to charge the battery pack.

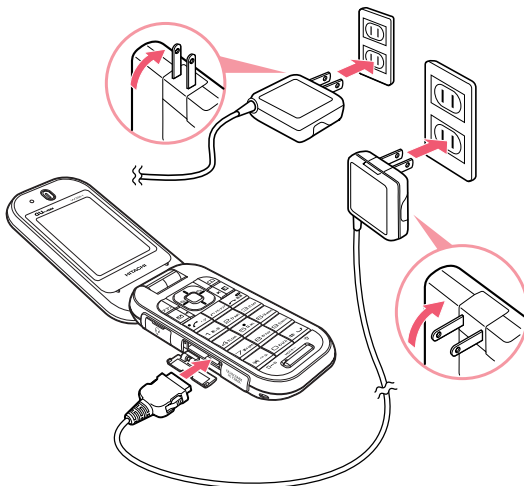

Check the shape of the connectors to ensure they are aligned correctly when you connect.



# Turning On Power

**1** Hold down  for at least 1.5 seconds.




The standby screen appears.




icon						
Signal Strength	Strong	Medium	Weak	Very Weak	Out of Range	Emission OFF Mode

- Communication is not possible while the signal strength icon is  (Out of Range).
- Communication may not be possible while the signal strength icon is  (Very Weak).

icon						
Battery Level	Fully Charged	High	Medium	Low	Fully Discharged	Extension Mode*

- During charging, the battery level icon will cycle through the following pattern:  →  →  → .

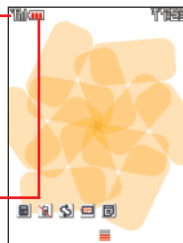


Standby screen

## ※ Using Extension Mode

Using the Extension Mode, W32H automatically shuts down the radio wave after issuing the Low Battery Alert. This is quite a useful function for the case, although available functions are limited, that you can still check Outgoing/Incoming Records, Content of e-mail, Address Book, Schedule and so on.

▶ Page 111


 
# Turning Off Power

**1** Hold down  for about one second.






# Initial Settings

**1** While the standby screen is displayed, press , and then press  (初期設定を終了) (Quit Initialization).

The main menu appears (page 18).

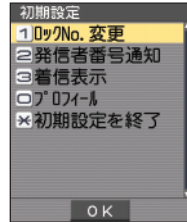




Initial Settings screen



## Info


- Although you do not make the initial settings, you can make/receive calls.
- The table below shows the initial factory default setup of the W32H. Quitting initialization as shown in the above procedure will configure the setting shown below.

Lock No.	1234	Caller ID	On	Profile	Blank
Teens Lock No.	1234	Incoming Display	On		

# Selecting English as the Display Language

**1** While the standby screen is displayed, press , use  to select “機能設定” (SETTINGS), and then press  (OK).

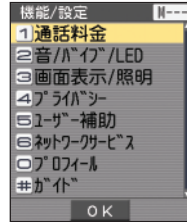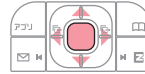

**2** Press  (画面表示/照明) (Screen/Light),  (Set Language), and then  (English).

This selects English as the display language.




## CAUTION


Even if English is selected as the display language, schedule and other dates are displayed in the format year/month/day. Folder names inside of the Data Folder are also displayed in year/month/day sequence.

# Operation Basics


## Key functions

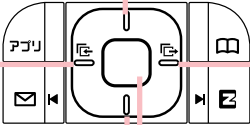

- ◀ · Displays incoming records.  
· Returns to the previous menu screen.
- ▶ · Displays outgoing records.  
· Scrolls forward one menu screen.
- ⬇ · Displays the standby shortcut icon.  
· Selects an item.
- ⬆ · Selects an item.
- ⬇ · Displays the main menu.  
· Applies an item.

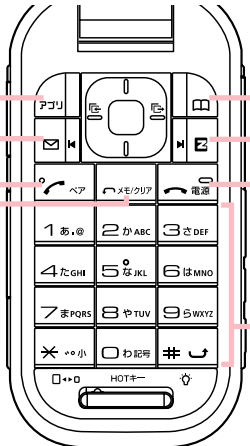



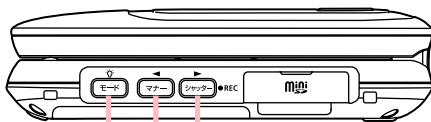

- 📄 · Displays the EZ apps menu.
- ✉ · E-mail  
· C-mail (hold down for about one second).
- ☎ · Dials/answers a phone call.  
· Displays the Pair function.
- 📝 · Memo  
· Toggles Easy Voice Memo on and off (hold down for about one second).  
· Deletes a character.  
· Returns to the previous menu screen.
- 📖 · Displays the address book.  
· Creates a new address book (hold down for about one second).
- ☰ · Displays the EZ menu.
- ⏻ · Toggles power on and off.  
· Hangs up.  
· Terminates a function.  
· Returns to the standby screen.
- ☎ ~ ☎ ☎ ☎ ☎ · Inputs phone number.  
· Inputs text character.




- ☰ · Turns on the light (hold down for about one second).
- ☰ · Toggles Manner Mode on and off (hold down for about one second).
- 📷 · Shutter release  
· Shoots a photo (hold down for about one second).

### Info

- ◎ If you lose track of where you are or if you make a mistake  
Press  to scroll back to the previous screen.  
Press  to return to the standby screen.
- ◎ When **Guide** is in the lower right corner of the photo or movie screen, pressing  will display key help.
- ◎ Holding down  for about one second toggles side key's disabling feature on and off while the cellphone is folded.  
To cancel the side key's disabling feature, follow the above procedure with the phone unfolded.


# Display Indicators

The following explains the main icons that appear on the standby screen.

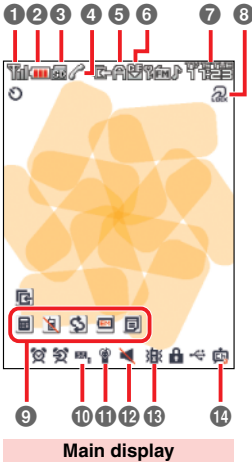

Main display


1		Signal strength
2		Battery level
3		The miniSD memory card (commercial item) is inserted into the cellphone.
4		During a call
5		EZ apps (BREW®) on
6		Unread mail
7		Current time The date and time are set automatically.
8		FeliCa lock on
9		Selection of calculator, Emission Off Mode, mode setting, Extension Mode, Note Pad 01, or other user icons by pressing  and then
10		Easy Voice Memo on
11		Manner Mode on
12		Ring tone off
13		Vibrator on
14		EZ Channel is in use.

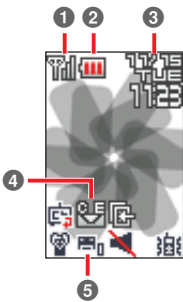

Sub display  
(When phone is folded)

1		Signal strength
2		Battery level
3		Current time The date and time are set automatically.
4		Unread mail
5		Easy Voice Memo on

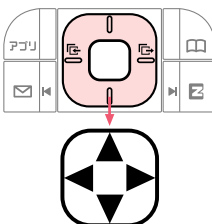


## Key symbols used in this manual

 


The cursor key is represented in this manual using the key symbols described below.

	or		key:				
	or		key:				
	,		,		or		key:


# Main Menu

Pressing  while the standby screen is displayed displays the main menu. Use  to select the icon you want, and then press  (OK) to access the function associated with the icon.

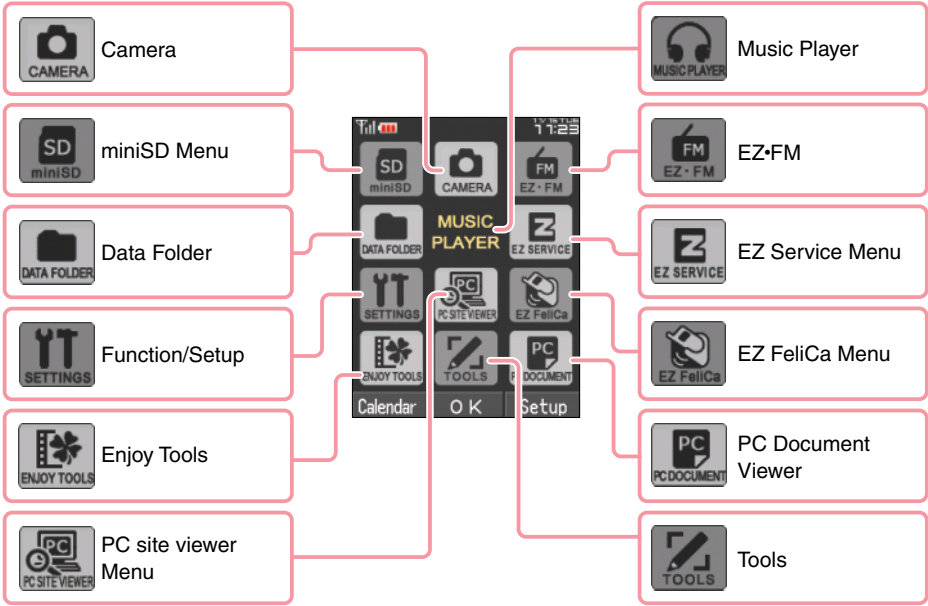


## Using the Main Menu

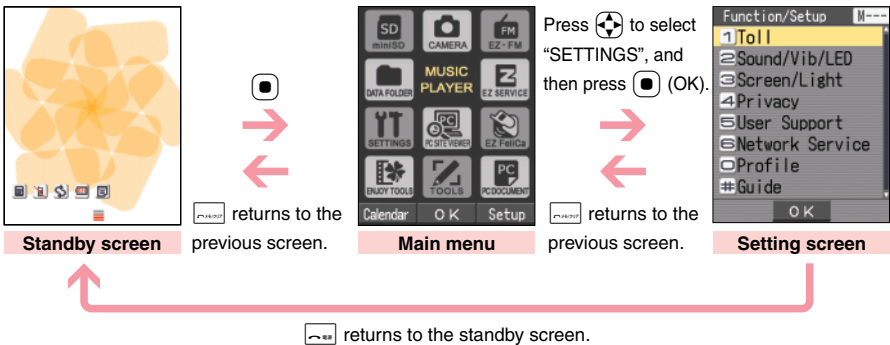


Example: To display the setting screen from the main menu.



## Using Soft Keys

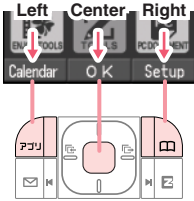Soft keys are the keys you use to execute the functions along the bottom of the screen. The table below explains the relationship between the soft keys and the on-screen functions. Note that the function of each soft key depends on the currently displayed screen.




Left soft key 	Executes the function on the left.
Center soft key 	Executes the function in the center.
Right soft key 	Executes the function on the right.

## Using Menus

 Pressing the soft key that corresponds to the “Menu” at the bottom of the display will display a menu of various operations related to the function you are currently using.


Example: To display the music player menu from the music player screen.


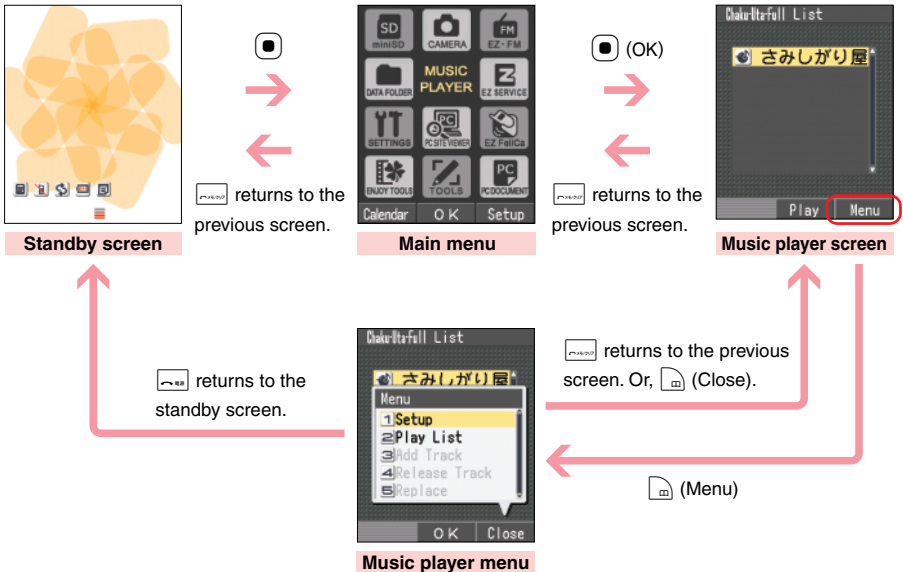



# Initializing E-mail and EZweb

An EZweb subscription is required to use e-mail and EZweb. If you did not apply when you purchased your phone, contact your nearest au shop or the au Customer Service Center.



※ You will be assigned an e-mail address automatically when you perform the EZweb initialization procedure.


**1** While the standby screen is displayed, press .

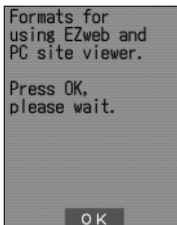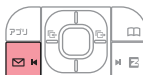


**2** Press .

 Wait until the phone connects to the server for initialization.

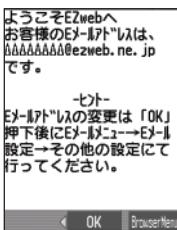

 **3** After your automatically assigned e-mail address appears, press .




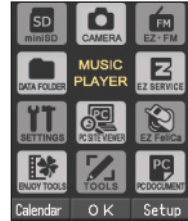
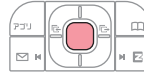
## Info



Pressing /  also allows you to make initial settings.



# Looking Up Your Current Phone Number and E-mail Address



- 1** While the standby screen is displayed, press .




- 2** Use  to select "SETTINGS," and then press  (OK).

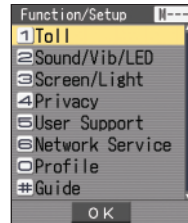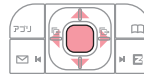
 


- 3** Press  (Profile).


Your current phone number and e-mail address appear.

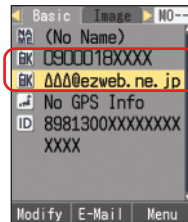



## Info

You can also look up your phone number and e-mail address by pressing  and then  while the standby screen is displayed.


# Changing Your E-mail Address

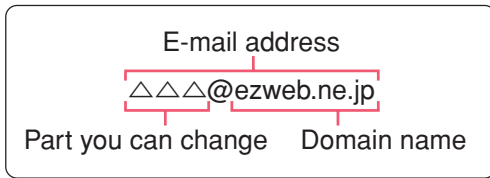

**1** While the standby screen is displayed, press .

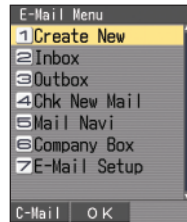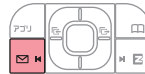


**2** Press (E-Mail Setup).

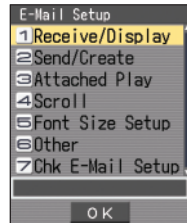


**3** Press (Other).

When the EZweb connection confirmation screen appears, press (Yes).

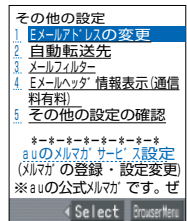

**4** Press (Eメールアドレスの変更) (Change E-mail Address).

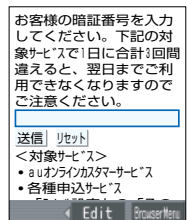


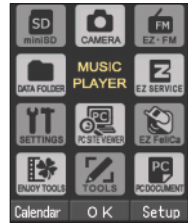
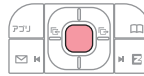








# Changing the Display Character Size




**1** While the standby screen is displayed, press .



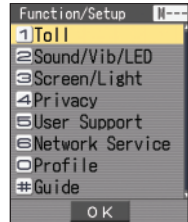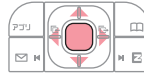


**2** Use  to select “SETTINGS,” and then press  (OK).

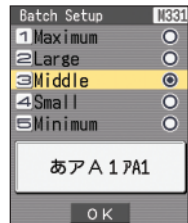

**3** Press  (Screen/Light),  (Font Size), and then .



**4** Use  to select the character size you want, and then press .

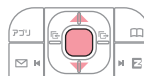

## Info

- The initial setting is “Middle.”
- You can specify a character size for each function.

# Personal Identification Numbers and Passwords

The W32H lets you use the numbers and passwords described below. Be sure to take steps so you do not forget your numbers and passwords, because you will need them to perform various operations and to access subscription services.

## Personal Identification Number (PIN)

<b>Usage Examples</b>	① For remote operation of the Voice Mail and Call Transfer from a standard phone
	② For inquiries, applications, and service modifications using au Customer Service Center voice guidance, au website, and EZweb
	③ For changing e-mail settings
<b>Initial Default</b>	4-digit number you entered on your subscription contract

## Lock No.

<b>Usage Examples</b>	For modifying various phone settings
<b>Initial Default</b>	1234 (4-digit number)

## Teens Lock No.

<b>Usage Examples</b>	For modifying various phone settings in Teens Mode
<b>Initial Default</b>	1234 (4-digit number)

## EZ Password

<b>Usage Examples</b>	For entering and canceling subscriptions for EZweb fee-based content
<b>Initial Default</b>	4-digit number you registered for your first fee-based content subscription

## Premium EZ Password

<b>Usage Examples</b>	① For entering and canceling subscriptions for EZweb fee-based contents paid for using “まとめてau支払い” (combined au payment service)
	② For purchasing products from EZweb sites that use “まとめてau支払い” (combined au payment service)
<b>Initial Default</b>	4 to 8-digit number you registered for your first “まとめてau支払い” (combined au payment service) payment

# Phone

## Making a Call



- 1 While the standby screen is displayed, use the number keys ( to ) of the keypad to enter the phone number you want to call.

When calling a standard phone, you also need to enter the area code.

1 あいお	2 か ABC	3 さ DEF
4 た GHI	5 な JKL	6 は MNO
7 ま PQRS	8 や TUV	9 さ WXYZ
* ** 小	0 0	# 井

- 2 Press .

After you finish a call, press to hang up.

### Send Methods

Call : Your phone number is provided to the party you are calling in accordance with the caller ID setting of your phone.


184 Add : Your phone number is not provided to the party you are calling.

186 Add : Your phone number is provided to the party you are calling.

1 あいお	2 か ABC	3 さ DEF
4 た GHI	5 な JKL	6 は MNO
7 ま PQRS	8 や TUV	9 さ WXYZ
* ** 小	0 0	# 井

# Answering a Call

**1** Press  to answer an incoming call.

After you finish a call, press  to hang up.


		
1 あ・お	2 か ABC	3 さ DEF
4 た GHI	5 な KLM	6 は MNOP
7 ま PQRS	8 や TUV	9 ゑ WXYZ
* 0 小	□ 0 詳 明	# じ

## Info

### Display for Incoming Calls



If the caller's name is in your address book, it appears on the display.  
If not, only the caller's phone number is displayed.

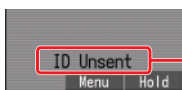


A message like this appears when the phone number of the caller is not provided for some reason.

**ID Unsent** : The caller's phone refused to send its phone number.


**Pay Phone** : The call is from a pay phone.

**Not Support**: The call is from a phone that does not support caller ID.

### Missed Call Notification

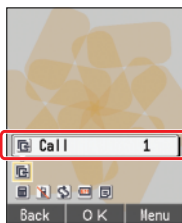

The message "Call X" will be on the display if you did not answer one or more calls.


Press  (OK) to check incoming records (caller phone number, etc.)



To redial a number

→ "Redialing (Outgoing Records/Incoming Records)" (page 28)


# Redialing (Outgoing Records/ Incoming Records)



**1** While the standby screen is displayed, press .

-  : Displays outgoing records.
-  : Displays incoming records.



**2** Use  to select the record whose number you want to dial.



**3** Press .



## Info


The phone stores up to 50 records each for the outgoing records and incoming records. When a record is created while there are already 50 records in memory, the oldest current record is deleted automatically to make room for the new one.



# One-ring Calls

## ■ What is a “one-ring call”?

A “one-ring call” is an incoming call that rings your phone only once, which causes it to be stored in your incoming records. If you redial the number shown in your incoming records, often you are connected to a dating service or some other service that may bill you very high charges. Always keep in mind that it is a good idea to avoid calling back unfamiliar numbers.

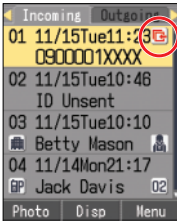
## ■ One-ring call indicator







The  icon indicates an incoming call you did not answer. The  icon indicates an incoming call that rang for four seconds or less. There is a good chance that such a call is a one-ring call.



# Changing the Ring Tone

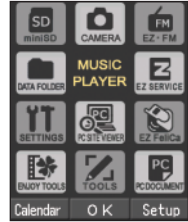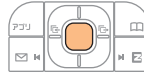


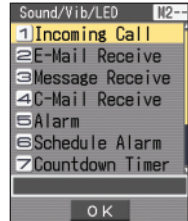
**1** While the standby screen is displayed, press .




**2** Use  to select "SETTINGS," and then press  (OK).

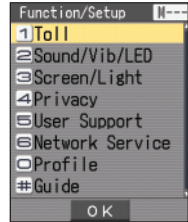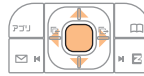


**3** Press  (Sound/Vib/LED).




 **4** Press  (Incoming Call).

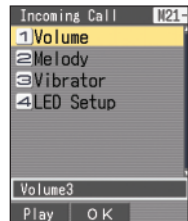





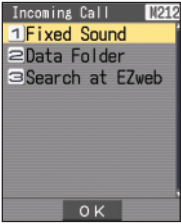
**5 Press  (Melody).**




**6 Press  (Fixed Sound).**

To hear the currently selected ring tone, press  (Confirm).



**7 Use  to select the ring tone you want, and then press  (OK).**

The ring tone is set.

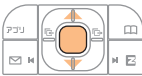

**Info**


- ◎ The initial setting is "Fixed Tone1".
- ◎ You can also download a "Chaku-Uta<sup>®</sup>" from the Internet and use it for your ring tone.  
→ "Downloading Chaku-Uta<sup>®</sup>" (page 70)

# Adjusting the Ring Tone Volume




To adjust the ring tone volume, perform steps 1 through 3 under “Changing the Ring Tone” (page 30), and then continue with the following steps.

**1** Press **1** **✱** **☎** (**Incoming Call**).

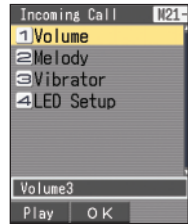

**2** Press **1** **✱** **☎** (**Volume**).


To hear the ring tone at the current volume setting, press **☎** (**Play**).

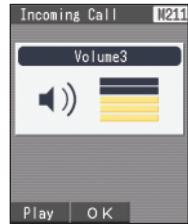

**3** Use **▲** to adjust the ring tone volume, and then press **☐** (**OK**).

**▲** : Increases volume.

**▼** : Decreases volume.

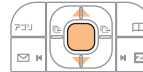

## Info

Step-up : Ring tone gradually increases in volume.

Step-down: Ring tone gradually decreases in volume.


Mute : Ring tone does not sound.

To display the “Step-up” and “Step-down” settings, select volume level 5 and then press **▲**.

To display the “Mute” setting, select volume level 1 and then press **▼**.

# Adjusting the Earpiece Volume during a Call




**1** During a call, use  to adjust the volume.

 : Increases volume.

 : Decreases volume.


There are five volume levels for the earpiece volume.

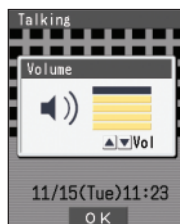



# Turning On Manner Mode

 While Manner Mode is set to on, the phone alerts you to incoming calls by vibrating.




**1** While the standby screen is displayed, hold down  for about one second.

This turns on Manner Mode, the  icon is on the display while Manner Mode is turned on.

Turning on Manner Mode also turns on Easy Voice Memo, which is indicated by  on the display.

While Manner Mode is set to on, the phone vibrates without sounding its ring tone.


To turn off Manner Mode, hold down  for about one second again.

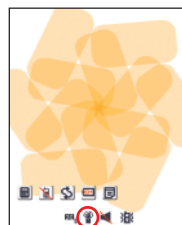



# Turning On Easy Voice Memo



 1

While the standby screen is displayed, hold down  for about one second.

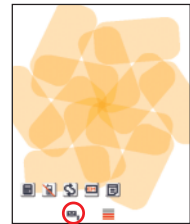

This turns on Easy Voice Memo, the  icon is on the display while Easy Voice Memo is turned on.

The phone can have up to four Easy Voice Memos recorded, and each memo can be up to 15 seconds long.

If a new Easy Voice Memo is recorded when there are already four in memory, the oldest, unprotected memo that has already been played back is deleted automatically to make room for the new one. Protected Easy Voice Memos are not deleted.

To turn off Easy Voice Memo, hold down  for about one second again.

---

## Info

### Using the Voice Mail


The Voice Mail can be used to answer the phone and take messages when the phone is turned off, or when you are in a location where signal reception is not possible.

# Playing an Easy Voice Memo





## When there is one or more Easy Voice Memos recorded

The message “ Call” and “ Easy V Memo” appear on the standby screen.

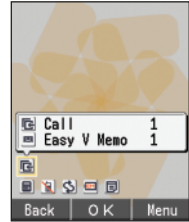



- 1 Select “ Call,” and then press (OK).

The incoming records list appears.

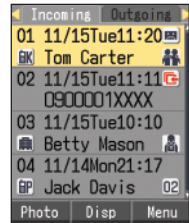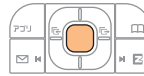


- 2 Use to select the record with the icon, and then press (Disp).

The incoming record detail screen appears.

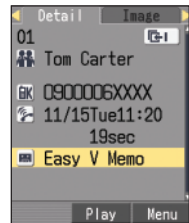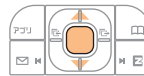

- 3 Use to select “Easy V Memo” and then press (Play).

The easy voice memo plays back.

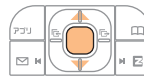


### Info


To delete an Easy Voice Memo, press while the standby screen is displayed. Select the Easy Voice Memo you want to delete, press (Menu) and then (Delete). Next press (Delete One), and then press (Yes).

# Address Book





## Registering an Address Book

- 1** While the standby screen is displayed, hold down  for about one second.

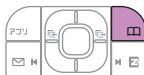


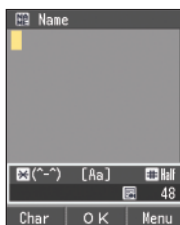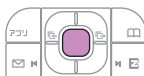

- 2** Select “**NA** <Name>,” and then press  (Edit).





- 3** Enter the name and then press  (OK).

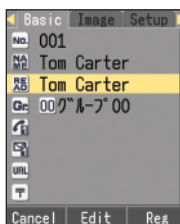The **RD** <Reading> is generated automatically when you enter a name.  
To input text  
→ “Inputting Characters” (page 106)




- 4** Use  to select “**RD** <Phone Number1>,” and then press  (Edit).

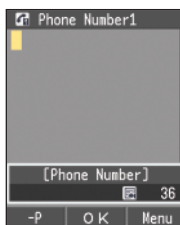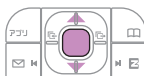



## 5 Enter the phone number, and then press (OK).

When entering the number of a standard phone, be sure to include the area code.

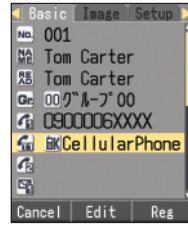


## 6 Use to select “ <E-Mail Adrs1>,” and then press (Edit).

If you do not want to enter an e-mail address, jump to step 8.

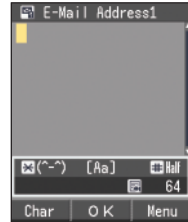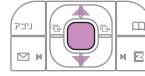


## 7 Enter the e-mail address, and then press (OK).

To input an e-mail address  
→ “Inputting an E-mail Address”  
(page 107)

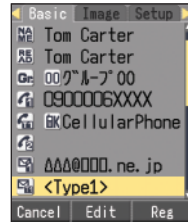

## 8 Press (Reg).

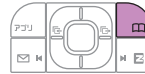

### Info



- ◎ The address book can contain up to 700 records.
- ◎ Address book records are numbered from 000 through 699. Registering a new record automatically assigns it the lowest available unused record number.
- ◎ An address book record can also contain a website URL, street address, birthday, and other personal information.

# Editing an Address Book Record





Example: To edit the phone number of “Tom Carter”


**1** While the standby screen is displayed, press .

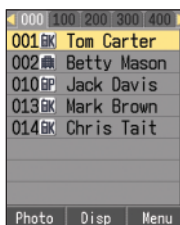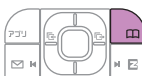

**2** Use to select the record you want to edit, and then press (Menu).

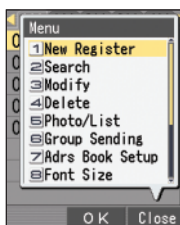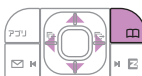

**3** Press (Modify).

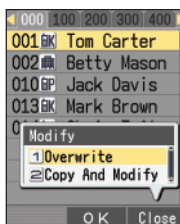




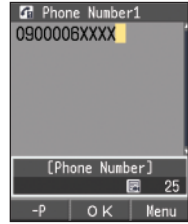
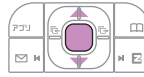
**4** Press (Overwrite).






5


Use  to select “ 0900006XXXX”, and then press  (Edit).



6


Make the changes you want, and then press  (OK).

To delete characters, press .

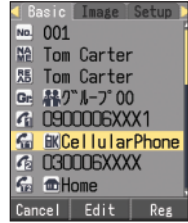

7



Press  (Reg).

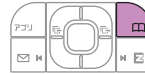

# Adding Outgoing or Incoming Record Data to the Address Book




**1** While the standby screen is displayed, press , use to select the phone number you want to save, and then press (Menu).

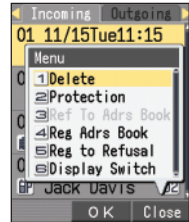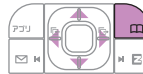


- : Displays outgoing records.
- : Displays incoming records.

**2** Press (Reg Adrs Book).

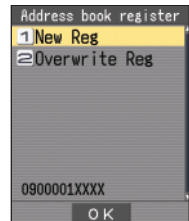

**3** Press (New Reg).



To enter the name, use the procedure starting from step 2 under “Registering an Address Book” (page 36).

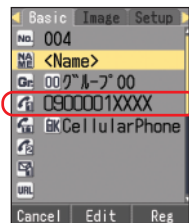



# Dialing from the Address Book



**1** While the standby screen is displayed, press and then use to select the record whose phone number you want to dial.

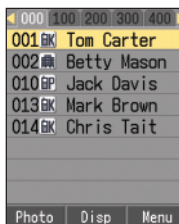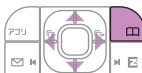

**2** Press (Disp).  
The details screen of the record appears.

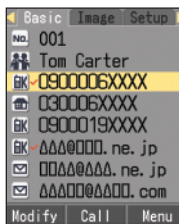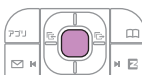

**3** Use to select the phone number, and then press .



# Pair Function



Once you register a person as a “Pair partner,” you can make a call to that person or send that person e-mail using a simplified operation. Up to five persons can be registered as Pair partners.



## Registering a Pair Partner

**1** While the standby screen is displayed, press .


If the pair partner is not registered, the confirmation screen appears. Press (OK). Use to select the 1 through 5 tab where you want to register the Pair partner.




**2** Use to select “Register · Confirm,” and then press (OK).

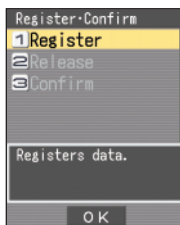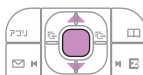


**3** Press (Register).

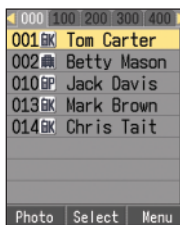

**4** Use to select the address book record for the person you want to register as a Pair partner, and then press (Select).

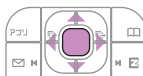


**5** Press (Reg).

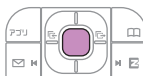


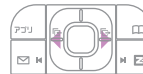
# Making a Phone Call or Sending Mail to a Pair Partner






**1** While the standby screen is displayed, press .




**2** Use  to select the Pair partner.



**3** Use  to select “Call”, and then press  (OK).

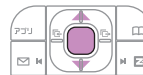

Selecting “Send E-Mail”/“Send C-Mail”, and then pressing  (OK) will display a screen for composing and sending an e-mail/a C-mail message. Next, continue from step 5 of the procedure under “Creating and Sending E-mail Messages” (page 46)/“Creating and Sending C-mail Messages” (page 52).

## Info

In order to register a person as a Pair partner, that person's name, phone number, and other information need to be in the address book beforehand. Use the procedure under “Registering an Address Book” (page 36) to create the required record before trying to register a person as a Pair partner.

Your W32H supports two types of mail:  
e-mail and C-mail.



## Using E-mail


To use e-mail, you need to apply for an EZweb subscription. If you did not apply when you purchased your phone, contact your nearest au shop or the au Customer Service Center.

In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use e-mail. If you have not performed initialization yet, refer to "Initializing E-mail and EZweb" (page 20).

E-mail makes you possible to exchange mails with a PC and with another cellphone that supports e-mail function. You can send mail messages that contain up to 5,000 double-byte characters, and you can attach photos and movies to e-mail messages.

- ※ You can send an e-mail to up to five addressees.
- ※ You can send up to 1,000 e-mail messages (each addressee counts as a separate message) per day.
- ※ The sending and receiving operations may take longer when a mail message has data attached.

 Page 46

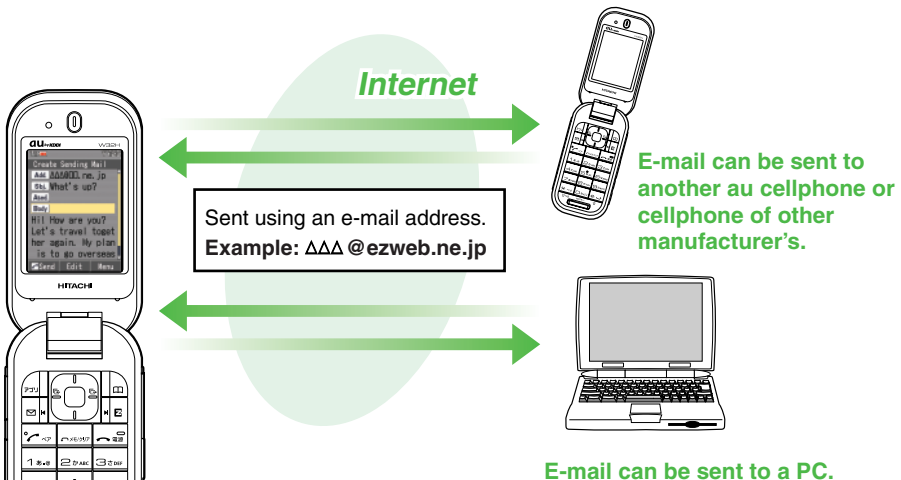

# Using C-mail

C-mail lets you exchange text messages that contain up to 50 double-byte characters with another au cellphone that supports C-mail.

Page 52



## C-mail Center

Sent using a phone number.  
Example: 090-0001-XXXX

Received using a phone number.  
Example: 090-0002-XXXX



 

C-mail can be sent to another au cellphone.


## About C-mail safe block function


- C-mail safe block function blocks C-mails that contain accessing URLs (<http://△△△>, <https://△△△>) or phone numbers in its body text. C-mail safe block function is set to on by default. If you want to receive C-mails that contain accessing URLs or phone numbers in their body texts, you can disable this function to receive such C-mails.

# Creating and Sending E-mail Messages





**1** While the standby screen is displayed, press , and then press  (Create New).

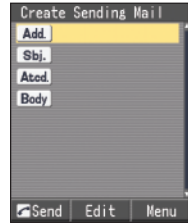




**2** Select **Add.**, and then press  (Edit).

 
**Add.** : Address to which the e-mail will be sent.

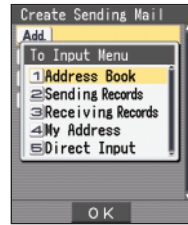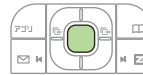

You can send an e-mail to up to five addressees.




**3** Press  (Address Book), use  to select an addressee, and then press  (Select).

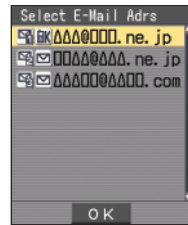You can select an addressee from sending records, receiving records, or My Address, or you can enter an address.





**4** Use  to select the e-mail address you want to enter, and then press  (OK).

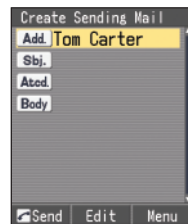






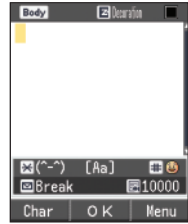
**5** Use  to select **Sbj.**, and then press  (Edit).

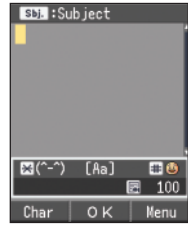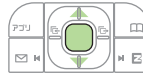
**Sbj.** : Subject of the e-mail message.




**6** Enter the subject and then press  (OK). Use  to select **Body**, and then press  (Edit).

**Body** : Body of the e-mail message.



**7** Enter the body text and then press  (OK).

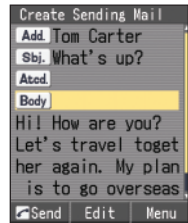

**8** Press  (Send) or .

The message "Sent" appears on the display after the e-mail message is sent.



# Reading Received E-mail Messages





## When you receive an e-mail

The message “ E-Mail” and appear on the standby screen.

Received e-mail icon





- 1** Select “ E-Mail,” and then press (OK).

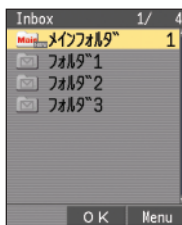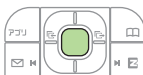

- 2** Press (OK).

: Indicates an unread message.

: Indicates an already read message.

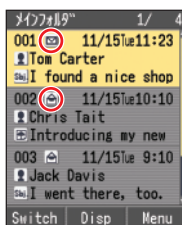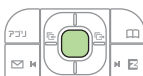

- 3** Use to select the unread e-mail you want to view, and then press (Disp).

The received e-mail message appears.  
If all of the message cannot fit, press to scroll.

Use and to scroll between messages.

Press to return to the e-mail message list.






# Reading an E-mail Message with an Attached Photo or Movie



Example: To see a photo attached to an e-mail.


1

Use  to select the e-mail message, and then press  (Disp).

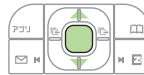


2

Use  to select a file name, and then press  (Rcv).

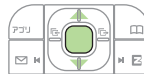

## Info



- ◎ Photos or movies may be displayed within mails or may require the recipients of the mails to select file names and press  (Play) to display those files, depending on the file sizes of the attached photos or movies.
- ◎ The sending and receiving operations may take longer when a mail message has data attached.
- ◎ Certain signal conditions may also cause e-mail sending and receiving to take longer than normal.



# Replying to a Received E-mail Message



To reply to an e-mail message, perform steps 1 through 3 under “Reading Received E-mail Messages” (page 48), and then perform the following steps.

## 1 Press (Reply).

You can also display the e-mail composition screen by pressing  (Menu) and then  (Reply).

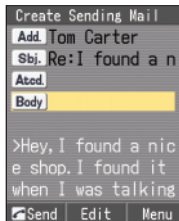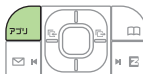

## 2 Press (Edit), and then enter the body text.

**Sbj.** is prefixed with “Re:,” and the body text of the e-mail is quoted.

For the remainder of this procedure  
→ Perform the procedure starting from step 7 under “Creating and Sending E-mail Messages” (page 46).



# Avoiding Spam

You can use mail filters to block spam, to receive e-mail from specific sources only, etc. You can also block any e-mail that includes “未承諾広告※” (unsolicited advertisement) in the subject.



## Configuring Mail Filter Settings

- ① While the standby screen is displayed, press .
- ② Press (E-Mail Setup) → (Other) → (Yes).
- ③ Press (メールフィルター / Mail Filters).
- ④ Enter your PIN, press (OK), use to select “送信” (Send), and then press (Select).

Your PIN is the 4-digit number you entered on your subscription contract.

自動的に変更されますので変更する必要はありません。

1 未承諾広告フィル  
2 アドレスフィルタ  
3 設定にあたって  
←戻る。

Mail filter setting screen

## Unsolicited Advertisement Filter and Address Filters

### ● 未承諾広告フィルター (Unsolicited Advertisement Filter)

Blocks any e-mail that includes “未承諾広告※” (unsolicited advertisement) in the subject.

### ● アドレスフィルター (Address Filters)

Item	Description
全受信 (Receive all)	Allows receipt of all e-mail.
指定受信設定 (Receive specific)	Allows receipt of e-mail from specified sources only. You can configure Internet and cellphone domain options (一括指定先 / batch settings), and specify individual (個別指定 / individual settings) e-mail addresses, domains, and account names (the part of the address to the left of “@”).
指定拒否設定 (Block specific)	Blocks individually specified e-mail addresses, domains, and account names (the part of the address to the left of “@”).
なりすまし規制 (Block imposters)	Turning on “規制する” (Imposter block) along with “全受信” (Receive all) will block only e-mail that is configured to look like it came from a cellphone or PHS phone.


 
※ You can configure your list of individual e-mail addresses to be blocked any time after turning on “指定受信設定” (Receive specific).


### Info


You can prevent spam by changing your e-mail address. See “Changing Your E-mail Address” (page 22) for information about how to change your e-mail address.


# Creating and Sending C-mail Messages




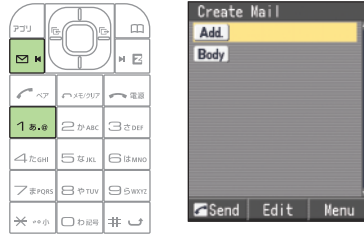

 **1** While the standby screen is displayed, hold down  for about one second, and then press  (Create New).




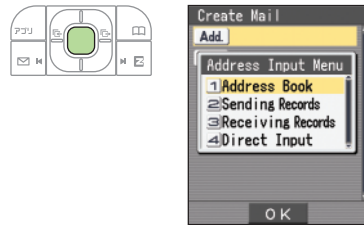

**2** Select **Add**, and then press  (Edit).




**3** Press  (Address Book), use  to select an addressee, and then press  (Select).

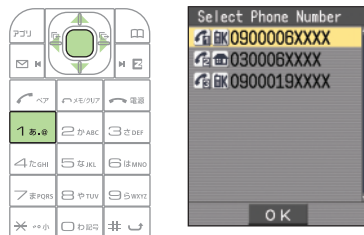
You can also select a phone number from sending records or receiving records, or you can enter an address.



**4** Use  to select the phone number you want to enter, and then press  (OK).

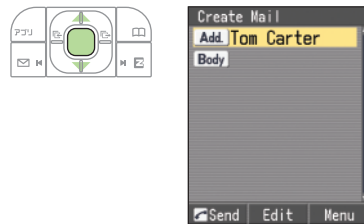

- 5** Use to select **Body**, and then press (Edit). Enter the body text, and then press (OK).

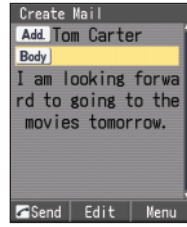

- 6** Press (Send) or .

When the C-mail reaches the other party, the message “Completed” appears, and the message is stored in your sending records.




## Reading Received C-mail Messages

### When you receive a C-mail



The message “ C-Mail” and appear on the standby screen.

Received C-mail icon

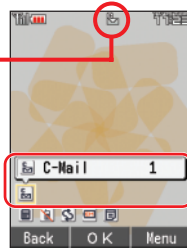


- 1** Select “ C-Mail,” and then press (OK).

: Indicates an unread message.

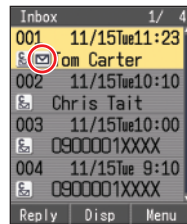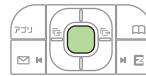

- 2** Use to select the unread C-mail you want to view, and then press (Disp).

The received C-mail message appears. Use and to scroll between messages. Press to return to the C-mail message list.

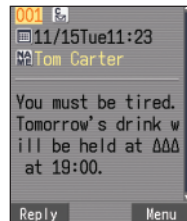

# Camera Features

Your W32H comes with a built-in 1.28-million effective pixel camera that you can use to shoot photos and record movies. You can attach the photos and movies that you shot/recorded to e-mail messages.

## Using the Camera

Shooting a Photo (page 56)    Recording a Movie (page 60)

# 1

### Use your images for W32H functions!

You can use photos you shot for the standby screen, for the image that appears while the ring tone is sounding, and even in your address book.




# 2

### Send images by e-mail!

You can send a photo or a movie (excluding those recorded in Video Mode) whose data is up to 500KB\* as an e-mail attachment.


※ Certain signal conditions may cause e-mail send and receive to take longer than normal.

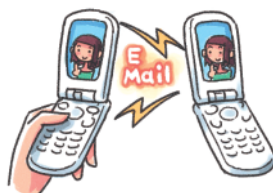





## Tips for Better Photos


### Shooting in Phone Mode

Taking care to avoid blocking the lens with your fingers, hold the camera securely with both hands. Use your thumb to press  (Shutter) to release the shutter.

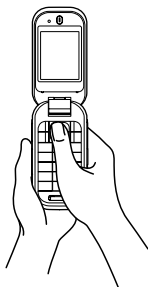

### Shooting in PC Mode

 Taking care to avoid blocking the lens with your fingers, hold the camera securely with both hands. Use the index finger of your right hand to press .

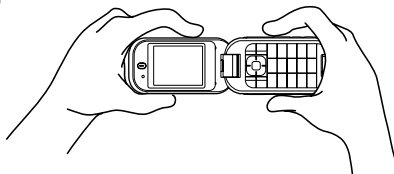

### Tips for Avoiding Hand Movement


- Remain steady by keeping your arms lightly against your sides and standing with your feet about shoulder width apart. Having your arms away from your side or extended in front of you can cause blurred images.
- When you press the shutter button, remain still until your shutter tone finishes sounding. This is especially important when shooting where lighting is dim.
- A self-timer is also provided for shooting photos. With the self-timer, you do not need to press the shutter button to shoot a photo, so there is less chance of a blurred image caused by accidental movement of the phone.

## Photo and Movie Sizes

The following shows the sizes of the photos and movies that can be recorded with your W32H.


### Photo Sizes

Phone Mode	Phone	120 × 160	①
	Wallpaper		
	Coupling Shot	240 × 320	②
	Updown Shot Serial Shot		
PC Mode	VGA	640 × 480	③
	SXGA	1280 × 960	④

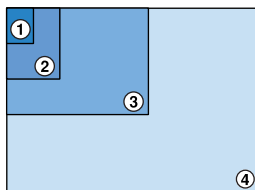

### Movie Sizes


Mail Mode	Standard S	96 × 80	①
	Standard M	128 × 96	②
	High Quality M		
	High Quality L	176 × 144	③
Video Mode	QVGA	320 × 240	④


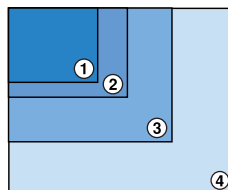




# Camera



## Shooting a Photo

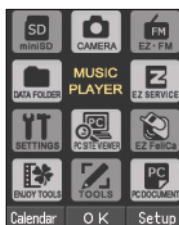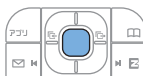

- 1** While the standby screen is displayed, press .




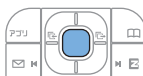
- 2** Use  to select “CAMERA,” and then press  (OK).

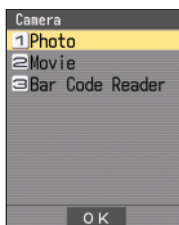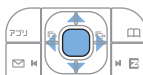



- 3** Press  (Photo).



- 4** Point the lens at the subject, and then press  (Shutter).




The phone emits a shutter sound.  
You can also press  in place of .

Note that the phone emits the shutter sound even if it is in Manner Mode.

# 5

## Press (Save).

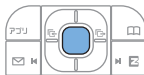

The display shows the message “Saved to data folder (Phone).”, and then returns to the photo monitor screen. Photos you shot are saved to the “Photo Folder,” which is in the Data Folder.

### Info

The initial photo mode setting when you purchase your W32H is “Phone Mode (Wallpaper 240×320)”.










 

 
 

#### Meanings of the Photo Titles in the “Photo Folder”, which is in the Data Folder.

Example of a Photo Title    051115\_1123~0001



#### Shooting Techniques




The following useful functions can be used when shooting photos.

Zoom/Wide	 	Press  to zoom in.	Photo Size		Press  to cycle through the photo sizes.
		Press  to zoom out.			
Brightness	 	Press  to make the image darker.	Self-timer		Press  to toggle the self-timer on and off.
		Press  to make the image brighter.			
Shot Light	 	Use this light when available lighting is dim. (Auto→ON→OFF)			

#### When Shot Mistakenly


If the photo is not what you want, press  or  in place of  (Save) in step 5 of the above procedure. Next, repeat step 4 to reshoot.



#### Displaying Key Help



While  (key help icon) is displayed in the lower right corner of the screen, press  to display key help. Press  again to exit key help.


# Viewing Photos



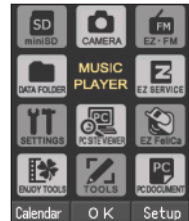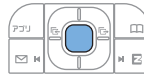

- 1** While the standby screen is displayed, press .




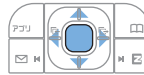

- 2** Use  to select “DATA FOLDER,” and then press  (OK).




- 3** Use  to select “Photo Folder,” and then press  (Detail).

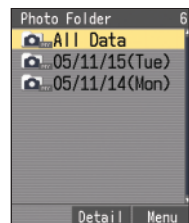Selecting “All Data” displays a list of all photos in the Photo Folder.





- 4** Use  to select the dated (by photos-shot date) folder, and then press  (Detail).

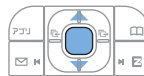
A list of all photos that were shot on that day are displayed.



# 5

Use  to select the photo you want to view, and then press  (Disp).



The photo appears.

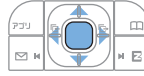

# Recording a Movie



  - 1 While the standby screen is displayed, press . Use to select "CAMERA," and then press (OK).

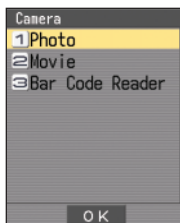


- 2 Press (Movie).




- 3 Point the lens at the subject, and then press (Rec).

 The phone emits a shutter sound to signal the start of recording. You can also start recording by pressing .




- 4 To stop recording, press (End).

 Even if you do not press (End), recording will stop automatically after about 15 seconds. The phone emits a shutter sound when recording stops.



# 5
 
## Press (Save).



The display shows the message “Saved to data folder (Phone).”, and then returns to the movie monitor screen.

Movies you recorded are saved to the “Movie Folder,” which is in the Data Folder.

### Info

The initial movie mode setting when you purchase your W32H is “Mail Mode (High Quality L 176×144)”. The maximum recording time in “Mail Mode” is 15 seconds.

#### Meanings of the Movie Titles in the “Movie Folder”, which is in the Data Folder.

Example of a Movie Title 051115\_1123~0001

Date: November 15, 2005


 

 









Time: 11:23 a.m.

 Serial number



 
※ “S\_” is added to the beginning of the movie title when the movie size is “Standard S”.

#### Recording Techniques

 
 
The following useful functions can be used when recording movies.

Zoom		Press  to zoom in.	Movie Size		Press  to cycle through the movie sizes.
		Press  to zoom out.			
Brightness		Press  to make the image darker.	Self-timer		Press  to toggle the self-timer on and off.
		Press  to make the image brighter.			
Pause		Press to pause recording.			
Shot Light		Use this light when available lighting is dim. (Auto→ON→OFF)			
					

#### When Recorded Mistakenly


If the movie is not what you want, press  or  and then  (Cancel) in step 5 of the above procedure. Next, repeat step 3 to rerecord.


#### Displaying Key Help



While  (key help icon) is displayed in the lower right corner of the screen, press  to display key help.



Press  again to exit key help.

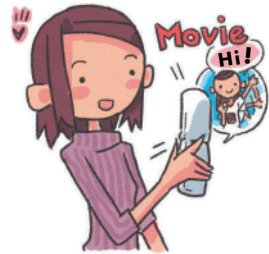
# Viewing Movies



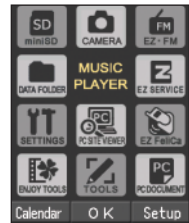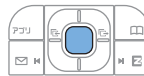

- 1** While the standby screen is displayed, press .





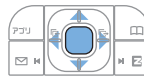

- 2** Use  to select "DATA FOLDER," and then press .



- 3** Use  to select "Movie Folder," and then press .

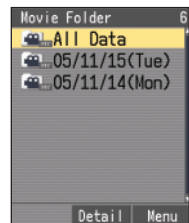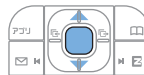Selecting "All Data" displays a list of all movies in the Movie Folder.





- 4** Use  to select the dated (by movies-recorded date) folder, and then press .

A list of all movies that were recorded on that day are displayed.






# 5


Use  to select the movie you want to play, and then press  (Play).

The movie plays.

To pause movie playback, press  (II).

Playback will stop automatically when the movie ends.

---

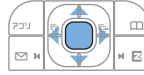


# Attaching a Photo or Movie to an E-mail Message

Perform the procedure from step 1 to 4 under “Shooting a Photo” (page 56) or “Recording a Movie” (page 60), and then perform the following steps.




**1** Press  (E-Mail).

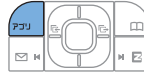

**2** Press  (Attach).

Photos you shot are stored in the Photo Folder and movies are stored in the Movie Folder, which are in the Data Folder.

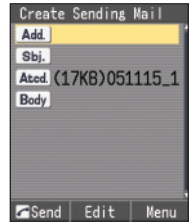




**3** Perform the procedure starting from step 2 under “Creating and Sending E-mail Messages” (page 46) to create an e-mail message.

※ A movie attached to an e-mail can be played on the cellphone that supports movie playback or on a PC.

# Using Photo Mail


Photo Mail automatically converts images so they can be viewed correctly on a non-au cellphone. In order to use Photo Mail, you need to change the receiver's e-mail address to a special Photo Mail address.

When you send an e-mail using the auto address converter, the e-mail address will be converted automatically as shown below. To use the auto address converter, press  (Menu) on the e-mail composition screen, and then press  (Send フォトメール便).

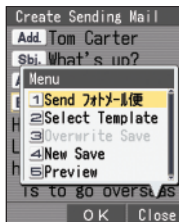

Addressee Service	E-mail Address	Converted Address
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@□.vodafone.ne.jp	△△△@□.vodafone.nepm.jp
TU-KA and au phone without movie mail support	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp

□ varies depending on subscription region.

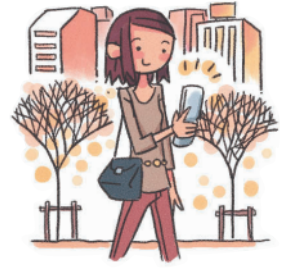


## Using EZweb

To use EZweb, you need to apply for an EZweb subscription. If you did not apply when you purchased your phone, contact your nearest au shop or the au Customer Service Center.



 
In addition to an EZweb subscription, you also need to perform an initialization procedure before you can use EZweb. If you have not performed initialization yet, refer to “Initializing E-mail and EZweb” (page 20).

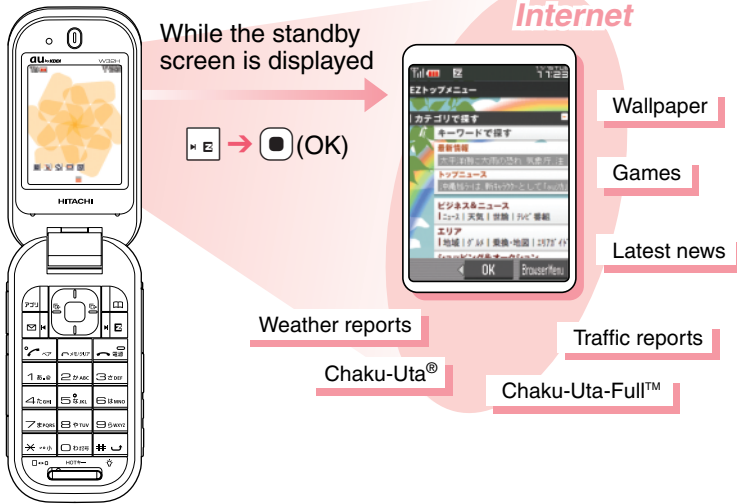
EZweb provides you with access to Chaku-Uta®, the latest news, and other web-based contents.



# Displaying the EZ Top Menu

1

While the standby screen is displayed, press , use  to select "Top Menu," and then press  (OK).

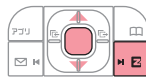


①	<b>カテゴリで探す</b> (Search by category) Searches for a site by category
②	<b>キーワードで探す</b> (Search by keyword) Searches for a site with a keyword
③	<b>最新情報</b> (Latest Information) Introduces the list of new special features or contents started at EZweb
④	<b>トップニュース</b> (Top News) Provides the automatically-updated latest top news
⑤	<b>ビジネス&amp;ニュース</b> (Business & News) Provides the latest information such as news, weather, share prices, and other information beneficial for business
⑥	<b>エリア</b> (Area) Provides information such as weather or map by districts
⑦	<b>ショッピング&amp;オークション</b> (Shopping & Auctions) Provides information about shopping malls where you can purchase goods with your cellphone and the information about the auction where you can put up or go for easily
⑧	<b>ライフ</b> (Daily life) Provides information beneficial for daily life
⑨	<b>ホビー&amp;カルチャー</b> (Hobbies & Culture) Provides the latest information about games, fortune-telling, music, e-books, and information about hobby and entertainment trends
⑩	<b>au style</b> Introduces au-recommended information and sites
⑪	<b>とくする情報</b> (Valuable Information) Provides presents and beneficial information exclusively for EZweb service subscribers for free
⑫	<b>EZサービスで探す</b> (Search by useful EZ services) Introduces useful and amusing recommended services special to EZweb
⑬	<b>料金・申込・インフォ</b> (Charges, Applications, and Info) Provides phone bills, procedures, au information, and au on-line manuals
⑭	<b>災害用伝言板</b> (Disaster Message Board) Registers/checks the safety information in disasters
⑮	<b>ENGLISH</b> Introduces English sites


## CAUTION


- ◎ The layout and contents of the EZweb screens are example. These are subject to change.
- ◎ Some sites charge for content in addition to call charges.

# Bookmarking Sites You Frequently Access




**1** Display the site you want to bookmark, and press  (BrowserMenu).

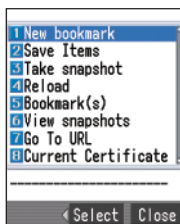



**2** Press  (New bookmark).

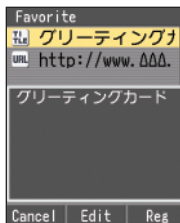※ You may not be able to bookmark some sites.




**3** Press  (Reg).



**4** Use  to select a folder, and then press  (OK).

The message “Registered” appears when completed.

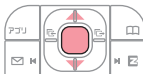


## Info



You can have up to 100 sites bookmarked in the Favorite Site list.



# Viewing a Bookmarked Site






**1** While the standby screen is displayed, press .



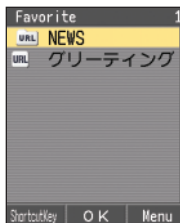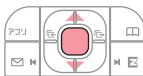

**2** Use  to select “Favorite Site,” and then press  (OK).

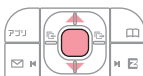

**3** Use  to select a site or folder, and then press  (OK).







If you selected a folder, use  to select a site and then press  (OK).



# Downloading Chaku-Uta®





To download a Chaku-Uta®, perform step 1 under “Displaying the EZ Top Menu” (page 67), and then perform the following steps.

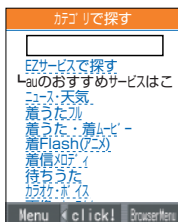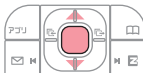- 1** Use  to select “カテゴリで探す” (Search by Category), and then press  (OK).



- 2** Use  to select “着うた・着ムービー” (Chaku-Uta®/Chaku-Movie), and then press  (Select).

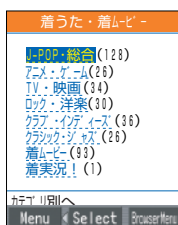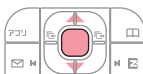

- 3** Select the content (site) you want to use, and then download it.

In order to use fee-based contents, you need to enter your EZ password or premium EZ password.

EZ Password:

This is the 4-digit number you specified when you originally subscribed to the fee-based contents.

Premium EZ Password:

This is the 4 to 8-digit number you registered for your first “まとめてau支払い” (combined au payment service) payment.

Input the required password in accordance with the instructions that appear on the display. The first time you use a site, register the password you want to use.

To download information, follow the instructions that appear on the display.

Downloaded data is stored in the Data Folder.

## CAUTION

In addition to call charges, you will be charged in accordance with the pricing policy of each site to download Chaku-Uta® and other contents from a fee-based site.




## Info



Perform the same procedure to download wallpaper and use it for the standby screen background.






# Downloading Chaku-Uta-Full™



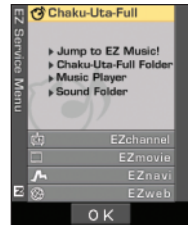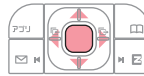


- 1** While the standby screen is displayed, press , use  to select “EZ SERVICE,” and then press  (OK).

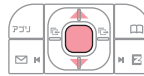

- 2** Use  to select “Chaku-Uta-Full,” and then press  (OK).



- 3** Use  to select “Jump to EZ Music!,” and then press  (OK).

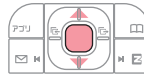

This operation connects the phone to “EZ Music!”. For the operations after connecting, follow the instructions displayed on the screen.

## Info


 
 
You can also download Chaku-Uta-Full™ by selecting “着うたフル” (Chaku-Uta-Full™) performing step 2 under “Downloading Chaku-Uta®” (page 70).

# Checking Charges

You can check call and transmission charges.






1

While the standby screen is displayed, press  1  1 .



2

Use  to select the item you want to check, and then press  (Select).

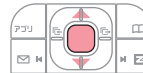


# EZ Channel

EZweb subscription required


EZ Channel is au's unique mobile program delivery service that latest contents are automatically delivered to you to enjoy just like TV programs or magazines simply by registering your favorite programs on W32H.

## ■ Displaying EZ Channel Menu

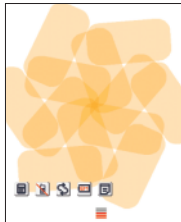


Standby screen

Use to select "EZ Service Menu" and then press (OK).

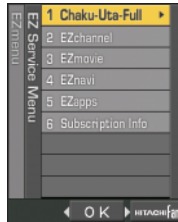

EZ Service Menu

Use to select "EZchannel" and then press (OK).

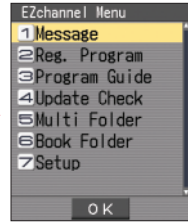

EZ Channel Menu

## ■ Enjoying EZ Channel

### ① Register the programs you are interested in.

You can register up to 3 programs from "Program Guide".

They are downloaded automatically since late night to early morning, and then saved in "Reg. Program".



© ナノ・メディア  
© スポーツ・アイネットワーク  
© 伊藤忠商事




### ② Playback the program.

You can watch the program saved to "Reg. Program" whenever you want.



© weathernews  
© 時事通信/アクセス・パブリッシング  
© SCN

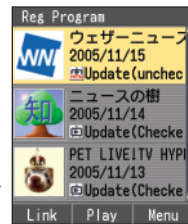

### ③ Save the program.

When a registered program is updated, the program is overwritten with new one. You should save the programs you do not want to delete in "Multi Folder" etc.  
※ In some cases, you may not be able to move a program because of copyright protection.




## Info

- ◎ You need to perform an initialization procedure before you use EZ Channel. If you have not performed initialization yet, refer to "Initializing E-mail and EZweb" (page 20).
- ◎ With EZ Channel service, you will get a relatively large-sized data by each program (maximum of about 3MB). To cost less, you may want to subscribe to Packet Communication Discount Service before use.
- ◎ When the scheduled delivery time comes, the programs are automatically downloaded. Turn on the cellphone with its battery pack full, and put it in the area where reception condition is good.
- ◎ The display layout and contents are examples. These are subject to change.

# EZ Navi Features


EZweb subscription required

EZ Navi uses global positioning system (GPS) information to provide you with a wealth of useful information. You can use “EZ Navi Walk” that navigates you to your destination, “Position Search” that allows you to check where your child is, and “Area Message” that lets you know when your child is coming close to destination.

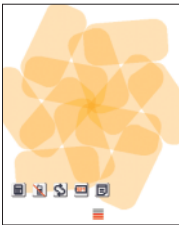


Standby screen

Use to select “EZ Service Menu” and then press (OK).

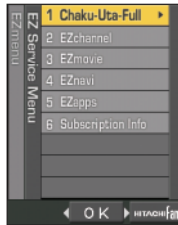

EZ Service Menu

Use to select “EZnavi” and then press (OK).

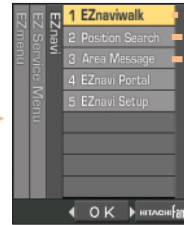

EZnavi menu

## When you wonder where your child is: “安心ナビ位置確認” (Position Search)




This is a service that you can check the position of an au cellphone supporting “Position Search” by the operation on W32H. There are two kinds of services: “位置確認メール” (Position Search Mail) (free) that sets a specified cellphone to let you know where it is, and “いつでも位置確認” (Auto Position Search) (fee-based) that allows you to search the location of a specified au cellphone with no operation on it.




## When you want to be notified of a specified period of time or area: “安心ナビエリア通知” (Area Message)

You can set other cellphones as specified number and specified area to let you know when his/her arrival/leaving information. You can also set this information automatically send to another au cellphone.

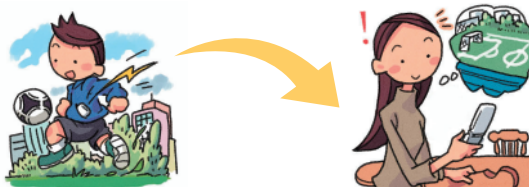

## “Going-out Menu”

A menu of useful options you can use while you are out.

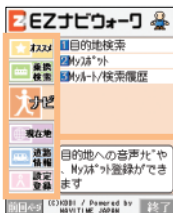

オススメ (New)	The latest news and featured information ※“おためしナビ” (Navi Demo) provides a sample of voice navigation.
乗換検索 (Transfer Search)	Searchable source of train transfer and timetable information
ナビ (Navigation)	Voice navigation to a specific destination, and “My Spot” registration
現在地 (Current Location)	Searchable source of maps, shops, and other information about your current location
道路情報 (Traffic Information)	Searchable source of real-time Japan-wide traffic information
設定登録 (Setup and Registrations)	Setups, membership registration, etc.

### “Return Home”




Search result screen

Select “ルート案内開始” (Start Route Guidance) → “はい” (OK)



Simply preset the location of your home for easy navigation back there from any other location. Useful information includes train transfers and estimated time of arrival.

### “My Spot”

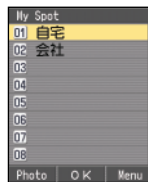

Just register destinations you often visit, your home location, and your favorite destinations (place of work, friend’s house, shops, etc.) for quick and simple navigation when you need it.

### “View My Map”




Map screen

Your initial location is indicated by ★. Changes in your location are indicated in real time by 人.

When you are in an area that is unfamiliar to you or if you lose your way, simply select “View My Map.” This will display a map showing your current location in real time.

### “E-Mail My Map”

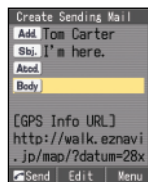

You can e-mail a map of your current location to another phone, which can then use the map to navigate to your location.

### Info

- In addition to packet communication fee, you may be charged some other fees for using EZ Navi.
- The display layout and contents are examples. These are subject to change.

# Security Navi Features

EZweb subscription required

## Position Search Features

When your child does not come home early and you are anxious if your child may be lost, you can check the current position of your child by a map with a simple operation. There are two kinds of services of “Position Search”: “Position Search Mail” and “Auto Position Search”.

### 1

### “位置確認メール” (Position Search Mail)



#### Features

- The mother can send a mail with a message to her child.
- The child can check the message from his/her mother and inform her where he/she is now.

Example: When the mother sent a mail to her child:

### 2

### “いつでも位置確認” (Auto Position Search)



#### Feature

- When the mother searches where her child is, she can be notified where her child is, although her child does not make any operation. This service is recommended to little children who are not accustomed to cellphone operations.

Example: When the mother sent a mail to her child:

Notice: The monthly fee is charged separately.

## Area Message Features

When the child approaches a specified area at a specified period of time that the mother has set beforehand, her cellphone receives a notification of it automatically from her child's cellphone.

### “安心ナビエリア通知” (Area Message)



Example: When the mother checks the area her child is in:

#### Feature

· This feature makes it quite safe and secure when your child goes to Juku (cram school) or culture lesson and you are anxious of your child's way home. The child's cellphone automatically informs the mother's cellphone that the child has passed the usual route.

#### Info


- ◎ Security Navi services are available only among the cellphones supporting that feature.
- ◎ The packet communication fee is charged separately for obtaining information or displaying map.
- ◎ Confirm the terms of service and agree to it before you use Security Navi.
  - ※ The other side also needs to agree to the terms of service before using the service.
- ◎ You must set the navi password before you use Security Navi.
- ◎ When the other side is out of range, set to "reject", no application, operating, or using a cellphone not supporting the service, you cannot check the position.
- ◎ The screen is an image, and may differ from the real display.
- ◎ If you disable C-mail, you cannot use Security Navi features.
- ◎ The toll pay for the mails for this service are not applied to Family C-mail or Packet Communication Discount Service.

The W32H allows you to listen to the FM radio.

## Before using EZ·FM

### ■ Connecting Hitachi remote controller with microphone 01 and stereo earphones (sample)

- ① Connect Hitachi remote controller with microphone 01 to stereo earphones (sample).
- ② Open the cap of the flat-type earphone-microphone jack of W32H, and then connect Hitachi remote controller with microphone 01.

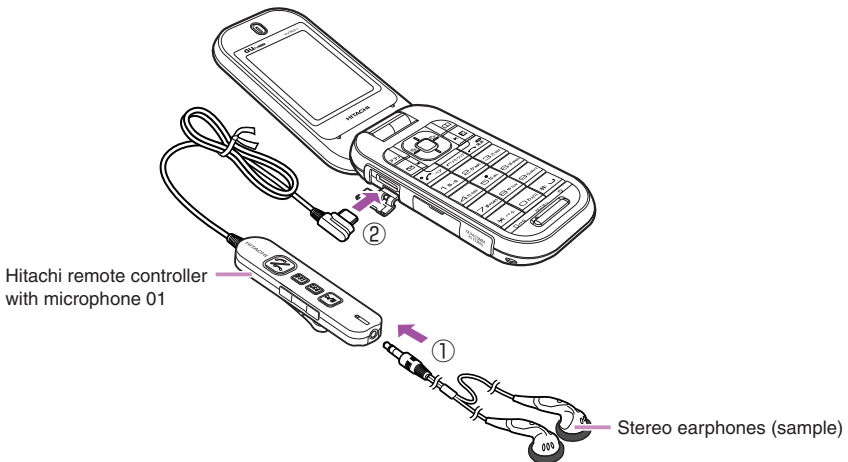

### ■ To listen to the EZ·FM clearly


In places like a room where reception condition is not good, you may not be able to listen to the EZ·FM. In such case, try the measures below.



- The cable of Hitachi remote controller with microphone 01 works as an antenna. Connect Hitachi remote controller with microphone 01 and stereo earphones (sample) to W32H, extend the cable as much as possible, and then try to search for the best direction for listening to the EZ·FM.
- Radio wave comes from outside, so try to listen to the EZ·FM as close as possible to the window.






# Listening to the EZ-FM

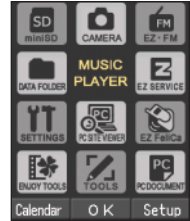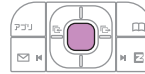



**1** While the standby screen is displayed, press .



**2** Use  to select “EZ-FM,” and then press  (OK).

The EZ-FM is received and  appears.

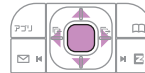



Frequency area 

NOW ON AIR display area 

EZ-FM screen


**3** Press .

You will be able to use  to select area. Select the area you are in, and then press  to operate.




## Info



- ◎ When you use EZ-FM for the first time, the precautions will be displayed. Read the precautions, and if you select “以降確認なし” (No confirmation hereafter), they will not be displayed from next time on.
- ◎ When you use EZ-FM for the first time, the display to select an area appears. Select an area where you use the EZ-FM.
- ◎ The specification is subject to change without notice.

 Continued on the next page

## ■ Adjusting the volume

 


Press  on the EZ·FM screen to adjust the volume.





	Decreases volume.
	Increases volume.

※ There are ten levels for the volume.

## ■ Tuning the radio frequency


Press  on the EZ·FM screen, and then use  to select the frequency area and press .




	By 0.1MHz tuning
 (hold down for about one second)	Automatic tuning

## ■ Displaying “NOW ON AIR” information



 You can obtain the information such as the name of the tune, the artist and the broadcasting station of the currently air-played tune.

Press  (NOW ON AIR) on the EZ·FM screen.



The name of the tune, the artist, etc. will be scroll-displayed. This information may not be displayed depending on the program.

## ■ Switching the speakers

Press  (TOOL) on the EZ·FM screen, and then press  (スピーカー切り替え) (Switch the Speakers).




You can set to “イヤホン” (Earphone) or “スピーカー” (Speaker).

# Suspending/Stopping the EZ·FM



Suspends/stops the EZ·FM apps. Even after suspending the EZ·FM apps, you can listen to the EZ·FM as a BGM.

1

Press  on the EZ·FM screen.

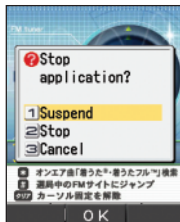

2

 Press  (Suspend) or  (Stop).



Suspend	Suspends the EZ·FM apps. However, you can continue listening to the EZ·FM.
Stop	Stops the EZ·FM.

EZ FeliCa is a service available for the cellphones loading the technology of contact-free IC cards called FeliCa. Simply by holding W32H over reader/writer (external device)\*, you can use W32H for shopping by using e-money or use it as member's cards, point cards, and so on.

When you use EZ FeliCa, you need to download the applications of the provider of the service you want to use.

“電子マネー「Edy」” (“Edy”, the e-money) is prepared at the time of purchasing.

→ “Using FeliCa-supported EZ apps” (page 85).

※ Devices equipped on the electronic cash registers of stores, etc, that exchange data for FeliCa chips.

## EZ FeliCa Features

### Member's Card

Available as member's cards or point cards.

### Transportation Ticket

You can check in simply with your cellphone.


### Shopping

You can shop using the e-money or credit card functions of your cellphone.

au network

You can check the history of use or the balance on the display of the cellphone.

You can make online charge or perform various procedures anytime, anywhere.

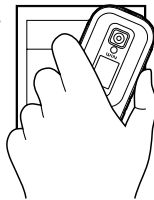

## Notes on Using EZ FeliCa

- Keep your W32H cellphone safe from loss. In case your cellphone is lost, please contact the service company for details about EZ FeliCa-supported service.
- We recommend that you set FeliCa lock or remote lock in case of loss or theft.
- We accept no responsibility for loss or damage of your data caused by theft, loss or malfunction of your W32H cellphone.
- Your security codes and passwords are to be highly confidential and protected.
- Contact the service company for further details about FeliCa-supported EZ apps.
- Some of the EZ FeliCa service are subscription dependant.


# Communicating with reader/writer

You can use EZ FeliCa simply by holding the FeliCa mark over reader/writer.



1


Hold the FeliCa mark of W32H over reader/writer.

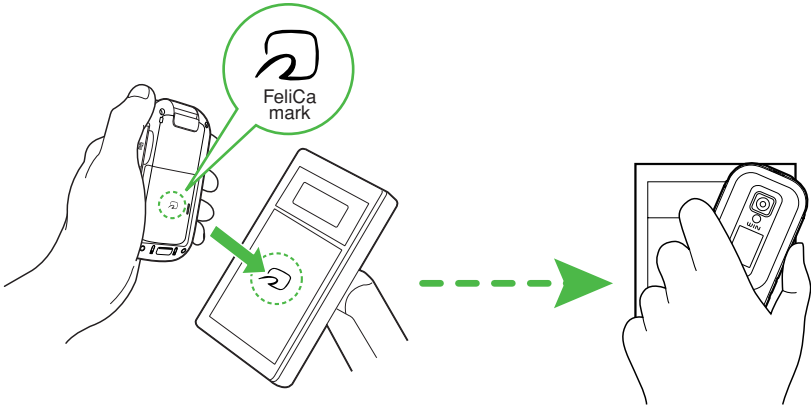





## Info

 
- ◎ You can use EZ FeliCa without starting FeliCa-supported EZ apps.
- ◎ EZ FeliCa is available even when the power is turned off. However, when the battery level is very low, you may not be able to use EZ FeliCa.
- ◎ Be careful not to bump the FeliCa mark against reader/writer when holding it.

# Setting FeliCa lock

You can restrict the use of EZ FeliCa by setting FeliCa lock. Incidentally, you can temporarily release the FeliCa lock and use EZ FeliCa for a certain period of time by holding down  for about one second while the standby screen is displayed and entering the lock number (quick release).

**1** While the standby screen is displayed, press    .



**2** Press  (ON), and then enter the lock number.


The FeliCa lock is set.



## CAUTION

If the battery exhausts while the FeliCa lock is on, you will be unable to release the FeliCa lock. Be careful of the battery level.

## Info

- When FeliCa lock is set,  appears on the standby screen.
- In case you lost W32H, you can set the FeliCa lock by setting remote lock. Incidentally, remote lock requires the initial setup beforehand.
- Even if you set auto lock, the FeliCa lock will not be set.




## Releasing FeliCa lock temporarily (quick release)

- ① When the FeliCa lock is on, hold down  for about one second while the standby screen is displayed, and then enter the lock number.

The vibrator works, “FeliCa Lock Quick Releasing” is displayed and the FeliCa lock is temporarily released.

## Info



- If you press  or when “MomentaryRelease” (300 seconds is set at the time of purchasing) elapses, W32H returns to FeliCa lock status.
- You cannot start FeliCa-supported EZ apps while FeliCa lock is temporarily released.



# Using FeliCa-supported EZ apps

“電子マネー「Edy」” (“Edy”, the e-money) is prepared as FeliCa-supported EZ apps in W32H at the time of purchasing.


## Starting FeliCa-supported EZ apps

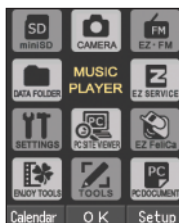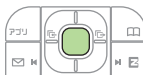- 1 While the standby screen is displayed, press .



- 2 Use  to select “EZ FeliCa,” and then press  (OK).

EZ FeliCa menu appears.

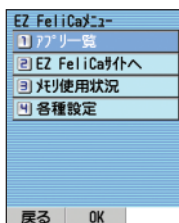

EZ FeliCa menu

- 3 Press  (アプリ一覧) (EZ apps List).

The list of the FeliCa-supported EZ apps saved in W32H is displayed.  
Select the EZ apps you want to start.



# PC site viewer Features


EZweb subscription required

## 1 You can view WEB sites for PC with W32H

A WEB site for PC



Viewing a site with PC site viewer

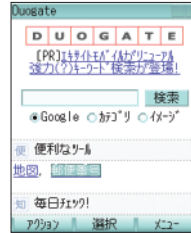

The content displayed is an example, and it may differ from the contents that actually appear on the display of your phone.

If you set the “表示モード” (Display Mode) to “スモールスクリーン” (Small Screen), a WEB site is displayed adjusted to the size of W32H screen, and you can view the site with simple (⏪) operations.

If you set the “表示モード” (Display Mode) to “PCスクリーン” (PC Screen), the portion of the page laid out by PC screen is displayed, and you can view the site with (⏪) operations.

## 2 You can display/automatically-update a portion of WEB site information. “Using Standby Assignment” (page 88)

Registering to “待受指定” (Standby Assignment)



Displaying as “Standby screen”



Select a portion of a WEB site page beforehand, and then register it to “待受指定” (Standby Assignment).

Display a portion of a WEB site page, and you can automatically-update it at specified intervals.



If you press (⏪) (接続) (Connect) while “待受指定” (Standby Assignment) is displayed, you can display from the top of the page with a full-screen and operate the PC site viewer in the same way as the usual browsing.




# PC site viewer



To use the PC site viewer, an EZ WIN course subscription is required. If you did not apply when you purchased your cellphone, contact your nearest au shop or the au Customer Service Center.




Using the PC site viewer, you can comfortably view the WEB sites that you usually view with your PC, by high speed packet communication of 2.4 Mbps down at maximum.





## Mastering Operation Basics

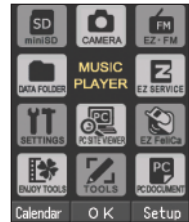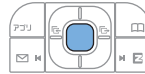
- 1** While the standby screen is displayed, press .




- 2** Use  to select “PC SITE VIEWER,” press  (OK), and then press  (OK).

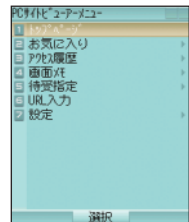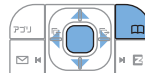

Warning message on packet communication appears.


- 3** Press  (トップページ) (Top Page).

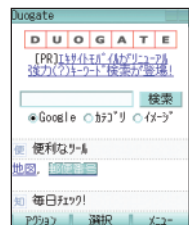

“Duogate” (<http://duogate.jp/>) is set.

※ The contents displayed on the top page on the right is an example, and it may differ from the contents that actually appear on the display of your phone.

- 4** Press .

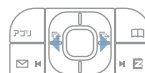

The display scrolls.

Use  to select the links on the screen.

If you select a link and press  (選択) (Select), the linked page appears.

# Using Standby Assignment




You can set a portion of a WEB site as the standby screen. You can set it to be automatically-updated at specified intervals.


When a specified time elapses on the standby screen, the WEB site selected by “待受指定” (Standby Assignment) is displayed.

To use “待受指定” (Standby Assignment), perform steps 1 through 4 under “Mastering Operation Basics” (page 87), and then perform the following steps.


**1** Display your favorite page, and then press (メニュー) (Menu).

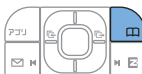

**2** Press (待受指定) (Standby Assignment).

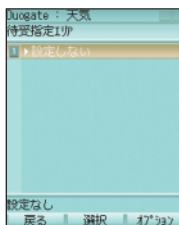

**3** Press (オプション) (Option), and then press (新規作成) (Create New).

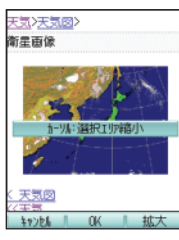




**4** Press (OK) twice.

If you press , you can shrink the area displayed by “待受指定” (Standby Assignment).

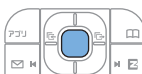

If you press (拡大) (Widen) and press , you can enlarge the display area.



※ If you press (縮小) (Narrow) again, you can shrink the display area.




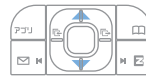
**5** Press  (編集) (Edit), enter the title, and then press  (OK).




**6** Press  (登録) (Register), and then press  (設定) (Setting).

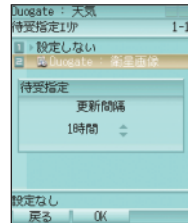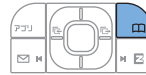


**7** Use  to select the interval to update the standby screen.



If you select the interval to automatically-update the page displayed as the standby screen from among “24時間/12時間/8時間/4時間/2時間/1時間/30分/更新しない” (24 hours/12 hours/8 hours/4 hours/2 hours/1 hour/30 minutes/no update), and press  (OK), then “待受指定警告表示” (Standby Assignment Warning Display) appears.

Press  (OK), and then press  (OK) to complete the setting.

### CAUTION

- ◎ Precautions for using packet communication for PC site viewer  
We recommend you apply for Packet Communication Discount Service subscription as the communication fee may be quite high by performing a large-size communication such as viewing homepages that include large images.  
Also, be careful that packet communication fee will be charged for each updating if you set automatic-update by “待受指定” (Standby Assignment).
- ◎ Checking your packet communication fee  
You can use Charge Reference Service (This service estimates this month's packet communication fee with no discount. The rough number was billed 1 or 2 days ago.).  
PC ⇒ au Online Customer Service (<https://au-cs0.kddi.com/AuHome>)  
au phone ⇒  → “Top Menu” → “料金・申込・インフォ” (Charges, Applications, and Info)

# Teens Mode

Teens Mode can be used to block spam, and to block inadvertent access to phone numbers and URLs included inside of mail messages. Teens Mode can also be used to restrict call time and the number of mail sendings.



## Using Teens Mode

■ **Teens Mode can be used to restrict mail reception and display contents.**

When the sender is a Pair partner	Receipt is allowed.
When the sender is included in the address book	Receipt is allowed. However, none of the phone numbers, e-mail addresses or URLs contained in the body of the mail message can be used.
When the sender is neither of the above	E-mail: Only the sender's name and subject are received. Body text and attached data are not received. C-mail: Not received.

■ **Turning on “Teens Restrict (M44#)” and Teens Mode makes it possible to restrict call time and the number of mail sends.**


### ● Making a Call



To someone who is a Pair partner	No restriction
To someone who is not a Pair partner	Call time is restricted. Further calling is not possible if the call time exceeds the “Teens Restrict (M44#)” setting.



### ● Sending a Mail



To someone who is a Pair partner	No restriction
To someone who is not a Pair partner	The number of sendings is restricted. Further mailing is not possible if the number of sendings exceeds the “Teens Restrict (M44#)” setting.


# Turning on Teens Mode

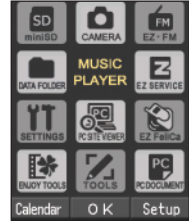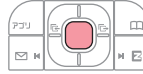
**1** While the standby screen is displayed, press .



**2** Use  to select "TOOLS," and then press  (OK).

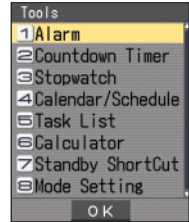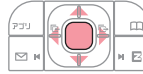

**3** Press  (Mode Setting), and then  (Teens Mode).

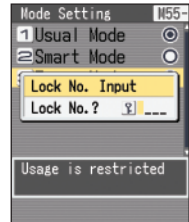

**4** Enter the lock number.



## Info




The lock number is required when changing from Teens Mode to Usual Mode or Smart Mode.



# Smart Mode

 
Smart Mode lets you limit operations to the telephone function, address book, camera, e-mail, C-mail, EZweb, and other frequently used functions, which simplifies operation.




## Entering Smart Mode

- 1 While the standby screen is displayed, press , use  to select "TOOLS," and then press  (OK).

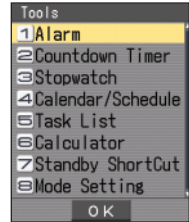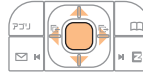

- 2 Press  (Mode Setting).

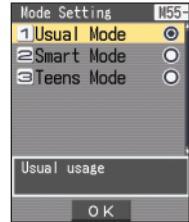


- 3 Press  (Smart Mode).







### Info



- ◎ The lock number is required when changing from Teens Mode to Smart Mode.
- ◎ When you enter Smart Mode, Smart Mode settings are automatically changed to those configured on the phone before you entered Smart Mode.


# Exiting Smart Mode

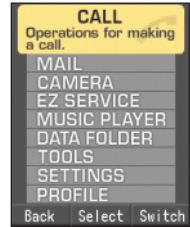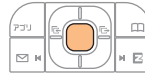
**1** While the standby screen is displayed, press .



 **2** Use  to select "SETTINGS," and then press  (Select).

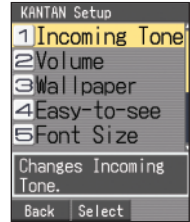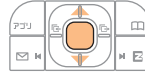

**3** Press  (SmartMode OFF).

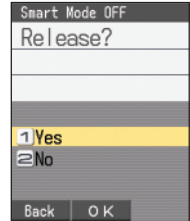


**4** Press  (Yes).


This returns to Usual Mode.



# Using the Smart Mode Main Menu

Smart Mode has its own main menu.

You can switch between the two available Smart Mode main menu styles by pressing  (Switch).

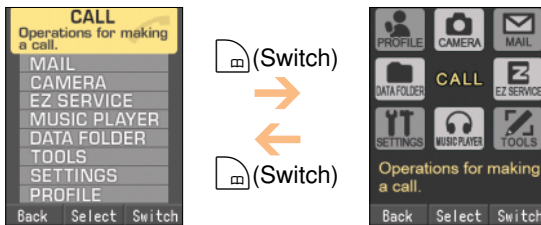


Menu		Description
CALL	Address Book	For using the address book, outgoing records and incoming records, and for registering data in the address book
	Outgoing Records	
	Incoming Records	
	AdrBookReg	
MAIL	E-Mail	For composing and reading E-mail and C-mail messages, and for changing E-mail addresses
	C-Mail	
CAMERA	Photo1	For selecting the photo or movie recording, and the correction method
	Photo2	
	Movie1	
	Movie2	
	Correction	
EZ SERVICE	Chaku-Uta-Full	For using EZ services
	EZchannel	
	EZmovie	
	EZnavi	
	EZapps	
	EZweb	
MUSIC PLAYER		For using Music Player
DATA FOLDER	Data Folder	For viewing and deleting data in the Data Folder or miniSD memory card
	miniSD	





Menu		Description
<b>TOOLS</b>	Calendar	For using the calendar, calculator, and other tools
	Calculator	
	Alarm Clock	
	Countdown Timer	
	Stopwatch	
	PC site viewer	
	PC document	
	EZ FeliCa	
<b>SETTINGS</b>	Incoming Tone	For changing the incoming tone, wallpaper, and character size, for turning Manner Mode on and off, and for turning Smart Mode off
	Volume	
	Wallpaper	
	Easy-to-see	
	Font Size	
	Voice Mail	
	Manner Mode	
	Toll/Inquiry	
SmartMode OFF		
<b>PROFILE</b>		For displaying your current phone number and e-mail address


# Adding Data to the Address Book in Smart Mode



  
**1** While the standby screen is displayed, press .

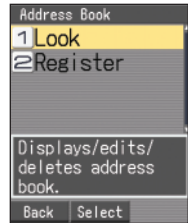


 
**2** Press  (Register), and then press .


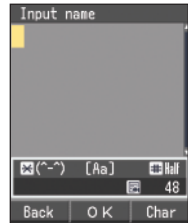


**3** Enter the name, and then press .


To input text  
→ “Inputting Characters” (page 106)

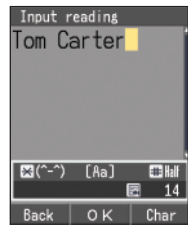

**4** Check the reading of the name you inputted, and then press .

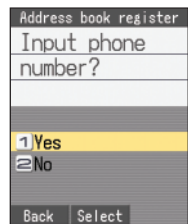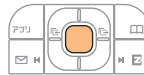


## 5 Press **1** (Yes).

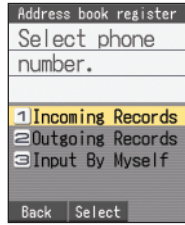


## 6 Press **3** (Input By Myself).

You can also select data in incoming records or outgoing records.

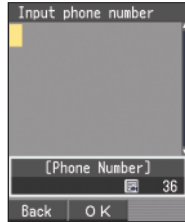


## 7 Enter the phone number, and then press **OK**.

When entering the number of a standard phone, be sure to start with the area code.

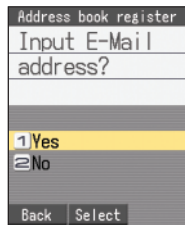


## 8 Press **2** (No).

If you do not want to input an e-mail address, press **2** (No), and then advance to step 11.

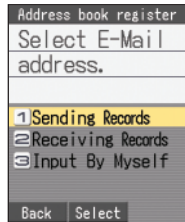


## 9 Press **3** (Input By Myself).

You can also select data in sending records or receiving records.

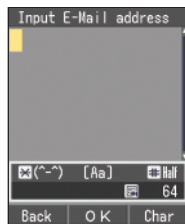


# 10 Enter the e-mail address, and then press (OK).


To input an e-mail address  
→ “Inputting an E-mail Address”  
(page 107)

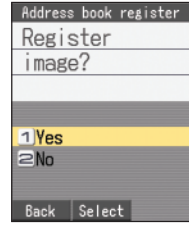




# 11 Press (No).

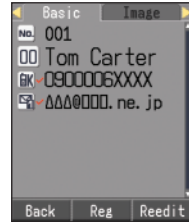

# 12 Press (Reg).

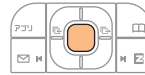

   
 
## Info


- ◎ In Smart Mode, you can input “Name,” “Reading,” “Phone Number1,” “E-mail Address1,” and “Image” data only into an address book record.
- ◎ You can press  (Yes) in step 11 to select a photo in the Data Folder and assign it to the address book record.
- ◎ Pressing  (Reedit) in step 12 and then pressing  (Yes) returns to step 3 from which you can edit the contents of the record.



# Using the Address Book in Smart Mode





Example: To view data in address book

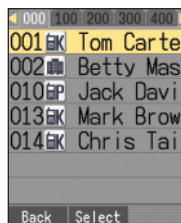

- 1** While the standby screen is on the display, press  and then press  (Look).



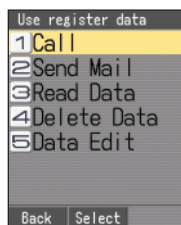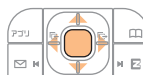

- 2** Use  to select the address book record you want, and then press  (Select).

 


- 3** Press  (Read Data).

The address book record appears. Use  to select the phone number, and then press  (Call).


To send an e-mail message, use  to select the e-mail address, and then press  (E-Mail). This will display the e-mail composition screen.

 (Call): Dials the number of the selected record.


 (Send Mail): Select to compose an e-mail message and send it to the address of the selected record.

To create an e-mail message

→ Perform the procedure starting from step 7 under “Creating and Sending E-mail Messages in Smart Mode” (page 100).


 (Delete Data): Deletes the selected address book record.


 
 (Data Edit): Select to edit the selected address book record.

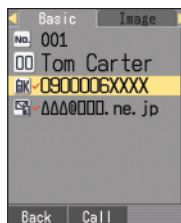


# Creating and Sending E-mail Messages in Smart Mode




  
**1** While the standby screen is displayed, press .

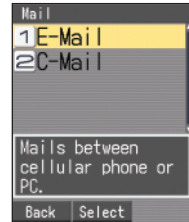


**2** Press  (E-Mail).

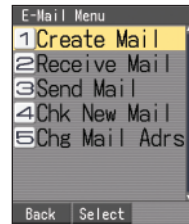


 

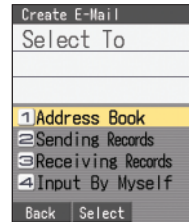**3** Press  (Create Mail).





**4** Press  (Address Book).

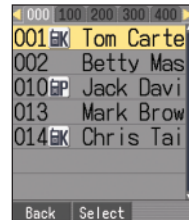You can select an addresses from outgoing/incoming records, or you can manually enter an address.





**5** Use  to select the address book record you want, and then press  (Select).

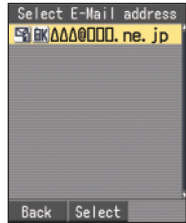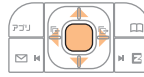



**6** Press  (Select).

In case you have already registered more than one e-mail address in the address book while you were in Usual Mode/Teens Mode, if you set to Smart Mode, only the e-mail address you usually use will be displayed.

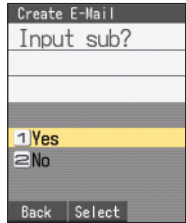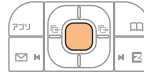


**7** Press  (Yes).

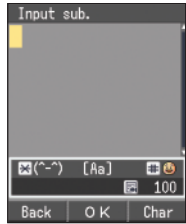


**8** Enter the subject and then press  (OK).

To input text  
→ “Inputting Characters” (page 106)

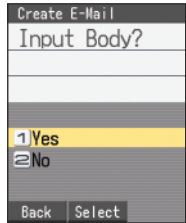


**9** Press  (Yes).

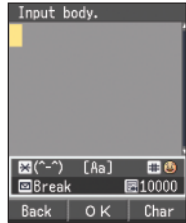


## 10 Enter the body text and then press (OK).


To input text  
→ “Inputting Characters” (page 106)

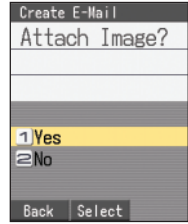


## 11 Press (No).

 You can also press  (Yes) to select a photo in the Data Folder or miniSD memory card and attach it to the e-mail message.

In Smart Mode, an e-mail message can have only one attachment.

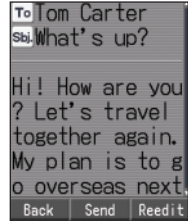

## 12 After checking the content of the e-mail, press (Send).

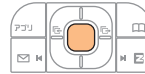

### Info



Pressing  (Reedit) instead of  (Send) in step 12 returns to step 4, from which you can edit the contents of the e-mail message.



# Shooting a Photo in Smart Mode



**1** While the standby screen is displayed, press , use to select “CAMERA,” and then press (Select).

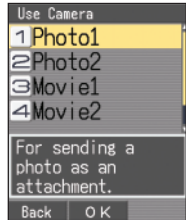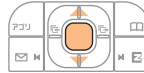


**2** Press (Photo1).

Photo 1	Wallpaper 240×320
Photo 2	VGA 640×480



**3** Point the lens at the subject, and then press (Shutter).

The phone will emit a shutter sound.  
You can also press in place of .

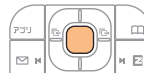

**4** Press (Menu) and then (Save).






## Info



Pressing (Menu) in step 4 and then pressing (Send Mail) will display a screen for composing an e-mail message with attached photo.  
To create an e-mail message


→ Perform the procedure starting from step 4 under “Creating and Sending E-mail Messages in Smart Mode” (page 100).


# Viewing Photos in Smart Mode



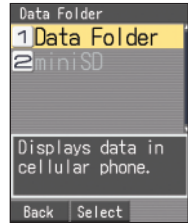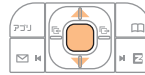

**1** While the standby screen is displayed, press , use  to select “DATA FOLDER,” and then press  (Select).





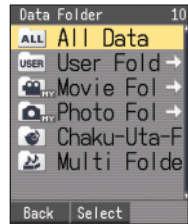

**2** Press  (Data Folder).




**3** Use  to select “Photo Folder,” and then press  (Select).

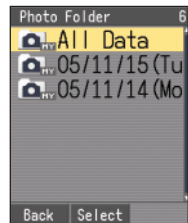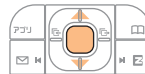

Selecting “All Data” displays a list of all photos in the Photo Folder.





**4** Use  to select the dated (by photos-shot date) folder, and then press  (Select).

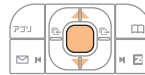A list of all photos that were shot on that day are displayed.




**5** Use  to select the photo you want to view, and then press  (Menu).

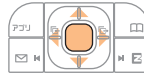

**6** Press  (Play).

The photo appears.

 (Delete): Deletes data.

 (Attach E-Mail):

Displays a screen for composing an e-mail message with an attachment.

To create an e-mail message

→ Perform the procedure starting from step 4 under “Creating and Sending E-mail Messages in Smart Mode” (page 100).

 (MoveTo miniSD): Moves the data to miniSD memory card.

 




 
 
 

 
 




# Inputting Characters

Input characters using keypad keys  through .

The table below shows the characters each key cycles through when you press it.



Key	Number of Presses								
	1	2	3	4	5	6	7	8	9
 1	.	@	-	_	/	:	~	1	
 2	a	b	c	A	B	C	2		
 3	d	e	f	D	E	F	3		
 4	g	h	i	G	H	I	4		
 5	j	k	l	J	K	L	5		
 6	m	n	o	M	N	O	6		
 7	p	q	r	s	P	Q	R	S	7
 8	t	u	v	T	U	V	8		
 9	w	x	y	z	W	X	Y	Z	9
 0	0 . @ - _ / : ! ? ~ ( ) * # + , ^ ; < = > \$ ¥ % & [ ] ' ` {   } ~ (Space)								
 * → #	Toggles between upper case and lower case (Example: a ⇌ A).								
 # ↵	Returns to the previous character.								

- In order to input consecutive characters that are assigned to the same key, press  to move the cursor and then press input the next character.

## CAUTION


### Allowable Characters in Your E-mail Address

Your e-mail address (the part to the left of “@”) can contain up to 20 characters, including single-byte English lower case letters, hyphens (-) and periods (.).

Two periods (.) in succession are not allowed, and a period cannot be used as the first/end character of an address. Also, a zero (0) cannot be used as the first character.

Characters and symbols that are shaded in the above table cannot be used to the left of “@” in the address format “△△△@ezweb.ne.jp”.

## Info

You can input a period (.) or “at” symbol (@) by pressing .

# Inputting an E-mail Address



## Inputting “mark@ezweb.ne.jp”

In this example, we will input “mark@ezweb.ne.jp” for “<E-Mail Adrs1>.” To input “<E-Mail Adrs1>,” perform steps 1 through 6 under “Registering an Address Book” (page 36), and then perform the following steps.

### 1


#### Input “mark.”

- To input “m”: Press once.
- To input “a”: Press once.
- To input “r”: Press three times.
- To input “k”: Press twice.




### 2

#### Press (Menu).

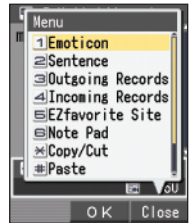

### 3



#### Press (Sentence).

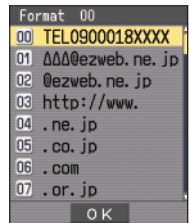

### 4

#### Use to select “@ezweb.ne.jp”, and then press (OK).

“mark@ezweb.ne.jp” is inputted.  
You could also input “@ezweb.ne.jp” by pressing .

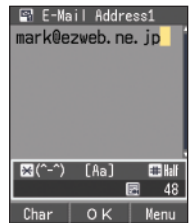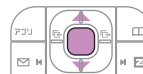


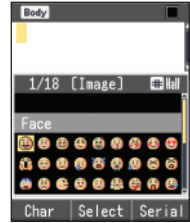
# Inputting Pictographs and Useful Sentences







The following procedure shows how to input pictographs and useful sentences on the text input screen.


**1** Press  (Char), and then  (Pictograph).



You can also select a pictograph by pressing .




**2** Use  to select the pictograph you want, and then press  (Select).

Use  and  to scroll through the various categories of pictographs.

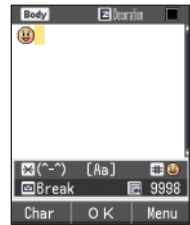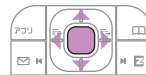

To input consecutive pictographs, press  (Serial).


 



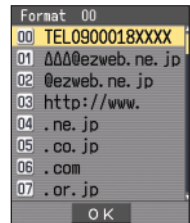
**3** Press  (Menu), and then  (Sentence).



# 4

Use  to select the useful sentence you want, and then press  (OK).

Here we will select “Happy birthday!”. You can also input “Happy birthday!” by pressing  .

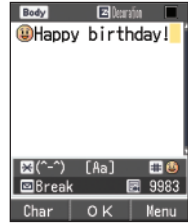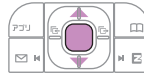
 


## Info


The following shows the input screens for symbols (double-byte) and emoticons.

### Symbol (Double-byte) Input





In step 1 of the above procedure, press  (Char) and then  (&@) to display the “FullSym” (double-byte symbol menu).
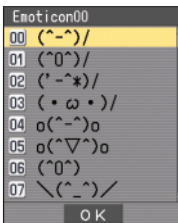
### Emoticon Input




In step 3 of the above procedure, press  (Emoticon) in place of  (Sentence) to display the emoticon menu.

You can also display the emoticon menu by pressing  in place of  (Menu) in step 3.

# Other Functions




## Hot Key Features


When you have Hot Key turned on, holding down  for about one second while the standby screen is displayed will dial a preset phone number or sound the Hot Buzzer.

### Hot Dial


With Hot Dial, holding down  for about one second will dial a preset phone number.

#### ■ To turn on Hot Dial

While the standby screen is displayed, press    , and then input the lock number.



Next, input the phone number you want to preset, and then press  (Reg).

### Hot Buzzer

With Hot Buzzer, holding down  for about one second will sound a loud-volume buzzer.



#### ■ To turn on Hot Buzzer

While the standby screen is displayed, press    , and input the lock number.

#### ■ To stop the Hot Buzzer

To stop the Hot Buzzer after it starts to sound, input the lock number.

※ You cannot turn off the phone or perform any other operation while the Hot Buzzer is sounding. The Hot Buzzer will continue to sound until you input the lock number or the battery fully discharges.





 

## Info

The Hot Buzzer sounds from the speaker of W32H even when you have stereo earphones (sample) (when connected to Hitachi remote controller with microphone 01)/flat-type switched earphone microphone (option)/flat-type stereo earphone-microphone (option) attached to your W32H.

# Extension Mode

Using the extension mode, W32H automatically shuts down the radio wave after issuing the Low Battery Alert. This is quite a useful function for the case, although available functions are limited, that you can still check Outgoing/Incoming Records, Content of e-mail, Address Book, Schedule and so on.

## To turn on Extension Mode

While the standby screen is displayed, press    .

Display example when you switch to Extension Mode



In addition to the functions covered in this Basic Manual, your W32H also has the following features.

### **Global Expert**

W32H supports Global Expert based on an IC card.

Global Expert is an international roaming service for the customers to use the phone replacing its IC card with GSM cellphone for overseas use. No special application procedure or daily/monthly fee are needed, and the call charge is added up to domestic call, so the pay procedure is simple.

### **PC Document Viewer**

You can display such data created with PC as Microsoft Word data, Microsoft Excel data, Microsoft PowerPoint data, HTML or mHTML data. With this feature, you can display such data in full-screen, enlarged or reduced, landscape-portrait switched or fitting.

### **Barcode Reader**

You can use the camera to read QR codes and barcodes.

### **EZ apps (BREW®)**

Enjoy downloaded games and other software.

### **Coupling Shot (Photo)**

Shooting with the screen separated to the left part and the right, then you can composite the left and the right photos to one combined photo.

### **Shooting Scene Setting (Photo)**

You can make the most suitable setting for the shooting scene such as figure or night view, etc.

### **Macro Mode (Photo and Movie)**

A simple operation of the macro switch on the upper side of the phone lets you move in to about 13 cm for intimate close-ups of food, flowers, and other subjects.

### **Serial Shot (Photo)**

You can shoot up to nine consecutive images and store all of them or only selected images in memory.

### **Post Recording/Telop (Movie)**

After recording a movie, you can add audio or text. You can select from among 24 colors for the text and 169 colors for the background.









 







### **Mail Navi (E-mail)**

Simply follow the steps provided for quick and easy composing of Basic Mail without attachments, Photo Mail, Doodle Mail, Movie Mail, and Exciting Mail.

### **Enjoy Tools**

Use these tools to make using your photos and movies, as well as downloaded data more enjoyable.

# Troubleshooting

Symptom	What to check	What to do	Page
<b>The phone does not turn on.</b> 	Is the battery pack installed correctly ?	Correctly install the battery pack.	—
	Is the battery pack charged ?	Charge the battery pack.	P.12
	Are you holding down  for at least 1.5 seconds ?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
<b>I can't make calls.</b> 	Is  (Out of Range) on the display ?	Wait until you are in a location where  is not displayed before trying to make a call.	P.14
	Are you including the area code?	When making a call to a standard phone, you need to input the area code and then the phone number.	P.26
	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
	Did you press  ?	After inputting the phone number, press  to dial it.	P.26
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
<b>I can't receive calls.</b>	Is  (Out of Range) on the display?	Move to a location where  is not on the display.	P.14
	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
	Is Emission OFF Mode turned on?	Turn off Emission OFF Mode.	—
<b>Nothing happens when I press the keys.</b>	Is the phone turned on?	Hold down  for at least 1.5 seconds to turn on the phone.	P.14
<b>The phone emits a warning tone and then turns off.</b>	Is battery pack power low?	Charge the battery pack.	P.12
<b>The phone answers calls automatically.</b>	Is Easy Voice Memo turned on?	Hold down  for about one second to turn off Easy Voice Memo.	P.34
	Is Drive Mode turned on?	Hold down  for about one second to turn off Drive Mode.	P.4
<b>I can't hear the caller.</b>	Is the earpiece volume level too low?	During a call, press  to increase earpiece volume.	P.33

# If you lose your W32H


 
Turning on Remote Auto Lock makes it possible for you to auto lock and FeliCa lock your W32H from a remote location, which keeps others from using it.




## ■ Configuring Remote Auto Lock Settings

You can set auto lock and FeliCa lock on your W32H by making unanswered calls several times from the registered phone number within the period of time which has been specified beforehand.


**1** While the standby screen is displayed, press

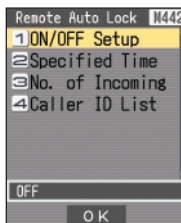

**2** Press **1あ.㊦** (ON/OFF Setup), input the lock number, and then press **1あ.㊦** (ON).

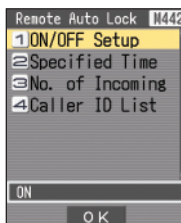

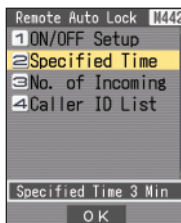


**3** Press **2かABC** (Specified Time), input the lock number, input the period you want to specify, and then press **OK** (OK).




This will set the period during which the specified number of unanswered calls must be received to trigger Remote Auto Lock.

You can specify a period of 1 to 10 minutes.

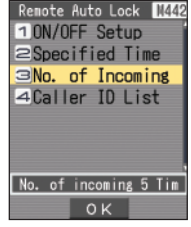


**4** Press  (No. of Incoming), input the lock number, input the number of calls you want to specify, and then press .




This is the number of unanswered calls that need to be received to trigger Remote Auto Lock. You can specify from 3 to 10 calls.

**5** Press  (Caller ID List), and then input the lock number.



**6** Use  to select a registration number, press  (Edit), input the phone number, and then press .



You can also press  (Menu) before inputting a phone number, and select the number from the address book, outgoing records, or incoming records, or you can specify a pay phone. You can register up to three different phone numbers.

## ■ Triggering Remote Auto Lock and FeliCa Lock

**1** Make a call to your W32H from the registered phone number within the period of time which has been specified in “Configuring Remote Auto Lock Settings” (page 114).

If the unanswered calls reach the specified number of times, remote lock is set to on, and then an announcement is played telling you that auto lock and FeliCa lock have been set. When auto lock is set to on, W32H will be automatically turned off, and then turned on again.

### CAUTION

Remote auto lock cannot be triggered while your W32H is turned off or outside of the service area.

# Index

## A

<b>Address Book</b> .....	36
Adding outgoing or incoming record data to the address book .....	40
Dialing from the address book .....	41
Editing .....	38
Registering an address book .....	36
<b>Adjusting the earpiece volume   during a call</b> .....	33
<b>Adjusting the ring tone volume</b> .....	32

## B

<b>Battery level</b> .....	14
<b>Battery pack</b> .....	10, 11

## C

<b>Camera</b> .....	54
Recording a movie .....	60
Shooting a photo .....	56
Viewing movies .....	62
Viewing photos .....	58
<b>Chaku-Uta®</b> Downloading .....	70
<b>Chaku-Uta-Full™</b> Downloading .....	71
<b>Changing the display   character size</b> .....	24
<b>Changing the ring tone</b> .....	30
<b>Charging the battery pack</b> .....	12
<b>Checking charges</b> .....	72
<b>C-mail</b> .....	45
C-mail safe block Function .....	45
Create New .....	52
Creating and sending C-mail messages .....	52
Reading received C-mail messages .....	53

## D

<b>Desktop holder</b> .....	10, 12
<b>Disaster Message Board Service</b> .....	6
<b>Display indicators</b> .....	17
<b>Display language</b> .....	15
<b>Domain name</b> .....	22
<b>Drive Mode</b> .....	4

## E

<b>Earpiece volume</b> .....	33
<b>Easy Voice Memo</b> Delete .....	35
Playback .....	35
Turning on .....	34

<b>E-mail</b> .....	44
Create New .....	46
Creating and sending e-mail messages .....	46
E-mail address .....	20, 21, 22
E-Mail Setup .....	51
Initial settings .....	20
Reading an e-mail message with an attached photo or movie .....	49
Reading received e-mail messages .....	48
Replying to a received e-mail message .....	50
Subject .....	47
To .....	46
<b>Extension Mode</b> .....	111
<b>EZ Channel</b> .....	73
<b>EZ FeliCa</b> .....	82
Communicating with reader/writer .....	83
FeliCa mark .....	83
Setting FeliCa lock .....	84
<b>EZ-FM</b> .....	78
Listening to the EZ-FM .....	79
Suspending/stopping the EZ-FM .....	81
<b>EZ Navi</b> .....	74
<b>EZweb</b> .....	66
Bookmarking sites .....	68
Downloading .....	70, 71
EZ Password .....	70
EZ top menu .....	67
Viewing a bookmarked site .....	69

## H

<b>Hot Buzzer</b> .....	110
<b>Hot Dial</b> .....	110
<b>Hot key</b> .....	110

## I

<b>Included items</b> .....	10
<b>Incoming records</b> .....	28
<b>Initial settings</b> E-mail and EZweb .....	20
W32H .....	15
<b>Inputting characters</b> .....	106
Inputting an e-mail address .....	107
Inputting pictographs .....	108
Inputting useful sentences .....	108

## K

<b>Key functions</b> .....	16
----------------------------	----

## M

<b>Mail</b>	
C-mail .....	45
E-mail .....	44
<b>Mail filter</b> .....	5, 51
<b>Main menu</b> .....	18, 94
<b>Manner Mode</b>	
Turning on .....	33
Vibrator .....	33
<b>Mind your manners!</b> .....	1
<b>miniSD memory card</b> .....	11, 17
<b>Movie</b>	
Movie Folder .....	62
Recording a movie .....	60
Rerecording a movie .....	61
Sending a movie by e-mail .....	64
Viewing movies .....	62

## N

<b>Names of parts</b> .....	11
<b>Notify caller ID</b> .....	26

## O

<b>One-ring calls</b> .....	5, 29
<b>Operation basics</b> .....	16
<b>Other functions</b> .....	110
<b>Outgoing records</b> .....	28
<b>Own e-mail address</b>	
Changing .....	22
Viewing .....	21

## P

<b>Pair Function</b> .....	42
Making a phone call or sending mail to a Pair partner .....	43
Registering a Pair partner .....	42
<b>PC site viewer</b> .....	86
Mastering Operation Basics .....	87
Using Standby Assignment .....	88
<b>Personal identification numbers and passwords</b> .....	25
<b>Phone</b> .....	26
Answering a call .....	27
Dialing a person who called you (incoming records) .....	28
Making a call .....	26
Missed call notification .....	27
Redialing a person you called (outgoing records) .....	28

<b>Photo</b>	
Photo Folder .....	58
Reshooting a photo .....	57

Sending a photo by e-mail .....	64
Shooting a photo .....	56
Viewing photos .....	58
<b>Playback</b>	
Easy Voice Memo .....	35
Movie .....	62
Photo .....	58

## R

<b>Ready</b> .....	10
<b>Redial</b>	
From incoming records .....	28
From outgoing records .....	28
<b>Remote Auto Lock</b> .....	114

## S

<b>Security Navi</b> .....	76
<b>Signal strength</b> .....	14
<b>Site</b> .....	67, 68, 69
<b>Smart Mode</b> .....	92
Adding data to the address book ...	96
Creating and sending e-mail messages .....	100
Entering Smart Mode .....	92
Exiting Smart Mode .....	93
Shooting a photo .....	103
Using the address book .....	99
Using the Main Menu .....	94
Viewing shot photos .....	104
<b>Soft keys</b> .....	19
<b>Spam</b> .....	5, 51
<b>Standby screen</b> .....	14

## T

<b>Teens Mode</b> .....	90
<b>Troubleshooting</b> .....	113
<b>Turning off power</b> .....	14
<b>Turning on power</b> .....	14

## U

<b>Unsolicited advertisements</b> .....	5, 51
<b>Using Menus</b> .....	19
<b>Using Photo Mail</b> .....	65

## V

<b>Viewing your phone number</b> .....	21
--	----

## For inquiries, call:

au Customer Service Center (General Information)

From regular phones:

 **0077-7-111**  
フリーコール (toll free)

From au cellphones:

**157** area code not required  
(toll free)

Pressing "zero" will connect you to an operator,  
after calling "157" on your au cellphone.




古紙配合率100%再生紙を使用しています



### モバイル・リサイクル・ネットワーク

携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the  logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Sales: KDDI Corporation  
Okinawa Cellular Telephone Company  
Manufactured by Hitachi, Ltd.

Read this to access to the  
au online manual



MN7100YAA-1  
August 2005, 1<sup>st</sup> Edition