

「おもいでケータイ タイムマシン」充電対象機種

下記3キャリア（au、DOCOMO、ソフトバンク）のスマートフォンは充電可能です。
フィーチャーフォンの対象機種は以下の通りです。

キャリア	種別	製品型番
	共通ACアダプタ02対応機種	GRATINA2, MARVERA2, MARVERA, GRATINA, あんしんGPS, mamorino3, AQUOS PAD SHT21, G'zOne TYPE-L CAL21, ARROWS ef FJL21, VEGA PTL21, AQUOS PHONE SERIE SHL21, PT003, AQUOS PHONE CL IS17SH, AQUOS PHONE SL IS15SH, ARROWS Z ISW13F, AQUOS PHONE SERIE ISW16SH, K011, K012, URBANO PROGRESSO, INFOBAR C01, GALAXY S II WiMAX ISW11SC, ARROWS ES IS12F, AQUOS PHONE IS14SH, MEDIAS BR IS11N, ARROWS Z ISW11F, DIGNO ISW11K, AQUOS PHONE IS13SH, F001, URBANO AFFARE, REGZA Phone IS11T, Mi-Look, MIRACH IS11PT, EIS01PT, IS12T, E31T, E10K, E09F, G'zOne IS11CA, S007, T007, CA007, INFOBAR A01, IS12SH, IS11SH, K009, T008, K010, mamorino2, G11, IS05, PT002, T006, REGZA Phone IS04, S006, K008, SH011, K007, IS06, DATA05, CA006, IS03, G'zOne TYPE-X, SH010, S005, X-RAY, T005, URBANO MOND, SH009, K006, PT001, LIGHT POOL, CA005, beskey, SH007, T004, S003, S004, SA002, SH008, K005, IS01, IS02, SH006, E08T, lotta, mamorino, K004, URBANO BARONE, SH005, PRISMOID, BRAVIA(R) Phone U1, SH004, E07K, CA004, CA003, SA001, SH003, S002, T003, PLY, K003, 私の犬のリンリン, ドツ・オプセッション, 水玉で幸福いっぱい, 宇宙へ行くときのハンドバッグ, Mobile Hi-Vision CAM Wooo, E06SH, misora, G'zOne CA002, Sportio water beat, K002, SH002, T002, biblio, E05SH, G9, CA001, H001, K001, P001, S001, SH001, T001, Walkman(R) Phone, Premier3, NS01, NS02, Walkman(R) Phone, Xmini, W64SH, W65T, W63CA, W63H, W64S, W62P, W65K, W64T, W64SA, W64K, W63K, Sportio, W63SA, re, URBANO, W62PT, W62H, W62SH, G'zOne W62CA, W62K, W62T, W62S, W62SA, W61SA, W61S, W61T, W61P, W61PT, W61H, W61SH, W61CA, W61K, W56T, INFOBAR 2, W55T, W54SA, W54S, W54T, W53S, W53H, W53K, W53SA, W53T, W53CA, W52CA, W52P, W52H, W52S, W52SA, W52SH, W52T, MEDIA SKIN, W51P, W51T, W51SH, W51SA, W51S, W51K, W51H, W51CA, W47T, DRAPE, W45T, W44TIII, W44TII, W44T, W44S, W44KII, W44K, W43T, W43SA, W43S, W43K, W43HII, W43H, W43CA, neon, W42SA, W42S, W42K, W42H, G'zOne W42CA, W41T, W41SH, W41SA, W41S, W41K, W41H, W41CA, W33SAII, W33SA, W32T, W32S, W32H, W31T, W31S, W31CA, A5529T, A5528K, A5526K, A5525SA, Sweets cute, A5523T, A5522SA, A5521K, A5520SAII, A5520SA, Sweets pure, A5518SA, A5515K, G'zOne TYPE-R A5513CA, A5512CA, A5511T, A1407PT, A1406PT, A1405PT, E03CA, E02SA
au	共通ACアダプタ03対応機種	AQUOS K SHF33, Qua tab PX LGT31, Qua phone PX LGV33, AQUOS U SHV35, AQUOS SERIE SHV34, Speed Wi-Fi NEXT W03 HWD34, Galaxy S7 edge SCV33, mamorino Watch ZTF31, GRATINA 4G, Qua tab 02, Qua phone, AQUOS SERIE mini SHV33, Galaxy A8, DIGNO(R) rafre KYV36, Qua tab 01, URBANO V02, AQUOS K SHF32, TORQUE G02, AQUOS SERIE SHV32, HTC J butterfly HTV31, isai vivid LGV32, Galaxy S6 edge SCV31, AQUOS K SHF31, INFOBAR A03, BASIO, GRATINA2, Speed Wi-Fi NEXT W01, miraie, AQUOS SERIE mini SHV31, Fx0 LGL25, isai VL LGV31, URBANO V01, MARVERA2, GALAXY Tab S SCT21, GALAXY Note Edge SCL24, ASUS Memo Pad(TM) 8, TORQUE G01, isai FL LGL24, URBANO L03, AQUOS SERIE SHL25, GALAXY S5 SCL23, AQUOS PHONE SERIE mini SHL24, AQUOS PAD SHT22, URBANO L02, G Flex, MARVERA, ARROWS Tab, あんしんGPS, isai, DIGNO(R) M KYL22, ARROWS Z FJL22, AQUOS PHONE SERIE SHL23, Wi-Fi WALKER WiMAX2+ HWD14, Wi-Fi WALKER WiMAX HWD13, GALAXY Note 3 SCL22, GRATINA, AQUOS PHONE SERIE SHL22, URBANO L01, HTC J One HTL22, INFOBAR A02 HTX21, mamorino3, HTC J butterfly HTL21, AQUOS PAD SHT21, G'zOne TYPE-L CAL21, ARROWS ef FJL21, DIGNO S KYL21, Optimus G LGL21, VEGA PTL21, GALAXY S III Proge SCL21, AQUOS PHONE SERIE SHL21, PT003, AQUOS PHONE CL IS17SH, AQUOS PHONE SL IS15SH, ARROWS Z ISW13F, AQUOS PHONE SERIE ISW16SH, HTC J ISW13HT, URBANO PROGRESSO, INFOBAR C01, GALAXY S II WiMAX ISW11SC, ARROWS ES IS12F, AQUOS PHONE IS14SH, MEDIAS BR IS11N, ARROWS Z ISW11F, Wi-Fi WALKER DATA08W, DIGNO ISW11K, AQUOS PHONE IS13SH, F001, htc EVO 3D ISW12HT, Optimus X IS11LG, REGZA Phone IS11T, MIRACH IS11PT, EIS01PT, IS12T, IS03, IS05, IS06, G'zOne IS11CA, INFOBAR A01, IS12SH, IS11SH, DATA06
その他		A1404S, A5509T, PENCK (W31H), Sweets (A5510SA), W31K, W31SA, A1304T II, A1305SA, A1402S, A1402S II, A1403K, A5405SA, A5406CA, A5407CA, A5502K, A5504T, A5505SA, A5506T, A5507SA, talby (A5508SA), W21CA, W21H, W21K, W21S, W21SA, W21T, W22H, W22SA, A1301S, A1302SA, A1303SA, A1304T, A1401K, A5303H, A5303H II, A5304T, A5305K, A5306ST, A5401CA, A5401CA II, A5402S, A5403CA, A5404S, A5501T, A5503SA, INFOBAR (A5307ST), W11H, W11K, A1011ST, A1012K, A1012K II, A1013K, A1014ST, A1101S, A3011SA, A3012CA, A3013T, A3014S, A3015SA, A5301T, A5302CA, C3003P, C1001SA, C1002S, C3001H, C3002K, C407H, C408P, C409CA, C410T, C411ST, C412SA, C413S, C414K, C415T, C451H, C5001T, G'zOne C452CA, C304SA, C402DE, C403ST, C405SA, C406S, DIVA C404S

キャリア	メーカー	製品型番
docomo	NEC	N906iμ, N906iL, N906i, N905iμ, N905i, N904i, N903i, N902iS, N706iII, N706ie, N706i, N705iμ, N705i, N704iμ, N703iμ, N703iD, N702iD, N-09A, N-08B, N-08A, N-07B, N-07A, N-06B, N-06A, N-05C, N-05B, N-05A, N-04B, N-04A, N-03D, N-03C, N-03B, N-03A, N-02D, N-02C, N-02B, N-02A, N-01G, N-01F, N-01E, N-01C, N-01B, N-01A
	パナソニック（松下）	P906i, P905iTV, P905i, P904i, P903iX, P903iTV, P903i, P902iS, P901iTV, P706iμ, P706ie, P705iμ, P705iCL, P705i, P704iμ, P704i, P703iμ, P703i, P702iD, P702i, P-10A, P-09A, P-08A, P-07B, P-07A, P-06C, P-06B, P-06A, P-05C, P-05B, P-05A, P-04C, P-04B, P-04A, P-03D, P-03C, P-03B, P-03A, P-02C, P-02B, P-02A, P-01H, P-01G, P-01F, P-01E, P-01C, P-01B, P-01A
	三菱	D905i, D904i, D705iμ, D705i, D704i
	富士通	F906i, F905i, F904i, F903iX, F903i, F884iES, F884i, F883iS, F883iESS, F883iES, F883i, F882iES, F801i, F706i, F705i, F704i, F703i, F1100, F-11C, F-10C, F-10B, F-10A, F-09C, F-09B, F-09A, F-08F, F-08C, F-08B, F-08A, F-07F, F-07B, F-07A, F-06D, F-06B, F-06A, F-05C, F-05B, F-05A, F-04D, F-04C, F-04B, F-04A, F-03C, F-03B, F-03A, F-02D, F-02C, F-02B, F-02A, F-01G, F-01E, F-01C, F-01B, F-01A
	ソニー	SO906i, SO905iCS, SO905i, SO903iTV, SO903i, SO902iWP+, SO902i, SO706i, SO705i, SO704i, SO703i, SO702i
	シャープ	SH906iTV, SH906i, SH905iTV, SH905i, SH904i, SH903iTV, SH903i, SH902iSL, SH902iS, SH706iw, SH706ie, SH706i, SH705iII, SH705i, SH704i, SH703i, SH702iS, SH702iD, SH-11C, SH-10C, SH-09B, SH-08B, SH-08A, SH-07F, SH-07B, SH-07A, SH-06C, SH-06B, SH-06A, SH-05D, SH-05C, SH-05B, SH-05A, SH-04C, SH-04B, SH-04A, SH-03E, SH-03D, SH-03B, SH-03A, SH-02C, SH-02B, SH-02A, SH-01C, SH-01B, SH-01A
	サンヨー	SA800i, SA702i
	カシオ	CA-01C
	LG電子	L852i, L706ie, L705iX, L705i, L704i, L602i, L601i, L600i, L-10C, L-06A, L-04B, L-03B, L-03A, L-02B, L-01C, L-01B, L-01A
ソフトバンク	NEC	940N, 931N, 930N, 841N, 840N, 831N, 830N, 821N, 820N, 804N, 741N, 740N, 703N, 001N
	パナソニック（松下）	942P, 941P, 940P, 931P, 930P, 921P, 920P, 842P, 841P, 840P for Biz, 840P, 832P, 831P, 830P, 824P, 823P, 822P, 821P, 820P, 810P, 706P, 705Px, 705P, 401PM, 301P, 103P, 002P for Biz, 002P, 001P
	シャープ	DM008SH, DM007SH, DM006SH, DM005SH, DM004SH, DM003SH, DM002SH, DM001SH, 945SH, 944SH, 943SH, 942SH, 941SH, 940SH, 936SH, 935SH, 934SH, 933SH, 932SH, 931SH, 930SH, 923SH, 922SH, 921SH, 920SH YK, 920SH, 913SH, 912SH, 911SH, 910SH, 905SH, 843SH, 842SH, 841SHs, 841SH, 840SH, 832SHs, 832SH, 831SHs, 831SH, 830SHs, 830SH for Biz, 830SH, 825SH, 824SH, 823SH, 822SH, 821SH, 820SH, 816SH, 815SH, 814SH, 813SH for Biz, 813SH, 812SHsII, 812SHs, 812SH, 811SH, 810SH, 804SH, 705SH, 301SH, 202SH, 109SH, 108SH, 105SH, 008SH, 004SH, 002SH, 001SH
	東芝	921T, 920T, 912T, 911T+O ROKR, 911T, 910T, 904T, 903T, 832T, 831T, 830T, 824T, 823T, 822T, 821T, 820T, 815T, 814T, 813T, 812T, 811T, 810T, 705T
	カシオ	930CA, 830CA
	サムスン	941SC, 940SC, 931SC, 930SC, 840SC, 740SC, 731SC, 001SC
	ZTE	840Z

※このほか、携帯電話の電池パックが取り外し可能なリチウム電池であれば、上記キャリア・機種以外でも充電できることがあります。
充電可否を確認しますので、よろしければ会場にお持ち込みください。