

キャリア	メーカー	携帯電話型番	microSD		microSDHC			注意事項
			SDMC-V2G/A	SDMCH-W4G/A	SDMCH-W8G/A	SDMCH-W16G/A	SDMCH-W32G/A	
NTTdocomo	NEC	N-01C	○	○	○	○	-	
		N-02C	○	○	○	○	-	
		N-03C	○	○	○	○	○	
		N-04C	○	○	○	○	○	
	NOKIA	NM705i	○	○	○	-	-	
		NM706i	○	○	○	-	-	
	Panasonic	P703i	○	-	-	-	-	
		P703iu	○	-	-	-	-	
		P704i	○	-	-	-	-	
		P704iu	○	-	-	-	-	
		P705i	○	○	○	-	-	
		P705iu	○	○	○	-	-	
		P706iu	○	○	○	-	-	
		P706ie	○	○	○	-	-	
		P903i	○	-	-	-	-	
		P903iTV	○	-	-	-	-	
		P903iX	○	-	-	-	-	
		P904i	○	-	-	-	-	
		P905i	○	○	○	-	-	
		P905iTV	○	○	○	-	-	
		P906i	○	○	○	-	-	
		P-01A	○	○	○	○	-	
		P-02A	○	○	○	-	-	
		P-03A	○	○	○	-	-	
		P-04A	○	○	○	-	-	
		P-05A	○	○	○	-	-	
		P-06A	○	○	○	-	-	
		P-07A	○	○	○	○	-	
		P-08A	○	○	○	○	-	
		P-09A	○	○	○	○	-	
		P-10A	○	○	○	○	-	
		P-02B	○	○	○	○	-	
		P-03B	○	○	○	○	-	
		P-04B	○	○	○	○	-	
		P-05B	○	○	○	○	-	
		P-07B	○	○	○	○	-	
		P-01C	○	○	○	○	-	
		P-02C	○	○	○	○	-	
	P-03C	○	○	○	○	○		
	SHARP	SH703i	○	-	-	-	-	
		SH704i	○	-	-	-	-	
		SH705i	○	-	-	-	-	
		SH705i II	○	-	-	-	-	
		SH706i	○	○	○	-	-	
		SH706ie	○	-	-	-	-	
		SH706iw	○	○	○	-	-	
		SH903i	○	-	-	-	-	
		SH903iTV	○	-	-	-	-	
		SH904i	○	-	-	-	-	
		SH905i	○	○	○	-	-	
		SH905iTV	○	○	○	-	-	
		SH906i	○	○	○	-	-	
		SH906iTV	○	○	○	-	-	
		SH-01A	○	○	○	○	-	
		SH-02A	○	○	○	-	-	
		SH-03A	○	○	○	○	-	
		SH-04A	○	○	○	-	-	
		SH-05A	○	○	○	○	-	
		SH-06A	○	○	○	○	-	
		SH-07A	○	○	○	○	-	
		SH-08A	○	○	○	○	-	
		SH-01B	○	○	○	○	-	
		SH-02B	○	○	○	○	-	
		SH-03B	○	○	○	○	-	
		SH-04B	○	○	○	○	-	
		SH-05B	○	○	○	○	-	
		SH-06B	○	○	○	-	-	
		SH-07B	○	○	○	○	-	
		SH-08B	○	○	○	○	-	
		SH-09B	○	○	○	○	-	
		SH-10B	○	○	○	○	-	
	SH-02C	○	○	○	○	-		
	SH-03C	○	○	○	○	○		
	SH-06C	○	○	○	○	○		
	Sony Ericsson	SO703i	○	-	-	-	-	
		SO704i	○	-	-	-	-	
		SO705i	○	-	-	-	-	
		SO706i	○	-	-	-	-	
		SO903iTV	○	-	-	-	-	
		SO905i	○	-	-	-	-	
		SO905iCS	○	-	-	-	-	
		SO906i	○	○	○	-	-	
		SO-01C	○	○	○	○	○	
		TOSHIBA	T-01A	○	○	○	○	-
	T-01C		○	○	○	○	○	

キャリア	メーカー	携帯電話型番	microSD		microSDHC			注意事項
			SDMC-V2G/A	SDMCH-W4G/A	SDMCH-W8G/A	SDMCH-W16G/A	SDMCH-W32G/A	
NTTdocomo	SAMSUNG	SC-01B	○	○	○	○	○	
		SC-02B	○	○	○	○	○	
		SC-01C	○	○	○	○	○	
au	CASIO	G'zOne W42CA	○	-	-	-	-	
		E03CA	○	-	-	-	-	
		W43CA	○	-	-	-	-	
		W51CA	○	-	-	-	-	
		W52CA	○	-	-	-	-	
		W53CA	○	-	-	-	-	
		W61CA	○	-	-	-	-	
		G'zOne W62CA	○	-	-	-	-	
		W63CA	○	-	-	-	-	
		CA001	○	-	-	-	-	
		CA002	○	x	x	-	-	
		CA003	○	○	○	○	-	
		CA004	○	○	○	○	-	
		CA005	○	○	○	○	-	
		CA005	○	○	○	○	-	
		CA006	○	○	○	○	○	
		G'zOne TYPE-X CAY01	○	○	○	○	○	
		HITACHI	W42H	○	-	-	-	-
	W43H		○	-	-	-	-	
	W43H II		○	-	-	-	-	
	W51H		○	-	-	-	-	
	W52H		○	-	-	-	-	
	W53H		○	-	-	-	-	
	W61H		○	-	-	-	-	
	W62H		○	-	-	-	-	
	H001		○	-	-	-	-	
	HIY01		○	○	○	○	-	
	HIY02		○	○	○	○	-	
	KYOCERA		A5521K	-	-	-	-	-
		W43K	○	-	-	-	-	
		W44K	○	-	-	-	-	
		W44K II	○	-	-	-	-	
		W51K	○	-	-	-	-	
		MEDIA SKIN	○	-	-	-	-	
		W53K	○	-	-	-	-	
		W61K	○	-	-	-	-	
		W62K	○	-	-	-	-	
		W63K	○	-	-	-	-	
		K001	○	○	○	○	-	
		K002	○	○	○	○	-	
		K003	○	○	○	○	-	
		K006	○	○	○	○	-	
		K007	○	○	○	○	-	
	K008	○	○	○	○	-		
	NS01	○	○	○	-	-		
	Panasonic	W51P	○	-	-	-	-	
		W52P	○	-	-	-	-	
		W61P	○	-	-	-	-	
		P001	○	-	-	-	-	
	PANTECH	W61PT	○	-	-	-	-	
		PT002	○	○	○	○	-	
		IS06	○	○	○	○	○	
	SANYO	A5522SA	-	-	-	-	-	
		Sweets cute	○	-	-	-	-	
		ジュニアケータイ	○	-	-	-	-	
		A5525SA	○	-	-	-	-	
		W42SA	-	-	-	-	-	
		W43SA	○	-	-	-	-	
		W51SA	○	-	-	-	-	
		W52SA	○	-	-	-	-	
		W53SA	○	-	-	-	-	
		INFOBAR2(W55SA)	○	-	-	-	-	
		W61SA	○	-	-	-	-	
		W62SA	○	-	-	-	-	
		W63SA	○	-	-	-	-	
		W64SA	○	-	-	-	-	
		SA001	○	○	○	○	-	
		SA002	○	○	○	○	-	
		SHARP	W51SH	○	-	-	-	-
	W52SH		○	-	-	-	-	
	W61SH		○	-	-	-	-	
	W62SH		○	-	-	-	-	
	URBANO(W63SH)		○	-	-	-	-	
	W64SH		○	-	-	-	-	
	SH001		○	-	-	-	-	
	SH002		○	x	x	-	-	
	SH003		○	○	○	○	-	
	SH005		○	○	○	○	-	
	SH006		○	○	○	○	-	
	SH007		○	○	○	○	-	
	SH008		○	○	○	○	-	
	SH009	○	○	○	○	-		
	SH010	○	○	○	○	○		

キャリア	メーカー	携帯電話型番	microSD		microSDHC			注意事項	
			SDMC-V2G/A	SDMCH-W4G/A	SDMCH-W8G/A	SDMCH-W16G/A	SDMCH-W32G/A		
au	SHARP	SHY01	○	×	×	-	-		
		E05SH	○	-	-	-	-		
		E06SH	○	-	-	-	-		
		IS03	○	○	○	○	○		
		IS05	○	○	○	○	○		
	Sony Ericsson	W52S	▲	-	-	-	-	▲W53S添付品のSD変換アダプタを併用してください	
		W61S	○	-	-	-	-		
		W62S	○	-	-	-	-		
		re(W63S)	○	-	-	-	-		
		Premier3	○	-	-	-	-		
		SOX01	○	-	-	-	-		
		SO002	○	○	○	○	-		
		SO003	○	○	○	○	-		
		SO004	○	○	○	○	-		
		S005	○	○	○	○	-		
		S006	○	○	○	○	-		
		URBANO MOND (SOY04)	○	○	○	○	-		
		iida G11 (SOX02)	○	○	○	○	-		
		A5523T	○	-	-	-	-		
		A5529T	○	-	-	-	-		
	TOSHIBA	W45T	○	-	-	-	-		
		DRAPE(W46T)	○	-	-	-	-		
		W47T	○	-	-	-	-		
		W51T	○	-	-	-	-		
		W52T	○	-	-	-	-		
		W53T	○	-	-	-	-		
		W54T	○	-	-	-	-		
		W55T	○	-	-	-	-		
		W61T	○	-	-	-	-		
		W62T	○	-	-	-	-		
		Sportio(W63T)	○	-	-	-	-		
		W65T	○	-	-	-	-		
		T002	○	○	○	-	-		
		T003	○	○	○	○	-		
		T004	○	○	○	○	-		
	T005	○	○	○	○	-			
	T006	○	○	○	○	-			
	TSX04	○	○	○	○	-			
	TSX05	○	○	○	○	-			
	iida X-RAY (TSX06)	○	○	○	○	-			
	IS04	○	○	○	○	○			
	SoftBank (Vodafone)	CASIO	930CA	○	○	○	-	-	
			DELL	001DL	○	○	○	○	○
		HTC	X01HT	○	-	-	-	-	
			X02HT	○	○	-	-	-	
X03HT			○	○	○	-	-		
X05HT			○	○	○	-	-		
X06HT			○	○	○	○	○		
X06HT II			○	○	○	○	○		
001HT			○	○	○	○	○		
NEC		705N	-	-	-	-	-		
		706N	-	-	-	-	-		
		804N	-	-	-	-	-		
		830N	-	○	○	-	-		
		831N	○	-	-	-	-		
		840N	○	-	-	-	-		
		841N	○	○	○	-	-		
		930N	○	○	○	○	-		
		931N	○	○	○	○	-		
		940N	○	○	○	○	-		
NOKIA		001N	○	○	○	○	-		
		X02NK	○	○	○	○	-		
		705P	○	-	-	-	-		
		706P	○	-	-	-	-		
		810P	○	-	-	-	-		
		820P	○	-	-	-	-		
		821P	○	-	-	-	-		
		822P	○	-	-	-	-		
		831P	○	-	-	-	-		
		832P	○	○	○	○	-		
		840P	○	-	-	-	-		
		841P	○	-	-	-	-		
		842P	○	○	○	○	-		
		920P	○	○	○	○	-		
		921P	○	○	○	○	-		
		930P	○	○	○	○	-		
		931P	○	○	○	○	-		
		940P	○	○	○	○	-		
941P		○	○	○	○	-			
942P		○	○	○	○	-			
001P		○	○	○	○	○			
002P		○	-	-	-	-			
Samsung		705SC	-	-	-	-	-		
		706SC	-	-	-	-	-		
		708SC	○	-	-	-	-		
		709SC	-	-	-	-	-		

キャリア	メーカー	携帯電話型番	microSD		microSDHC			注意事項	
			SDMC-V2G/A	SDMCH-W4G/A	SDMCH-W8G/A	SDMCH-W16G/A	SDMCH-W32G/A		
SoftBank (Vodafone)	Samsung	731SC	○	○	-	-	-		
		740SC	○	○	-	-	-		
		805SC	○	-	-	-	-		
		820SC	○	-	-	-	-		
		821SC	○	外	外	外	外		
		830SC	○	○	○	○	-		
		840SC	○	○	○	○	-		
		920SC	○	-	-	-	-		
		930SC	○	○	○	-	-		
		931SC	○	○	外	外	外		
		940SC	○	○	○	○	-		
		941SC	○	○	○	○	-		
		001SC	○	○	○	○	-		
		X01SC	○	○	○	○	-		
		SHARP	705SH	-	-	-	-	-	
			810SH	○	-	-	-	-	
			811SH	○	-	-	-	-	
	812SH		○	-	-	-	-		
	814SH		○	-	-	-	-		
	815SH		○	-	-	-	-		
	820SH		○	-	-	-	-		
	821SH		○	-	-	-	-		
	823SH		○	-	-	-	-		
	824SH		○	○	○	-	-		
	825SH		○	○	○	-	-		
	830SH		○	○	-	-	-		
	831SH		○	○	○	-	-		
	832SH		○	○	○	-	-		
	840SH		○	-	-	-	-		
	841SH		○	○	○	○	-		
	842SH		○	○	○	○	-		
	843SH		○	○	○	○	-		
	910SH		○	-	-	-	-		
	911SH		○	-	-	-	-		
	912SH		○	-	-	-	-		
	913SH		○	-	-	-	-		
	920SH		○	-	-	-	-		
	921SH		○	○	○	-	-		
	922SH		○	○	○	-	-		
	923SH		○	○	○	-	-		
	932SH		○	○	○	-	-		
	933SH		○	○	○	○	-		
	934SH		○	○	○	○	-		
	935SH		○	○	○	○	-		
	936SH		○	○	○	○	-		
	940SH		○	○	○	○	-		
	941SH		○	○	○	○	-		
	942SH	○	○	○	○	-			
	943SH	○	○	○	○	-			
	944SH	○	○	○	○	-			
	945SH	○	○	○	○	-			
	001SH	○	○	○	○	-			
	002SH	○	○	○	○	○			
	003SH	○	○	○	○	○			
	004SH	○	○	○	○	○			
	005SH	○	○	○	○	○			
	TOSHIBA	810T	○	-	-	-	-		
		811T	○	-	-	-	-		
		813T	○	-	-	-	-		
		814T	○	-	-	-	-		
		815T	○	-	-	-	-		
		823T	○	-	-	-	-		
		824T	○	-	-	-	-		
		830T	○	○	○	-	-		
		832T	○	-	-	-	-		
		911T	○	-	-	-	-		
		912T	○	-	-	-	-		
920T		○	-	-	-	-			
921T		○	-	-	-	-			
コドモバイル(812T)		○	-	-	-	-			
X02T		○	○	○	○	-			
ZTE		840Z	○	○	○	-	-		
		003Z	○	○	○	○	-		
WILLCOM	SHARP	Advanced / W-ZERO3[es] (WS011SH)	○	-	-	-	-		
		D4(WS016SH)	○	○	○	-	-		