


User Manual

COREPLAYER

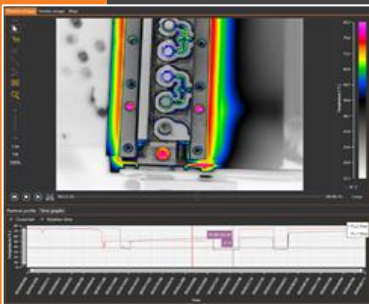

- ▣ CorePlayer installation
- ▣ System requirements
- ▣ Functions description

Release date: 4th of August 2016

End users Validity date: 31st of December 2016 or till next revision

Revision Number: 2.1

Compatible CP version: 1.4

General system requirements

Minimal requirements

Processor:	Intel Core i3
Memory (RAM):	2 GB
HDD:	At least 100 MB available hard disk space.
NIC:	1000 Mb/s, Jumbo frame 9kb.
OS:	Windows 7

Recommended configuration


Processor:	Intel Core i5
Memory (RAM):	4 GB
HDD:	1 GB available hard disk space
NIC:	Gigabit Ethernet adapter and also a Gigabit Ethernet switch could be used for connecting more devices

In order to acquire images from a GigE Vision camera, you need to first make sure that you have all the correct hardware components and proper configuration. Below is a list of requirements.

Special hardware requirements

GigE Vision camera: The camera must be GigE Vision standard compliant. If you have a camera that has a Gigabit Ethernet port but is not GigE Vision compliant, you cannot acquire images using CorePlayer. You should find the GigE Vision logo in the camera's user manual or marketing literature.


Gigabit Ethernet port: While it is possible to acquire images with Ethernet and Fast Ethernet ports, which support 10 MB/s and 100 MB/s respectively, this will only work at very slow frame rates and small resolutions. It is highly recommended that you use a Gigabit Ethernet Network Interface Controller (NIC).




Installing CorePlayer

Setup

To get your copy of Workswell CorePlayer, go to page www.workswell.cz/CorePlayer/ and click on **Download**. Then proceed to the folder where you've downloaded the setup program and open it. Run the saved exe file (i.e. file CorePlayerSetup 1.1.16.214.exe), follow the instructions of the Setup program and in the end, if asked, reboot your computer. The installation will then continue. If not, please run the setup program again. **CorePlayer's Setup** program itself doesn't need any further user interaction and the service application will run immediately as soon as the installation is completed.

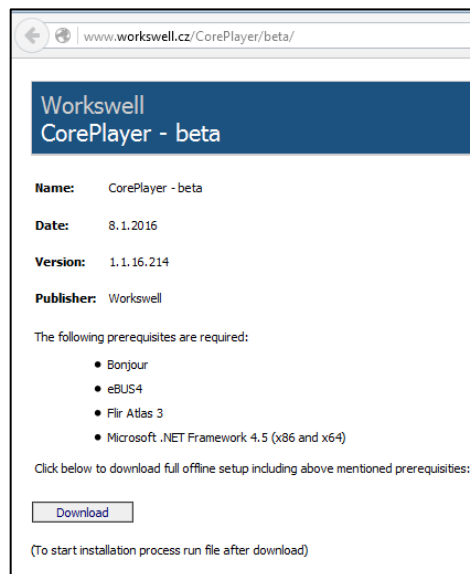


CorePlayer Download

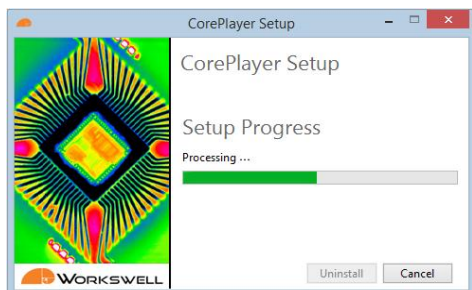

CorePlayer Setup


Activation

When you run the program for the very first time, the Authentication window is the first thing to deal with. The Authentication window provides you with four options: If you don't have a serial number and want to evaluate the software for a limited period of 15 days, choose **Request trial**, if you have valid, not yet activated serial number, click the **Insert serial number** option or you can use **Offline activation** (if you have not possibility to connect PC to internet. If you bought CorePlayer together with the camera, you can

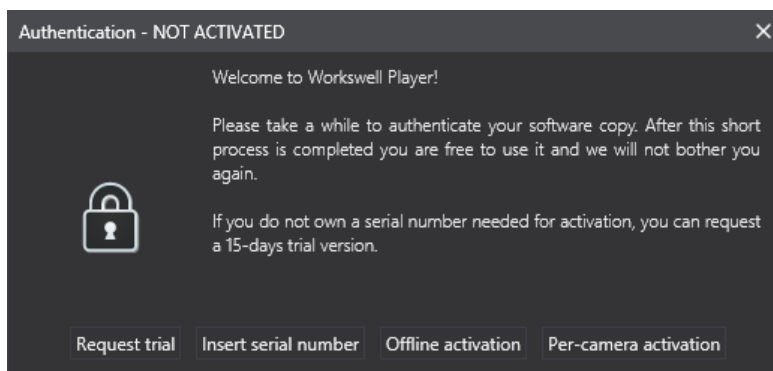


Authentication window

activate software using camera serial number - **Per-camera activation**.




Trial version

When requesting a trial version of Workswell CorePlayer, all you have to do is enter your (valid) email address.

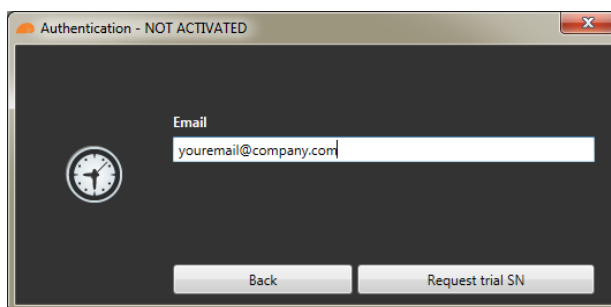


Entering email address

In a matter of seconds, you will receive an email with activation link leading to Workswell Activation Server, where we would be glad if you took a moment to fill in a brief info about yourself and helped us to improve the software to better suit the needs of our customers. After you'll express consent with the Licensing terms and agree to the above terms, click **Activate** and you will be given a unique trial serial number, valid for 15 days.

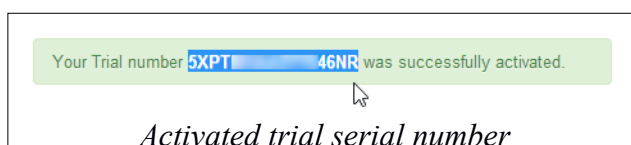


Activated trial serial number

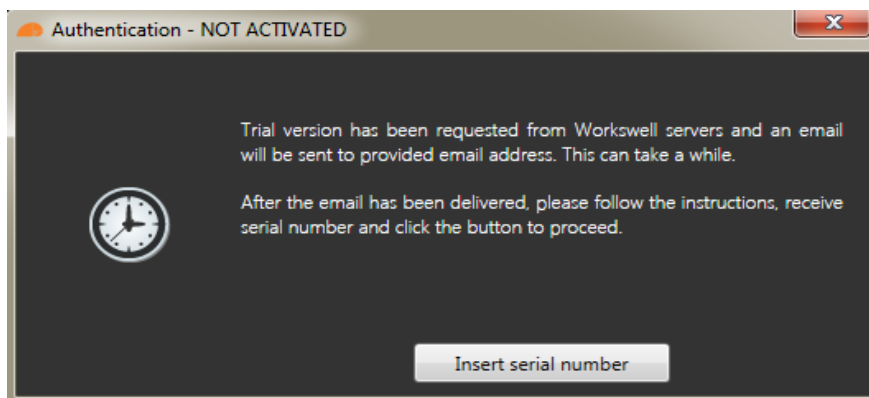

Successful trial serial number request


Copy the number. Then return to the program and click **Insert serial number**.

Further steps are the same as if you had a licensed copy of Workswell CorePlayer, and are described in next section.




Full version

If you have a full version of the program (or you already have activated trial serial number), start the activation process by clicking on **Insert serial number** button. On the next screen, enter your serial number provided by your sales partner or by Workswell and fill in your valid email address. Click the **Authenticate** button.

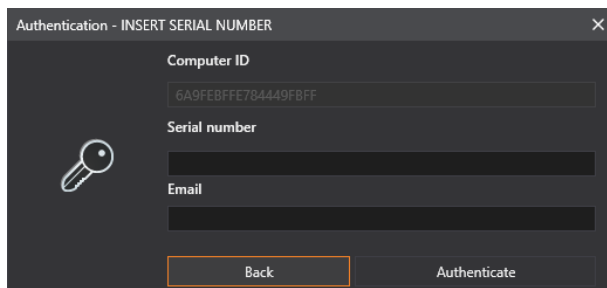


Inserting serial number

Next steps apply for full versions only The Authentication window is now indicating that your serial number is not yet activated. Never mind, everything has been taken care of.

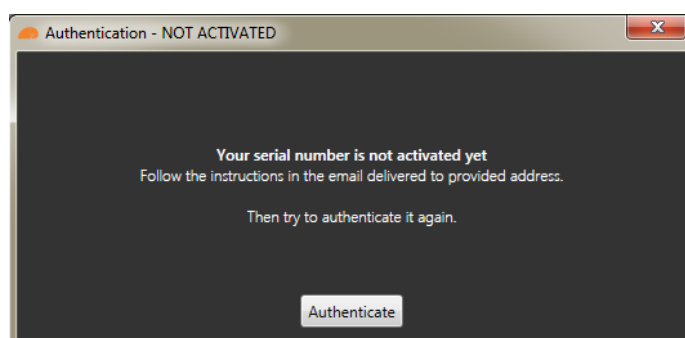


Before completing the web activation

By clicking **Authenticate** on the previous screen, you've send an activation request to Workswell Activation Server and as a response, you will receive email with activation link. Click it and fill in a brief info about yourself. After you'll express consent with the Licensing terms and conditions by checking the "I agree" to the above terms, click **Activate** and return to the program. Click **Authenticate** as seen on the image above.

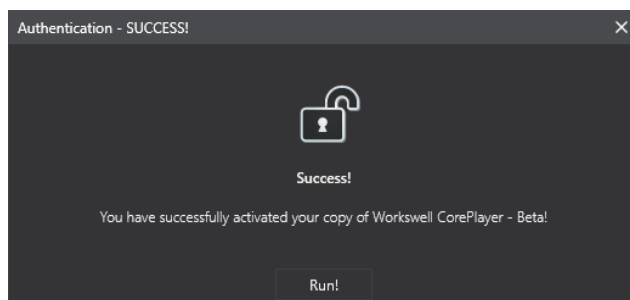

Successful activation

Click **Run**




Supported Cameras

CorePlayer was designed especially for WIC cameras, but there is basic support for other types.

Workswell WIC (Workswell infrared camera)


- **Fully supported** and tested.
- Configurable device setup with intuitive graphic user interface.
- Temperature calculation.
- **Workswell WIRIS (infrared camera system for drones)**
 - Support for processing of captured thermal data (images, videos).
- **FLIR Ax5 & Ax15 (compact cameras for machine vision)**
 - **Fully supported** and tested
 - Configurable device setup with intuitive graphic user interface.
 - Temperature calculation.
- **FLIR T4xx, T6xx, Exx (handheld cameras)**
 - **Fully supported** and tested
 - Configurable device setup with intuitive graphic user interface.
 - Temperature calculation.
 -



CorePlayer software

Run application

The application will be started immediately after successful installation, otherwise you can run it by clicking on desktop icon. The following application window will be shown:

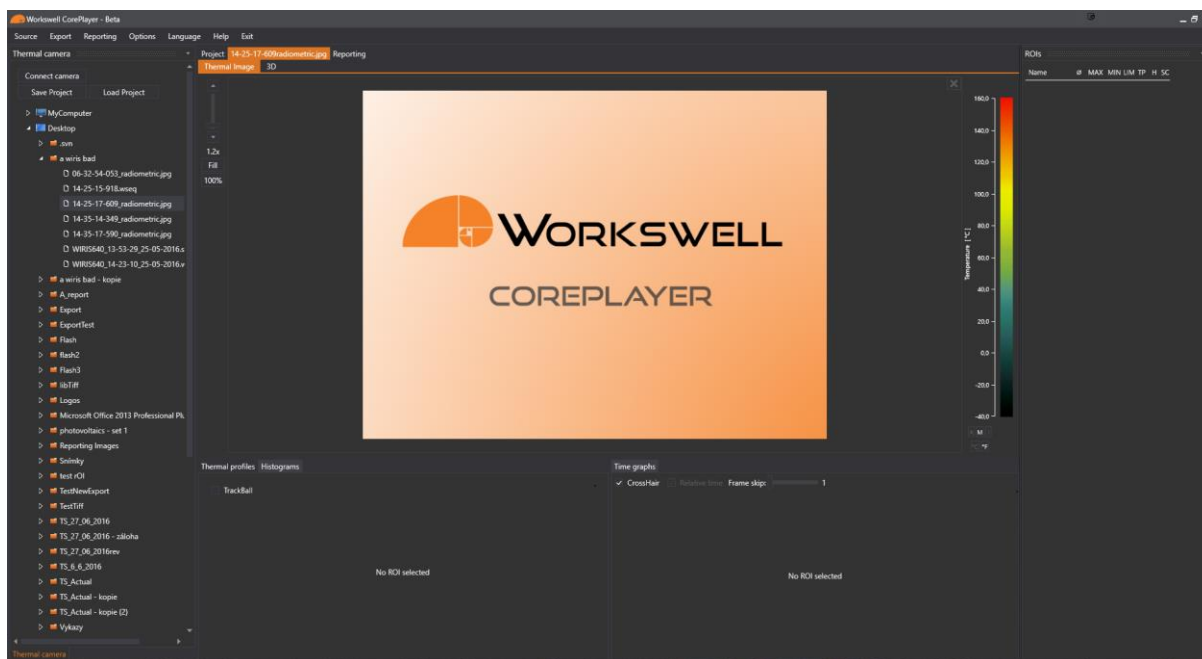

Main application window - no camera connected


Main menu


Source – select source of the measured images

- Connect / Disconnect camera
- Open / Close file

Export – export radiometric file or sequence into another format (JPEG, PNG and CSV)

- Thermoimage – save *.seq file as Radiometric JPEG, PNG, CSV or AVI file
- Visible image – save visible image as PNG file
- Export as – variable export with defining custom parameters of export



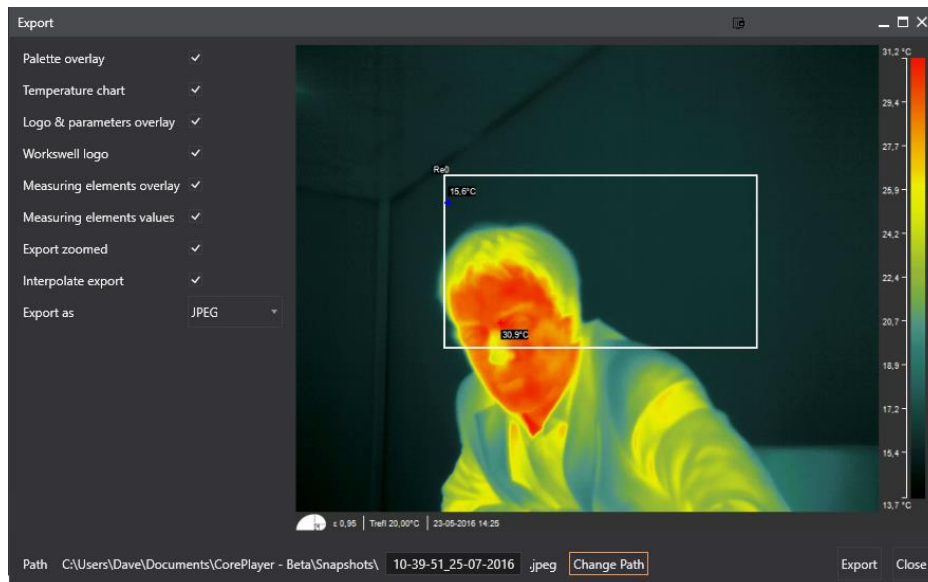

Export window


Reporting – if you have loaded images in reporting you can generate pdf report

Options

- **Restore layout** – restores layout of subwindows to defaults
- **Presentation mode** – full screen mode with image related controls – palette; looks best on wide-screen display; ends full-screen mode by clicking deselect **Options - Presentation mode**
- **Add license** – You are able to add new per-camera licenses.
- **Application setup**



- General

- Welcome image – check if you want to open welcome image on startup
- Thermoimage interpolation – check if you want to interpolate thermal image
- Theme – Dark (only variant)
- Layout autosave – check if you want to save layout automatically immediately after you change it
- Ximea support – check if you want show Ximea subwindow (for digital camera settings)
- GPS support – check if you want show GPS subwindow
- Temperature units – could be selected between Celsius and Fahrenheit

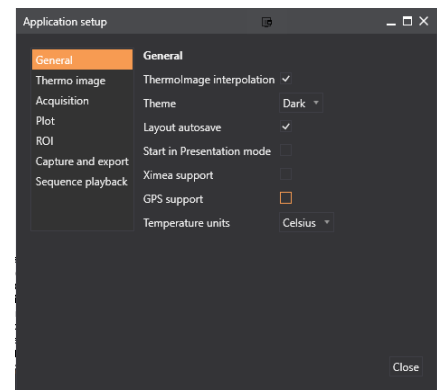


- Thermo image

- Overview window

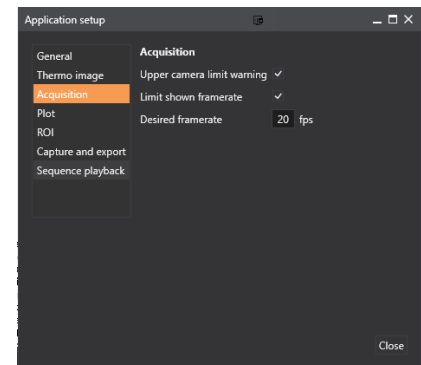


- Acquisition
 - Upper camera limit warning – shows warning if the measured temperature exceed camera temperature limit
 - Limit shown framerate
 - Desired framerate – default framerate
- Plot
 - Thickness of plot lines (time graph, thermal profile, limits)
- ROI
 - Fonts and label and line colors of ROIs
 - Show min/max
 - Number of lines for thermal scanner
- Capture and export
 - Predefined file paths – for all exportable files
 - Visibility of all overlay items that can be added in the exported file
 - Parameters of AVI export as codecs, framerate and bitrate
 - Interpolation of export
- Sequence playback
 - Live visual playback – play visual video together with radiometric sequence?
 - Relative time – change time scale to relative or absolute time

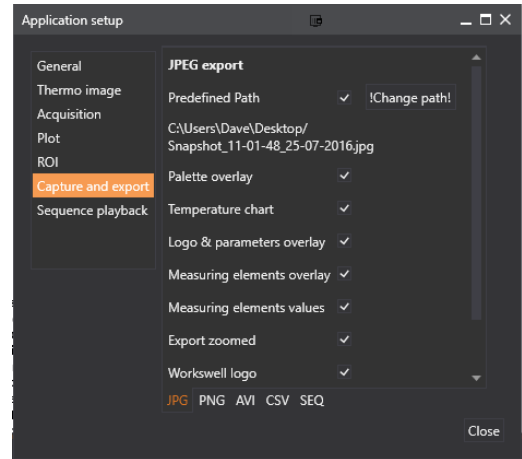

Help

- **Documentation** – links to CorePlayer documentation
- **Pan&Zoom quick help** - mouse and keyboard Controls for Pan and Zoom control
- **Changelog** – list of changes since the last release
- **About** – CorePlayer version, name of manufacturer, link to licenses, serial number, ...


Connection

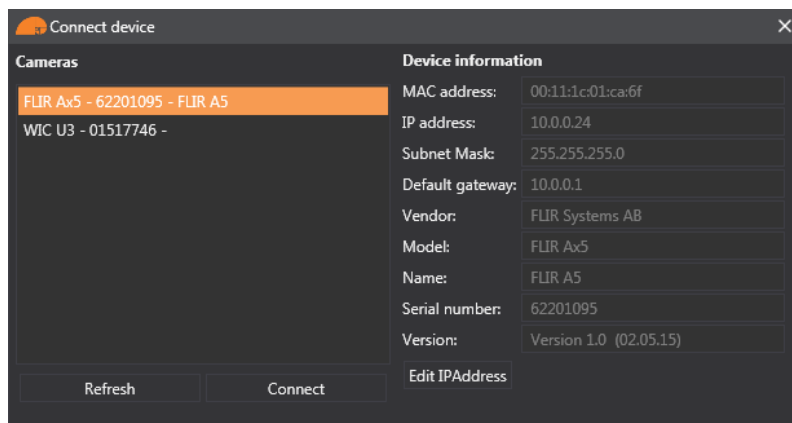



Connect window

Click **Connect camera** to choose camera device which you want to connect. Following dialog will be shown.

Now, you see available devices, select one and click **Connect** to perform connection.




Now, your camera is connected and you can see currently acquired live thermal image.

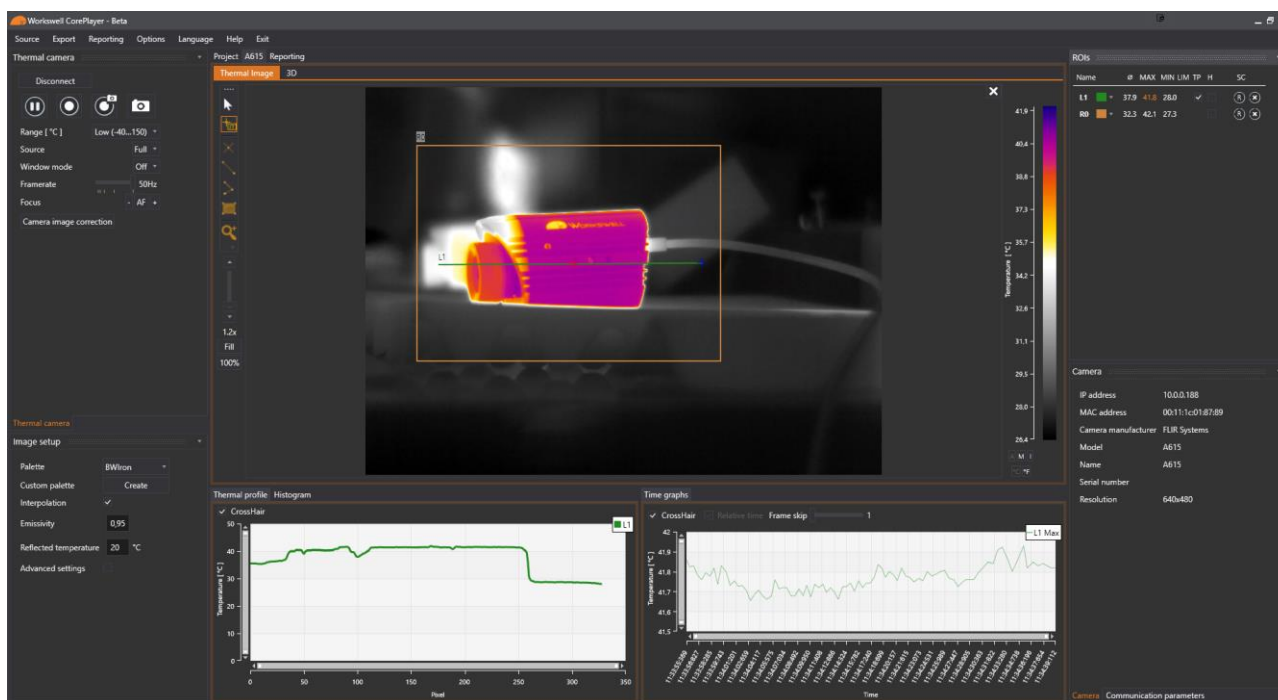


Thermal camera settings

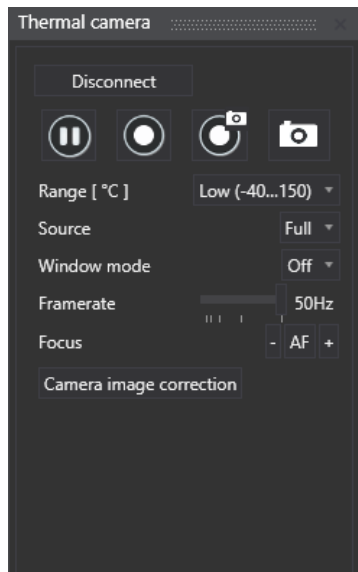



In this menu, you can set the camera and image features for most effective image acquisition.

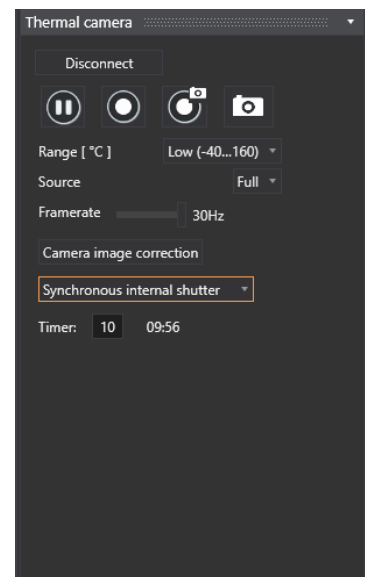


*Thermal camera menu –
For Ax15 cameras*



*Thermal camera menu –
For WIC cameras*

- **Start / Stop recording button** 
 - you can control acquisition of Radiometric video (*.seq file) by simple click on this button
- **Snapshot button** 
 - You can capture radiometric image from live stream by clicking on this button
- **Periodic save images button** 
 - You can start saving periodically radiometric images from live stream
- **Pause button** 
 - when the stream is paused, you can still measure, save or export last displayed image
- **Range [°C]**
 - set the temperature range of camera (Low or High, for A615 a Middle range is available)
- **Source**
 - select the source of image: full sensor size or selected ROI only
- **Framerate**
 - you can control image acquiring frequency
 - thermal cameras only



- **Camera image correction**
 - Activation of camera shutter
- **Shutter**
 - For WIC cameras only, you can select between asynchronous or synchronous internal shutter and precision external shutter


Image setup

In this subwindow you can change the image parameters (palette and interpolation) and the features, which are important for correct temperature measurement.

- **Palette**
 - shows data in selected color scale
 - assigned temperatures can be seen on right-sided temperature scale
- **Custom Palette**
 - Invokes window with ability to create and save your own custom palette
- **Interpolation**
 - enable/disable image pixel interpolation
- **Emissivity**
 - Very important feature - you should set the value depend on measured material (range is 0-1; default is 0,95)
- **Reflected temperature**
 - Insert ambient temperature to correct reflection of incident radiation
- **Advanced settings** (important only for detailed temperature measurement)
 - Atmospheric temperature
 - Humidity (%) of ambient environment
 - Distance (m) of the measured object from camera
 - Ext. optics transmission


Project panel

- You are able to load multiple files (sequences or images) into project
- Loaded files have markers of GPS location, visible image and also sequence marker
- You can add images to report by pressing checkbox on desired image and click on button **Add selected images to the Reporting** on right-down part of panel
- You can also save and load back your projects with all images and report



Reporting panel

- Import images loaded in project
- You can customize title page, information of measurement pare or conclusion of your report
- Insert protocol name; date and time; user name; part, machine, tool material numbers; note; logo
- You are able to customize visual of page with thermal image by adding visible image, GPS map or thermal profile lines. Also you can add information about emissivity, humidity, camera, resolution etc. or add custom notes.
- You can save report as PDF file.

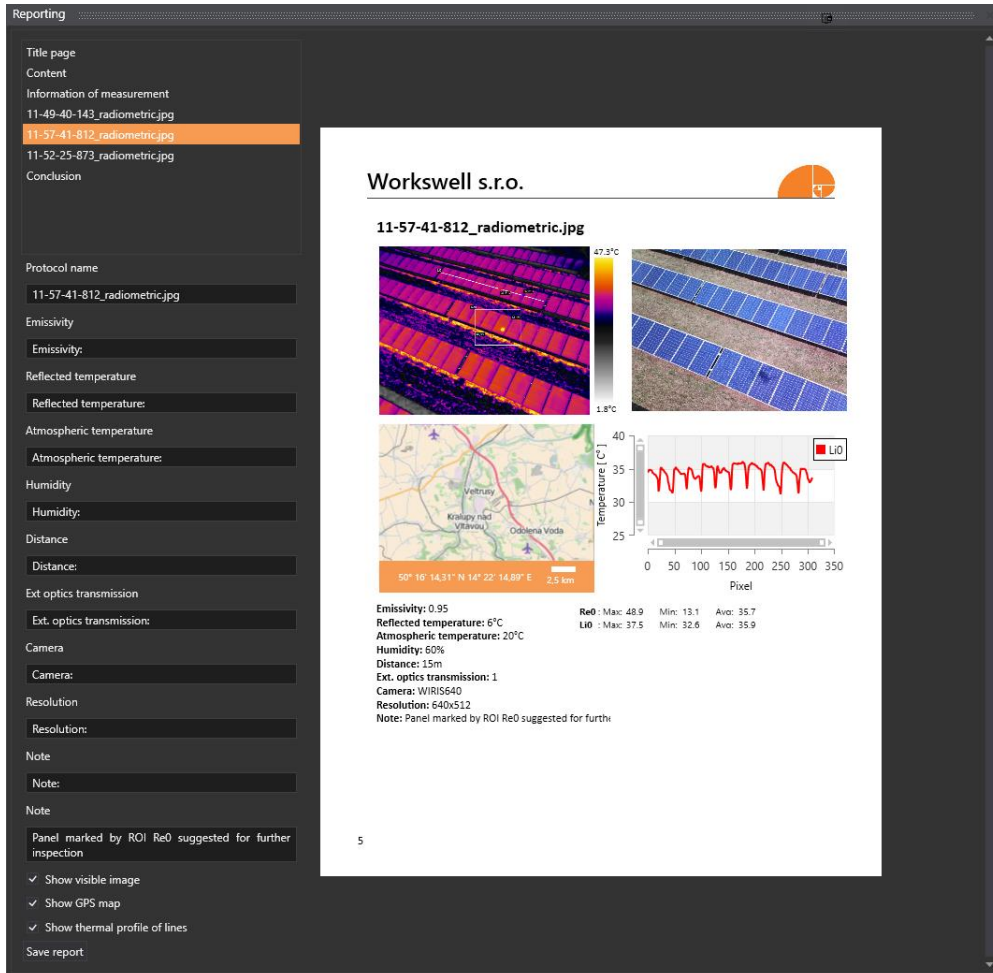

Reporting

Title page
Content
Information of measurement
11-49-40-143_radiometric.jpg
11-57-41-812_radiometric.jpg
11-52-25-873_radiometric.jpg
Conclusion

Protocol name
11-57-41-812_radiometric.jpg

Emissivity
Emissivity:

Reflected temperature
Reflected temperature:

Atmospheric temperature
Atmospheric temperature:

Humidity
Humidity:

Distance
Distance:

Ext. optics transmission
Ext. optics transmission:

Camera
Camera:

Resolution
Resolution:

Note
Note:



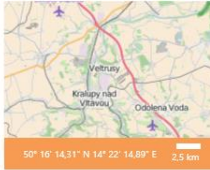
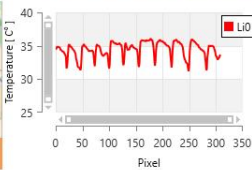
Note
Panel marked by ROI Re0 suggested for further inspection

Show visible image
 Show GPS map
 Show thermal profile of lines

Save report

Workswell s.r.o.

11-57-41-812_radiometric.jpg

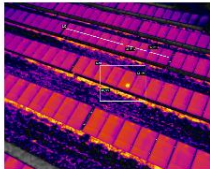





Emissivity: 0.95
Reflected temperature: 6°C
Atmospheric temperature: 20°C
Humidity: 60%
Distance: 15m
Ext. optics transmission: 1
Camera: WIRIS640
Resolution: 640x512
Note: Panel marked by ROI Re0 suggested for further inspection

Re0: Max: 48.9 Min: 13.1 Ave: 35.7
Li0: Max: 37.5 Min: 32.6 Ave: 35.9

5


Reporting panel



Live/Saved thermo image panel

You can see the live or opened image or sequence in this window. Also you can insert measuring ROI (line, rectangle, point) into image, zoom the image and adjust temperature range of color palette.


- **ROI (Region of Interest) tools** - measuring tools; for thermal cameras only
 - Select ROI – you can resize/move selected ROI by dragging on its corner (line & rectangle) or ROI itself (point)
 - Temperature – show current temperature on cursor position
 - Point – click to image to place the point
 - Line – click&drag to place the line
 - Polyline – click&drag&double click to place the broken line
 - Rectangle – click&drag to place the rectangle

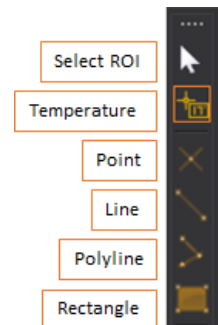


- **ZOOM tools**
 - every mouse click on the image zoom the image twice
 - adjustable zoom scale
 - Fill – fill thermo image window with the image
 - 100% - full image size
 - you can zoom-in or zoom-out with mouse scrolling too



- **Thermo image**
 - **Image capture** - right click on the image and you can save the image as Radiometric JPEG, PNG or CSV
 - **Radiometric JPEG**
 - native image format
 - standard JPEG with radiometric data included
 - image can be shown in every common image viewer
 - full radiometric support in FLIR Tools
 - **PNG**
 - lossless data compression
 - temperature scale included (thermal cameras only)
 - **CSV**
 - comma separated temperature matrix
- **Palette range** – you can adjust image colors by the right-sided temperature scale
 - Automatic mode (A) – CorePlayer automatically calculate ideal temperature range
 - Manual mode (M) – you can set the range manually
 - Isotherm mode (I) – you are able to add isotherms to image
 - S mode – Set manual range to overall sequence min/max (for opened *.seq files only)



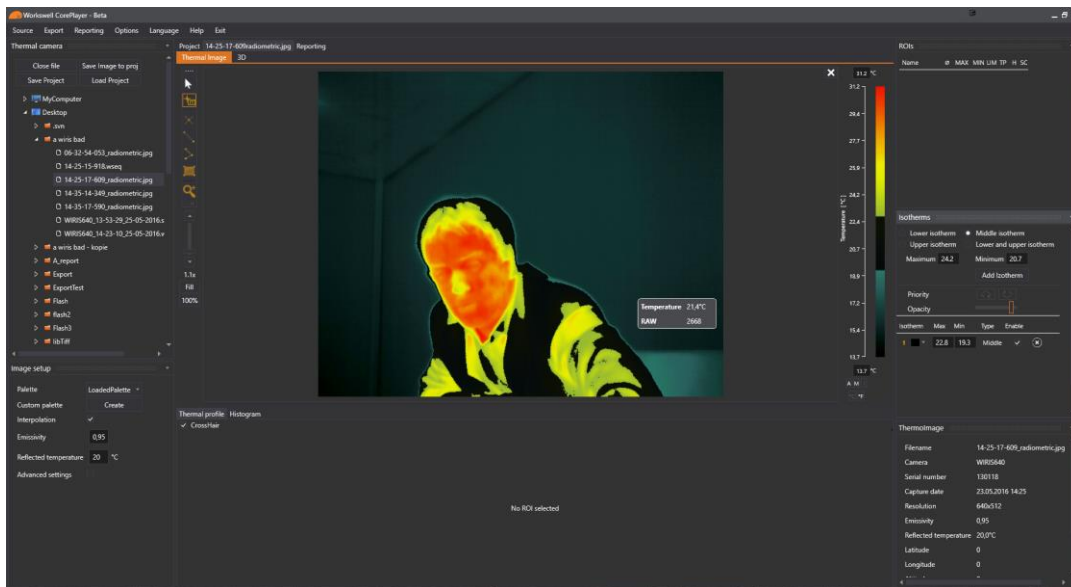

You can insert up lower, upper, middle and lower/middle isotherms into the image. In the subwindow on the right side of CorePlayer. In this subwindow you can set isotherms limits, color of isotherms, alpha channel and the type.

- **Play sequence toolbar** (for opened *.seq files only)



- Start/Pause the sequence playback
- Previous frame, Next frame – step over the sequence frames
- Cut – you can select one part of the sequence (time selection) and save it as new sequence or remake your previous sequence or export selected part of sequence into images

ROIs list

- When you add new ROI, it will be shown here, with appropriate **name** and color.
- You can change the **ROI color** in the drop-down menu.
- **Average, maximum and minimum** temperature of ROI (except point) is displayed.
- Enable **Time graph** display by click on the temperature value (min, max, avg). Not available for radiometric JPEG.
- **LIM** – add temperature limits into the Time graph by checking the LIM checkbox. Only available for radiometric sequences.
- **TP** - Enable Thermal profile display by checking TP checkbox.
- **H** – Enable Histogram profile display by checking H checkbox.
- **SC** – Enable Thermal scanner display by checking SC checkbox
- You can **recalculate** time graph of ROI by clicking on **R** button.
- You can **delete** ROI by clicking on **cross** button.


Name	Color	Max	Min	LIM	TP	H	SC
PO	Green	21.5	--	--	✓	✓	✓
LO	Red	22.6	22.9	22.1	✓	✓	✓
RO	Black	22.9	23.5	22.2	✓	✓	✓

Current ROIs list



3D graph


- You can generate 3D graph from image, sequence or live stream
- You can set zoom and quality of generated graph
- You are able to save 3D graph to JPG or PNG file

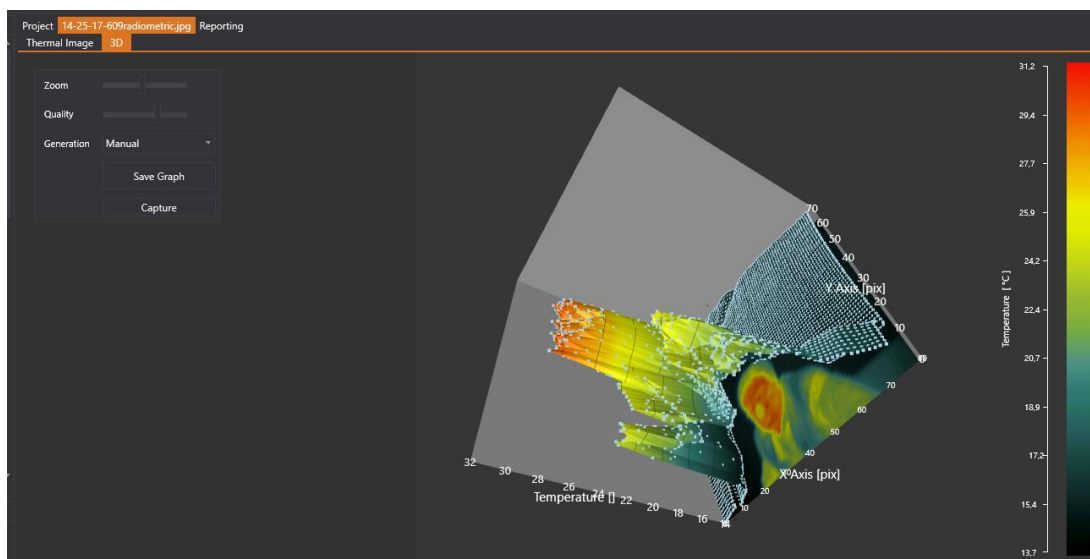


3D graph panel

Plots

- **Thermal profile** – for line ROIs only; show temperatures of pixels on the line
- **Histogram** – for line, polyline and rectangle ROIs, shows temperature frequency of pixels on placed ROIs
- **Time graph** – for live video and sequences only; show min/max/avg temperature according on time (relative or absolute) and appropriate limits

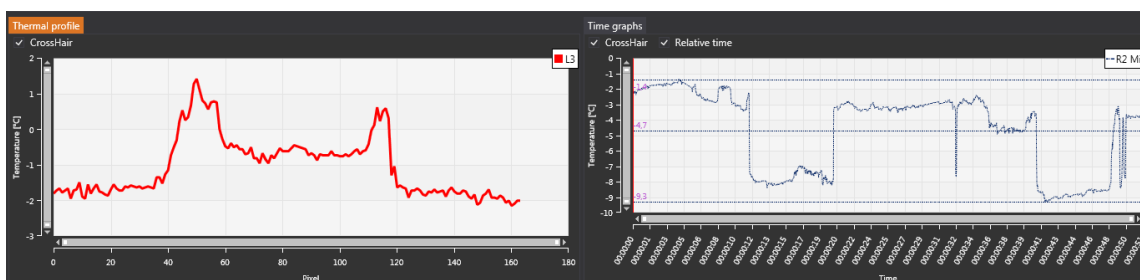


- **Crosshair tool** – shows temperature and pixel position (resp. time) at the cursor position
- You can modify all plot scales.
- **Fit to screen** - right click on plot you can fit it to the plot window



Scanner


- thermal scanner shows the temperature of one line ROI according to time
- you can set number of lines of the scanner
- you can set temperature range of thermal palette (modes – manual, automatic, S)

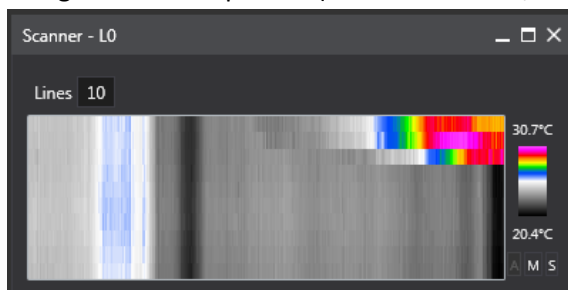

Camera settings and information

Camera

- **IP Address** - network address of your camera device; GigE devices only
- **MAC address** - unique identifier assigned to network interfaces; GigE devices only
- **Camera manufacturer** - Camera vendor; For WIC device – Workswell
- **Model** – camera model; WIC 336, AX5 etc...
- **Name** – user-defined camera name; WIC cameras – name of GigE/USB3 module only
- **USB3 module serial** - unique identifier assigned to USB3 devices – GUID; USB3 devices only
- **Resolution** – sensor resolution in pixels (width x height)



Communication parameters


- **Communication control**
 - GigE/USB3 related communication parameters and information
 - Preconfigured – no need to change
- **Device control**
 - USB3/GigE module device parameters and information
 - eg. DeviceUserID – User-defined name of module
 - General settings - Pixel Format, Output, Resolution etc...
 - Preconfigured for WIC cameras – no need to change
- **Image stream controlled**
 - Image stream information
 - Preconfigured – no need to change

Sensor settings


WIC based devices cannot be currently controlled over standard GenICam device control parameters, so instead you can use following graphic interface on the right side of application.

Parameters are sorted to several categories:


- **Info**
 - Device information – name, type, vendor, serial numbers etc...
- **Setup**
 - Gain mode
 - Changes temperature ranges
 - High gain: from -40°C to $+160^{\circ}\text{C}$
 - Low gain: from -40°C to $+550^{\circ}\text{C}$
 - External sync
 - The WIC core provides an external sync channel that can be used to synchronize frame start between two WIC cores, one configured as master and the other configured as slave.
 - Disabled – The core relies on internal timing.
 - Master – The core relies on internal timing to control its own frame start but also outputs a synchronization pulse on the external-sync channel.
 - Slave – the core synchronizes its frame start to a pulse received on the external-sync channel.

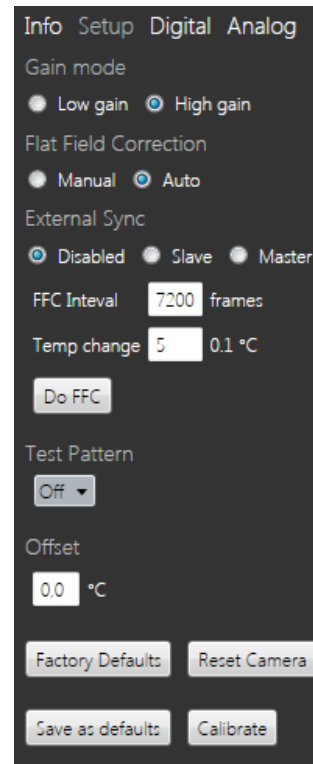

Device setup

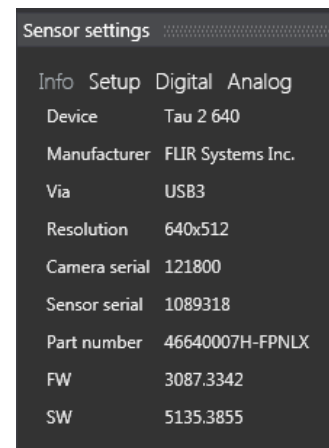


Device information




- FFC – Flat Field Correction
 - also known as NUC – Non-Uniformity Correction
 - Auto: Let camera decide when execute, based on conditions below
 - Number of processed frames
 - Device sensor temperature change
 - Manual: Perform FFC manually
 - Click on **Do FFC** button
- Test pattern
 - Off – temperature data are transmitted.
 - Ramp – Test image.
- Offset
 - Simple calibration.
 - Added to calculated temperatures.
- Restore defaults
 - Restores default parameters.
 - See table 3-6 in Tau2 IDD document to see full list of affected parameters.
- Reset camera
 - Performs reset/reboot of camera.
 - Device has to be physically reconnect to affect.

- **Digital**

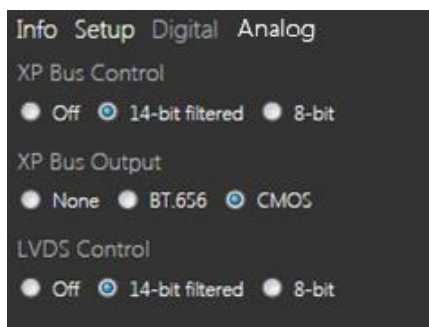


Digital video

- You can change type and bit depth of digital output.
- XB Bus, 14bit CMOS is recommended to correct temperature calculation.
- **Analog video**
 - **Setup**
 - On/Off Analog video
 - Reverse video
 - Upside down (X), Leftside right (Y)
 - Affects digital output



- Video color
 - Color/Monochrome
- Frame rate
 - doubles framerate – 25/50Hz, 30/30Hz
- Video standard
 - NTSC/PAL
 - FFC should be executed afterward
- Dynamic DDE
 - digital-data-enhancement algorithm which can be used to enhance image details and/or suppress fixed pattern noise
 - DDE parameters are computed automatically based on scene contents. DDE index (which supplants the spatial-threshold parameter used in the manual algorithm) is the only controlling parameter and ranges from 0 to 63, with higher values representing higher degrees of detail enhancement.
 - If no enhancement is desired, the value should be set to 17.
 - Values less than 17 soften the image and filter fixed pattern noise.
 - Values greater than 17 sharpen the details in the image.

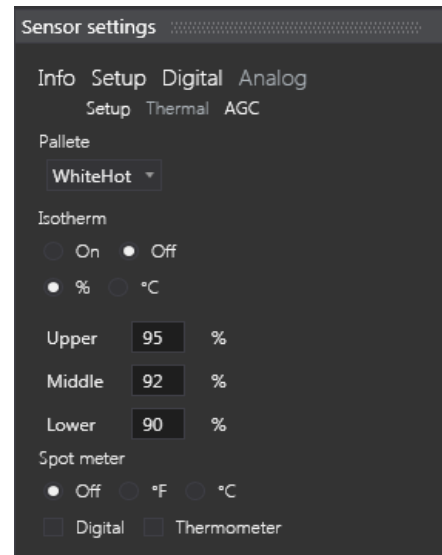

- Affects digital output

- **Thermal**

- **Palette**

- Changes color palette
- Colors depends on isotherm setup

- **Isotherm**


- Portions of the scene exceeding a user-selectable threshold are mapped to different portions of the palette.
- Three user-specified thresholds are applicable to the isotherm mode.
- Specified either in degrees Celsius(°C) or in percentage(%) of full-scale
- **Upper** threshold above which pixels will be mapped to the top shades of the palette (224 to 255).
- **Middle** threshold pixels with value between the middle and upper threshold are mapped to shades 176 to 223.
- **Lower** threshold pixels with value between the lower and middle threshold are mapped to shades 128 to 175.

- **Spot meter**


- Temperature-measurement capability via a spot meter in the central 4x4 area.
- Accuracy of the spot meter is ± 20 °C in high-gain state and the greater of $\pm 20\%$ or ± 20 C in low-gain state.
- Can be shown as Digital numeric value and/or thermometer-style gauge.
- The numeric indicator and gauge can be shown in degrees Celsius [°C] or Fahrenheit [°F].

- **AGC**


- The WIC core provides multiple AGC algorithms used to transform 14-bit data to 8-bit.

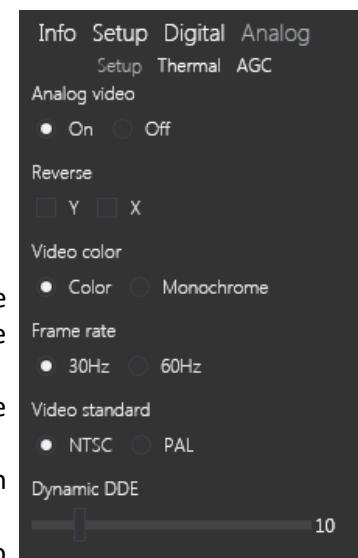

Analog video - Setup




- See chapter 3.3.2.6 in Tau2 Product Specification
- Not available in isotherm mode
- **Algorithm**
 - Automatic
 - Automatic parameters adjustable
 - Once Bright
 - Contrast adjustable
 - Auto Bright
 - Contrast, Brightness Bias and AGC Filter adjustable
 - Manual
 - Contrast and Brightness adjustable
 - Linear Histogram
 - ITT Mean, Max Gain and AGC Filter adjustable
- **Contrast**
- **Brightness**
- **Brightness bias**
 - Once Bright mode only
- **Automatic parameters**
 - Plateau

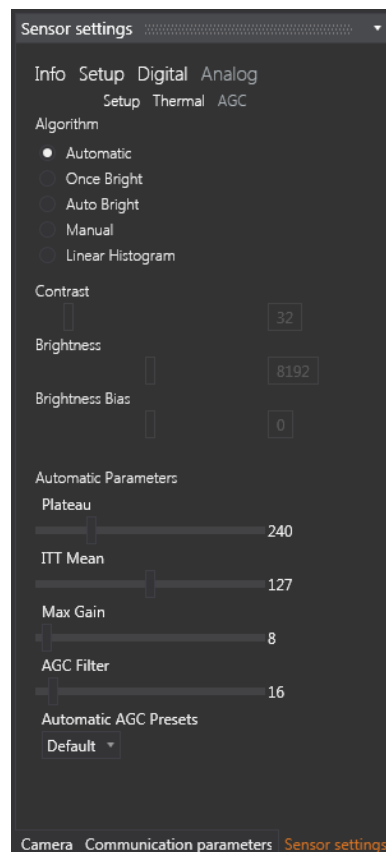

Analog video - AGC


- When plateau value is set high, the algorithm approaches the behavior of classic histogram equalization – gray shades are distributed proportionally to the cumulative histogram, and more gray shades will be devoted to large areas of similar temperature in a given scene. On the other hand, when plateau value is set low, the algorithm behaves more like a linear AGC algorithm – there is little “compression” in the resulting 8-bit histogram.
- ITT Mean
 - The ITT Midpoint can be used to shift the 8-bit histogram darker or brighter. The nominal value is 128. A lower value causes a darker image. A darker image can help improve the perceived contrast, but it is important to note that more of the displayed image may be railed (8bit value = 0 or 255) by moving the midpoint away from 128.
- Max Gain
 - For scenes with high dynamic range (that is, wide 14-bit histogram), the maximum gain parameter has little effect. For a very bland scene, on the other hand, it can significantly affect the contrast of the resulting image.
- AGC Filter
 - The IIR filter is used to adjust how quickly the AGC algorithm reacts to a change in scene or parameter value.
- Automatic AGC Presets
 - These presets apply only to the Automatic AGC algorithm and set predefined values that are stored in the GUI for Plateau Value, ITT Mean, and Max Gain. These presets have been empirically determined for different scenarios.



Frequently asked question – networking settings

Network configuration


Once you have the hardware and software installed correctly, you must configure the network as well. GigE Vision cameras can obtain an IP address from a DHCP server or select one for itself using Link Local Addressing (LLA). If you connect the camera to a Gigabit Ethernet network with a DHCP server, the camera is automatically detected. If the camera is connected directly to the computer (using either a regular or cross-over cable), maybe you will need to wait about a minute for the camera to timeout on the DHCP request and use LLA. The Windows operating system may display a warning that the network card has only limited operation. You can ignore this warning.

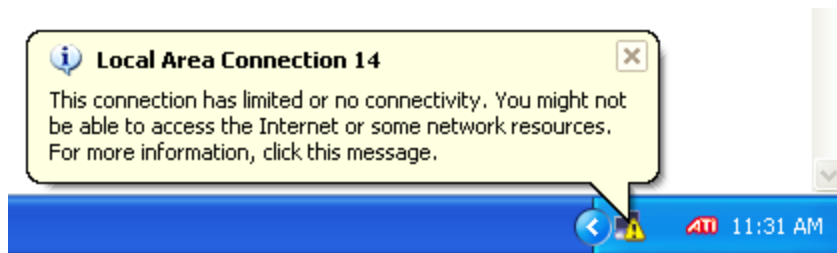

Windows displays a warning when camera is directly connected

Jumbo packets

Typically, network drivers will split any data larger than 1500 bytes into multiple packets. However, the GigE Vision standard allows packet sizes of up to 9014 bytes. These large packets, also known as Jumbo packets, allow the camera to more efficiently transfer data across the network. You can enable Jumbo packets in many network cards from the Device Manager by right-clicking the network card and selecting Properties.

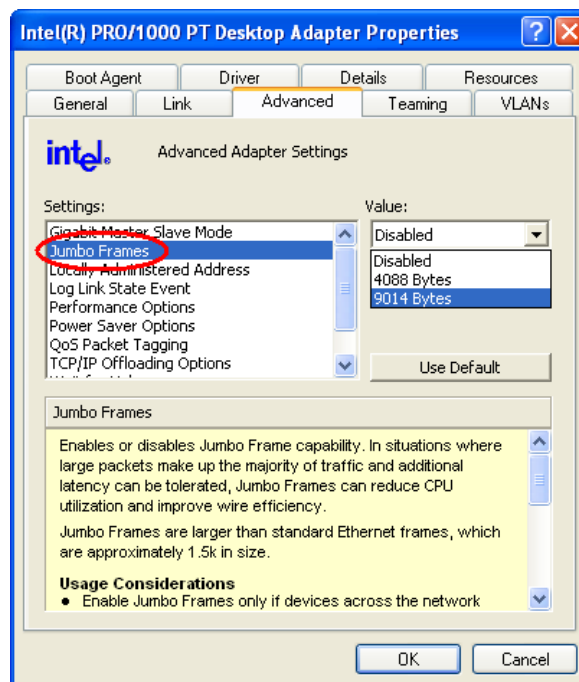

Setting Jumbo packets on the Intel PRO/1000 Adapter



Network Firewalls

When a camera acquires an image, it immediately streams those data packets to the host. However, network firewalls will not allow the packets to reach their destination because firewalls typically block uninitiated incoming traffic. Therefore, you will need to disable your firewall in order to acquire images from a GigE Vision camera. You can disable the Windows Firewall from the Control Panel (Start>>Control Panel). However, if you have a network card with an Intel PRO/1000 chipset and you are using the Filter driver that comes with CorePlayer, it is most likely that you will not need to disable the firewall.


Notification and difficulties

Jumbo Packets: If your NIC device, or any intermediate network hardware (switch, router, etc.), does not support Jumbo packets, you will be limited to a packet size of less than 1500 Bytes. The GigE Vision packet size cannot be greater than the maximum packet size allowed by the NIC.

Firewalls: Many corporate networks employ firewalls for network security. However, you cannot acquire from GigE Vision cameras with the firewall enabled, unless you use the High Performance driver. If your company's network policy does not allow you to disable the firewall or use a different network driver, you will need to use a system dedicated to image acquisition, that is not part of the corporate network.



Corrupt XML files: As with any new standard, camera manufacturing companies routinely release new revisions of their firmware. If you get an error stating that the XML file is corrupt, please contact the camera manufacturer for the latest revision of their firmware.

Interoperability: While GenICam gives camera manufacturers the flexibility of creating a custom attribute set, it makes it difficult to easily switch between cameras without modifying your code. While the GenICam Standard Features Naming Convention alleviates this problem to a certain extent, most of the conventions are only recommendations and not requirements. So a camera manufacturer may deviate from the convention, in which case, the application software will need to be modified to be interoperable with other





Contacts

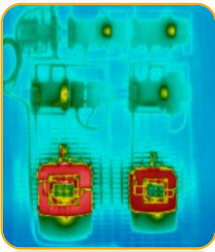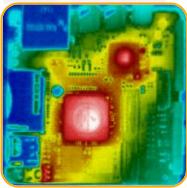

Sales Department

Phone: +420 725 955 464

Email: info@workswell.cz


Web: www.workswell.cz

Technical Department

Phone: +420 739 428 433

Email: info@workswell.cz

Web: www.workswell.cz

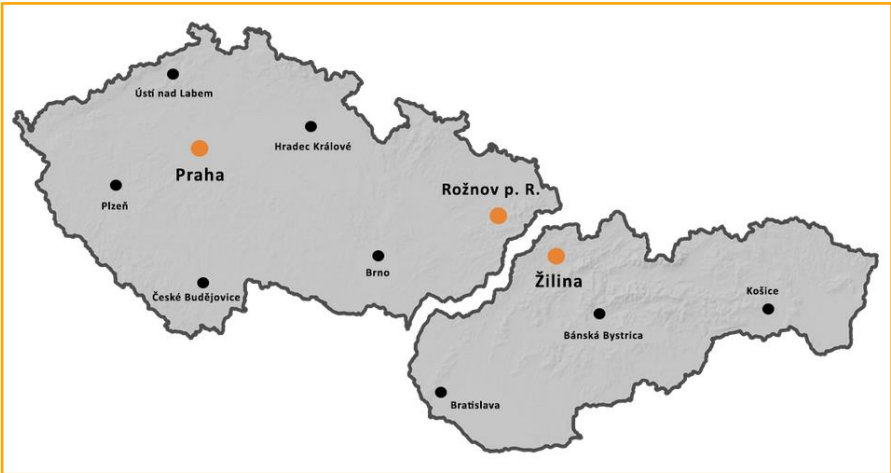

Headquarters

Libocká 653/51b
161 00, Prague 6
Czech Republic

Offices

Mezirická 100
756 61, Rožnov p. R.
Czech Republic

Univerzitní 1
010 08, Žilina
Slovakia

